
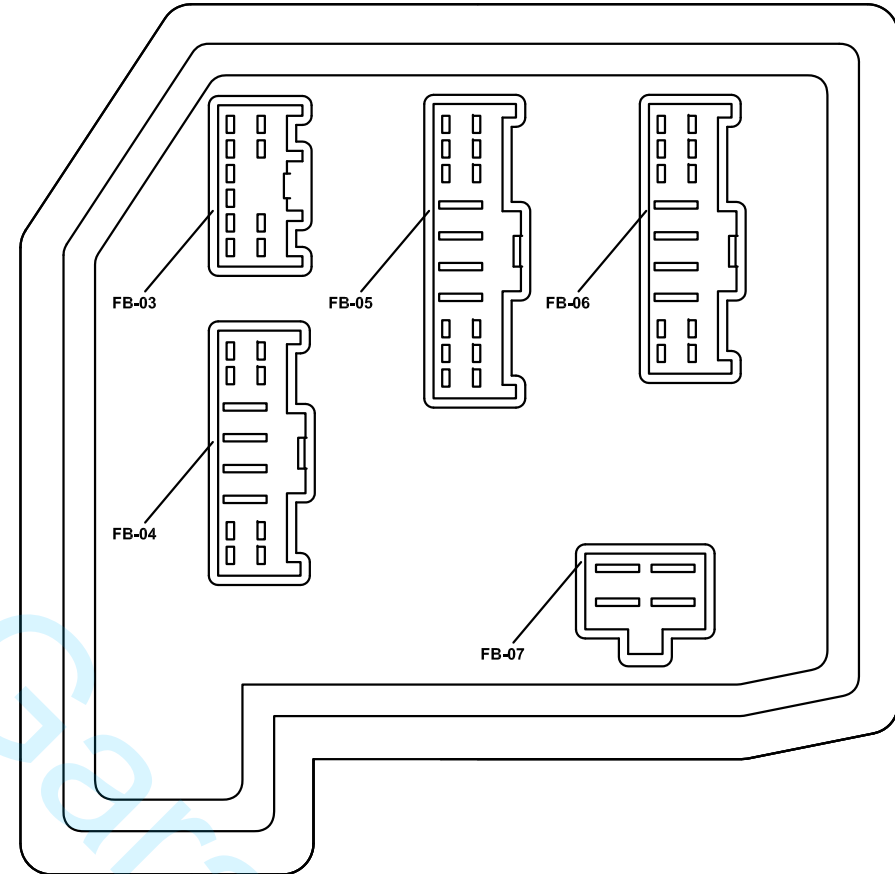


Fuse box (1.8T)

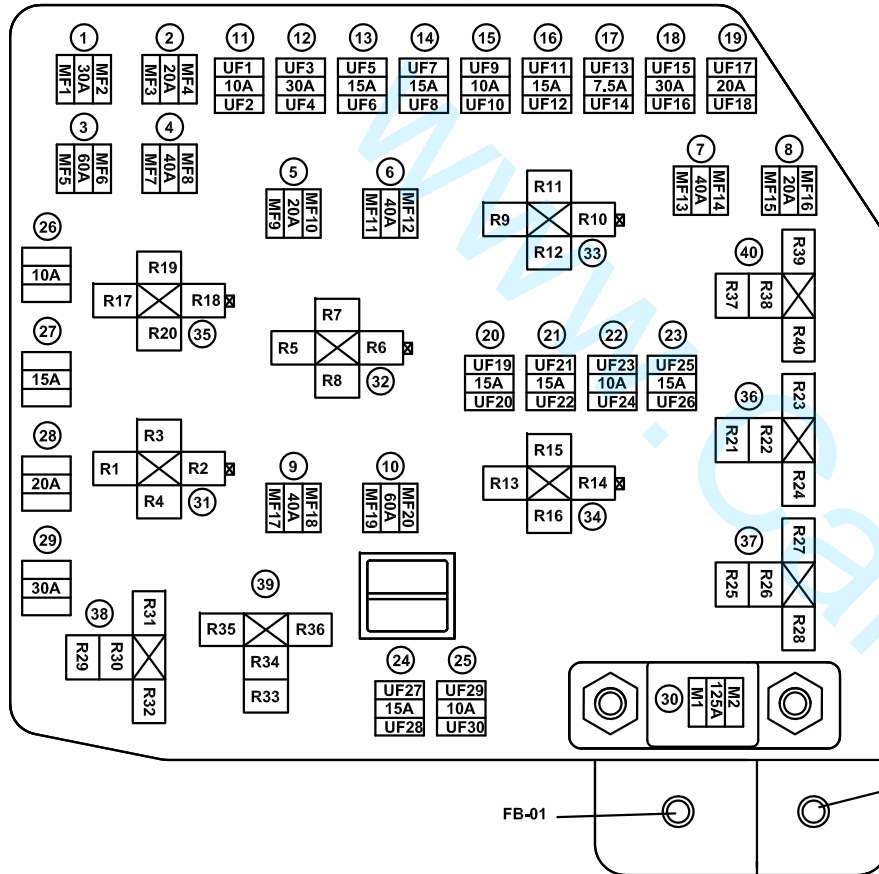

No.	Fuse name	No.	Fuse name	No.	Fuse name	No.	Relay name
①	Blower	⑪	PEPS 1	⑲	Headlamp low-beam	⑳	Fan
②	AT(TCU B+)	⑫	Power seat(main)	⑳	Front fog lamp	㉑	Start
③	BTN	⑬	PEPS 2	㉒	Position lamp	㉒	Main relay
④	*	⑭	EBS	㉓	HORN	㉓	Headlamp
⑤	Vacuum pump	⑮	LCM	㉔	AC 1	㉔	Vacuum pump
⑥	ABS 2	⑯	Hazard warning lamp	㉕	*	㉕	Front fog lamp
⑦	Main relay	⑰	Brake lamp	㉖	*	㉖	Position lamp
⑧	Fuel pump	⑱	Defrost	㉗	*	㉗	Compressor
⑨	Fan	⑲	ABS 1	㉘	*	㉘	Horn
⑩	IG KEY	㉑	Headlamp high-beam	㉙	Main fuse	㉙	Fuel pump