

# Automatic Transaxle (A5SR1/2)

**GENERAL**

AUTOMATIC TRANSAXLE

**AUTOMATIC TRANSAXLE SYSTEM**

[www.CarGarage.ir](http://www.CarGarage.ir)

**GENERAL****SPECIFICATION** EFE42B17

Type		A5SR1	A5SR2
Driving system		2WD/4WD	
T/CON	Type	3 elements, 1 stage, 2 phase	
	Identification inscription [Nominal diameter (mm)]	8 (Φ250)	8 (Φ260)
	Stall torque ratio	1.76	1.84
Transmission	Manipulating system		Remote control flow transmission (Cable method)
	Shift position	P	Fix output axle (Engine start allowed)
		R	Reverse
		N	Neutral (Engine start allowed)
		D	1 2 3 4 5
	Gear ratio	1st	3.827
		2nd	2.368
		3rd	1.520
		4th	1.000
		5th	0.834
		Reverse	2.613
		Final gear ratio	3.333
	Control method		Electronic control
	Function	Lock-up control	Equipped
		Operating fluid pressure control	Equipped
		Real time feedback transmission control	Equipped
		Transmission pattern auto change control	Equipped
		Self-diagnosis control	Equipped
		Fail-safe function	Equipped
	Sports mode function		Equipped
	Speedometer gear teeth (drive/driven)		6/14
	Oil pump	Type	Trochoid oil pump
		Driving system	Engine drive
ATF oil	The recommended	APOLLOIL ATF RED-1	
	Quantity	10 (10.57 US qt, 8.8 Imp.qt)	

# AUTOMATIC TRANSAXLE SYSTEM

## DESCRIPTION E6A4E767

We have employed A5SR1/ 2, the 5th speed automatic transmission with full range electronic control and sports mode that provides smooth driving with lesser transmission shock as well as pleasant driving from manual transmission.

A/t electronic control system is the system where an optimized transmission has been realized from taking a grasp of driving status, A/T internal status at A/T control unit that has integrated with control valve assembly.

This paper describes apparatus cross-sectional view, major controls and control circuit diagram, major components and their functions, and etc.

### A5SR1/ 2


Item	Contents
Improved transmission feel	<ul style="list-style-type: none"> <li>- Integrated control over engine and A/T (CAN communication control) system employed</li> <li>- Turbine sensor 1.2 employed</li> <li>- Real time feedback control at all phases applied</li> </ul>
Improved driving	<ul style="list-style-type: none"> <li>- Sports mode function employed</li> <li>- Snow mode function employed (2WD applied)</li> <li>- Gear ratio extension</li> </ul>
Improved fuel consumption	<ul style="list-style-type: none"> <li>- Slip lock-up employed</li> <li>- Full range lock-up employed (Larger lock-up zone)</li> <li>- E-flow torque converter employed (Improved driving efficiency)</li> <li>- Small transmission power train employed</li> </ul>
Improved safety	<ul style="list-style-type: none"> <li>- Transmission lock apparatus (P range maintenance apparatus affixed) employed</li> </ul>
Improved maintenance	<ul style="list-style-type: none"> <li>- Electronic system diagnosis tester (hi-scan) counterpart</li> </ul>

**MAJOR COMPONENTS AND THEIR FUNCTIONS**

Part name	Acronyms	Function
Front brake	F/B	Fastens the front sun gear
Input clutch	I/ C	Engages the input shaft, with the middle annulus gear and the front annulus gear
Direct clutch	D/C	Engages the rear planetary carrier with a rear sun gear
High & low reverse clutch	H&LR/C	Engages the middle sun gear with the rear sun gear
Reverse brake	R/B	Fastens the rear planetary carrier
Forward brake	FWD/B	Fastens the middle sun gear
Low cost brake	LC/B	Fastens the middle sun gear
1st one-way clutch	1st OWC	Allows the rear sun gear to turn freely forward relative to the mid sun gear but fastens it for reverse rotation
Forward one-way clutch	FWD OWC	Allows the mid sun gear to turn freely in the forward direction but fastens it for reverse rotation
3rd one-way clutch	3rd OWC	Allows the front sun gear to turn freely in the forward direction but fastens it for reverse rotation


**AUTOMATIC TRANSAXLE SYSTEM**

**COMPONENTS**

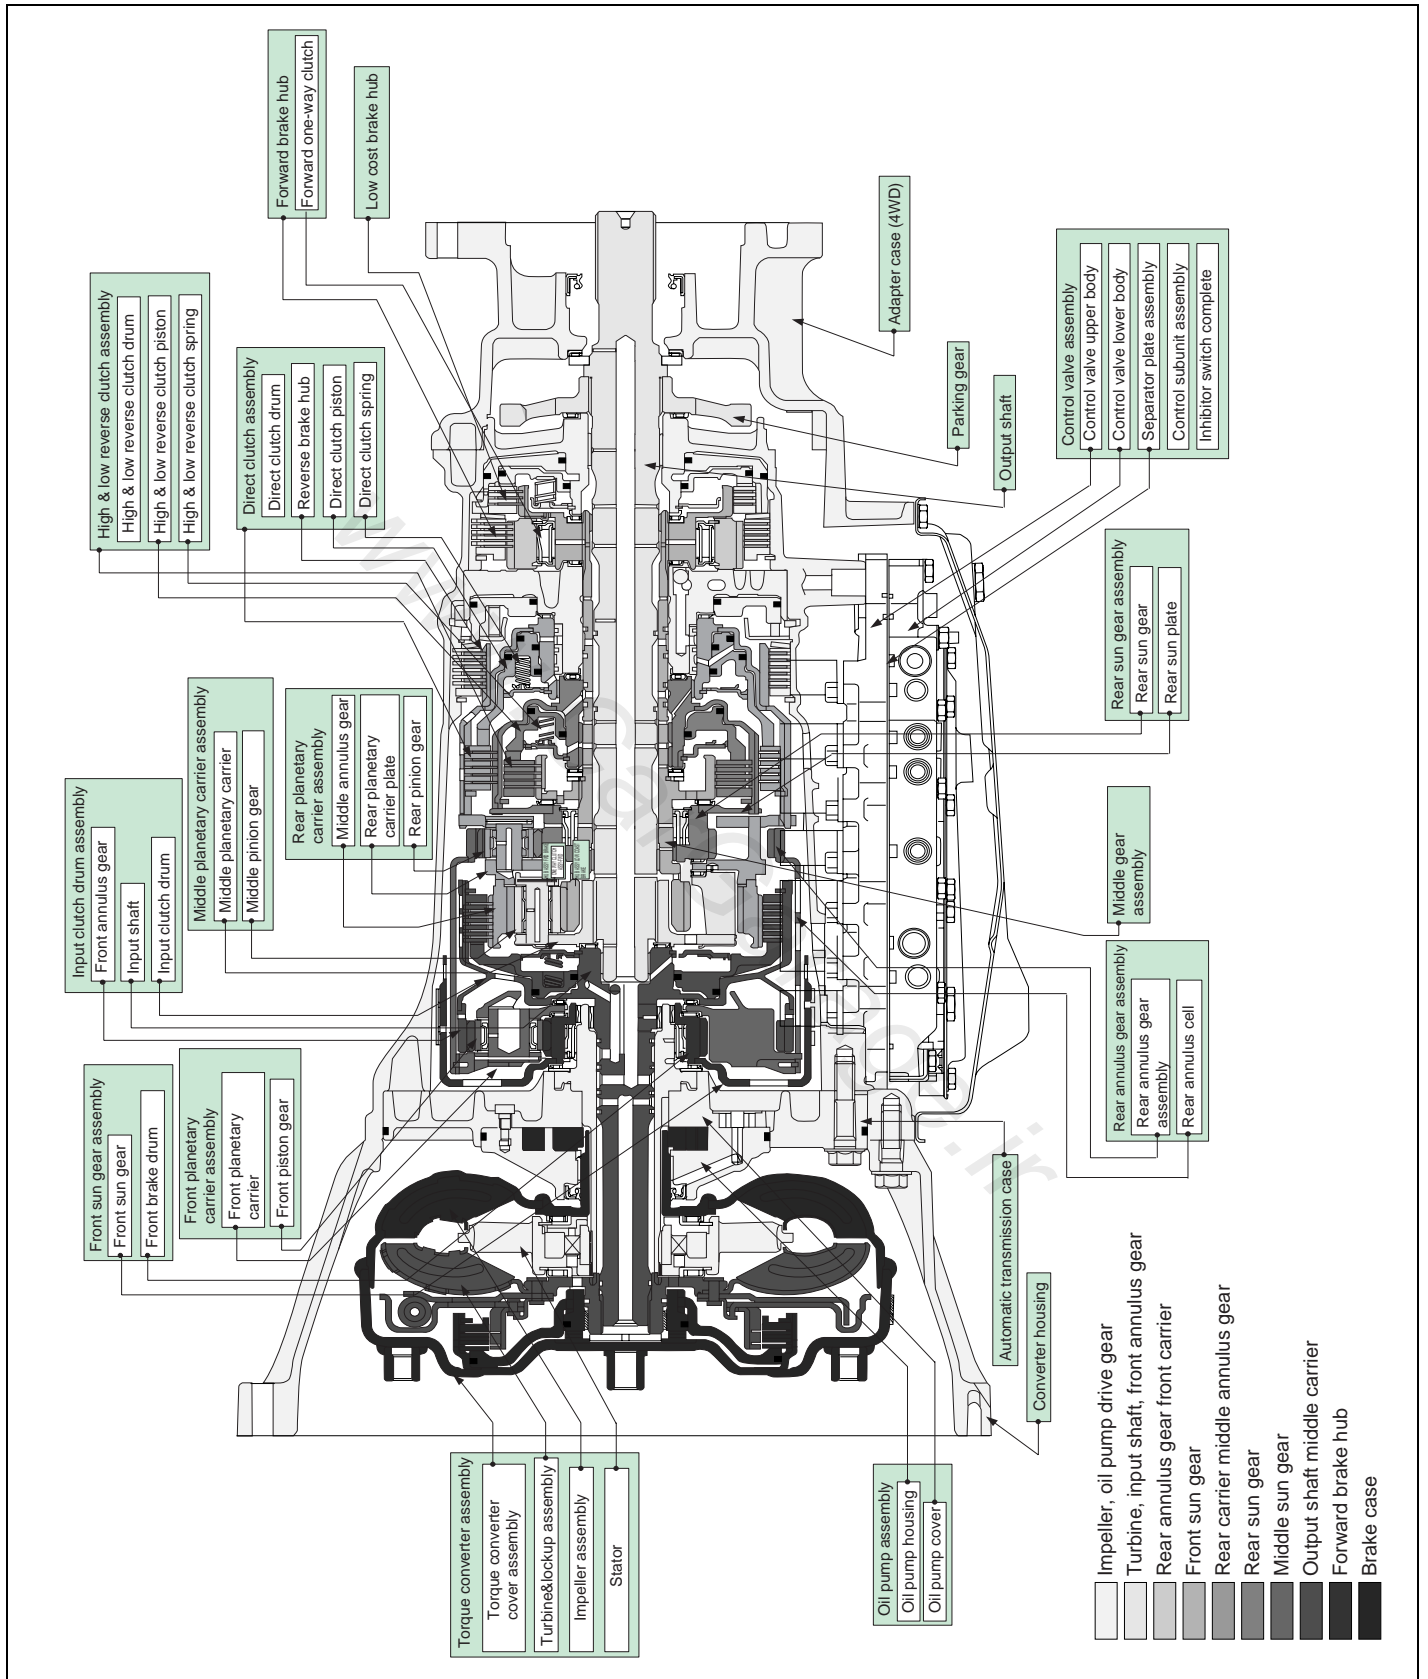

OPERATION

EB4B997D

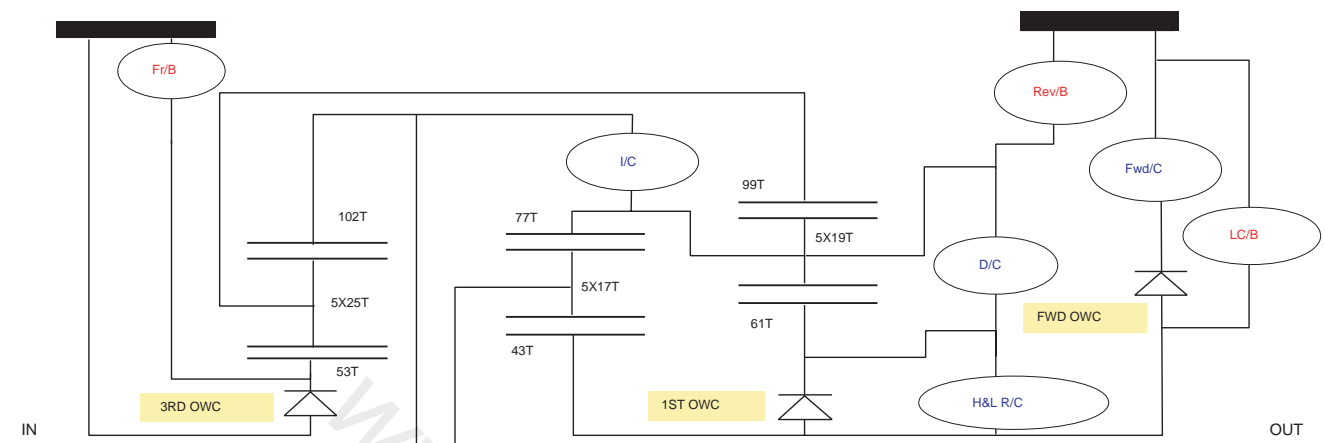


Shift Position	I/C	H&L R/C	D/C	Rev/B	Fr/B	LC/B	Fwd/B	Ratio1 OWC	Forward OWC	Ratio 2 OWC	Remarks
P		△			△						Parking position
R		0		0	0			⊙		⊙	Reverse position
N		△			△	△'''					Neutral position
D	1st	△"			△		0	⊙	⊙	⊙	Automatic shift 1↔2↔3 ↔4↔5
	2nd		0		△		0		⊙	⊙	
	3rd		0	0			△	◇		⊙	
	4th	0	0	0			△	◇			
	5th	0	0			0	△	◇		◇	
5M	5th	0	0		0		△	◇	◇	Fix to the 5th speed	
4M	4th	0	0	0			△	◇		Fix to the 4th speed	
3M	3rd		0	0	0		△	◇		⊙	Fix to the 3rd speed
2M	2nd			0	0	0	0		⊙	⊙	Fix to the 2nd speed
1M	1st		0		0	0	0	⊙	⊙	⊙	Fix to the 1st speed

0 : Operates.  
 ⊙ : Operates during progressive acceleration.  
 ◇ : Operates and effects power transmission while coasting.  
 △ : Line pressure is applied but does not affect power transmission.  
 △" : Operates under conditions shown in the high & low reverse clutch operating condition.  
 △''' : Operates under conditions shown in the LC/B operating condition.  
 Note) Delay control is applied during D(4,3,2,1) ⇒ N shift.

**AUTOMATIC TRANSAXLE SYSTEM**

**OPERATING PRINCIPLES OF EACH RANGE**

1. N range  
 Since the forward and reverse brakes are released, driving force of input shaft is not transmitted to output shaft.
2. P range
  - Since the forward and reverse brakes are released, as those in the N range, driving force of input shaft is not transmitted to output shaft.
  - Parking pawl that is linked with select lever parking gear meshes with and fastens output shaft mechanically.
3. D, M2, M3, M4, M5 range 1st speed
  - Fastens the front brake.
  - The front brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
  - The 1st one-way clutch regulates reverse rotation of the rear sun gear.
  - The 3rd one-way clutch regulates reverse rotation of the front sun gear.

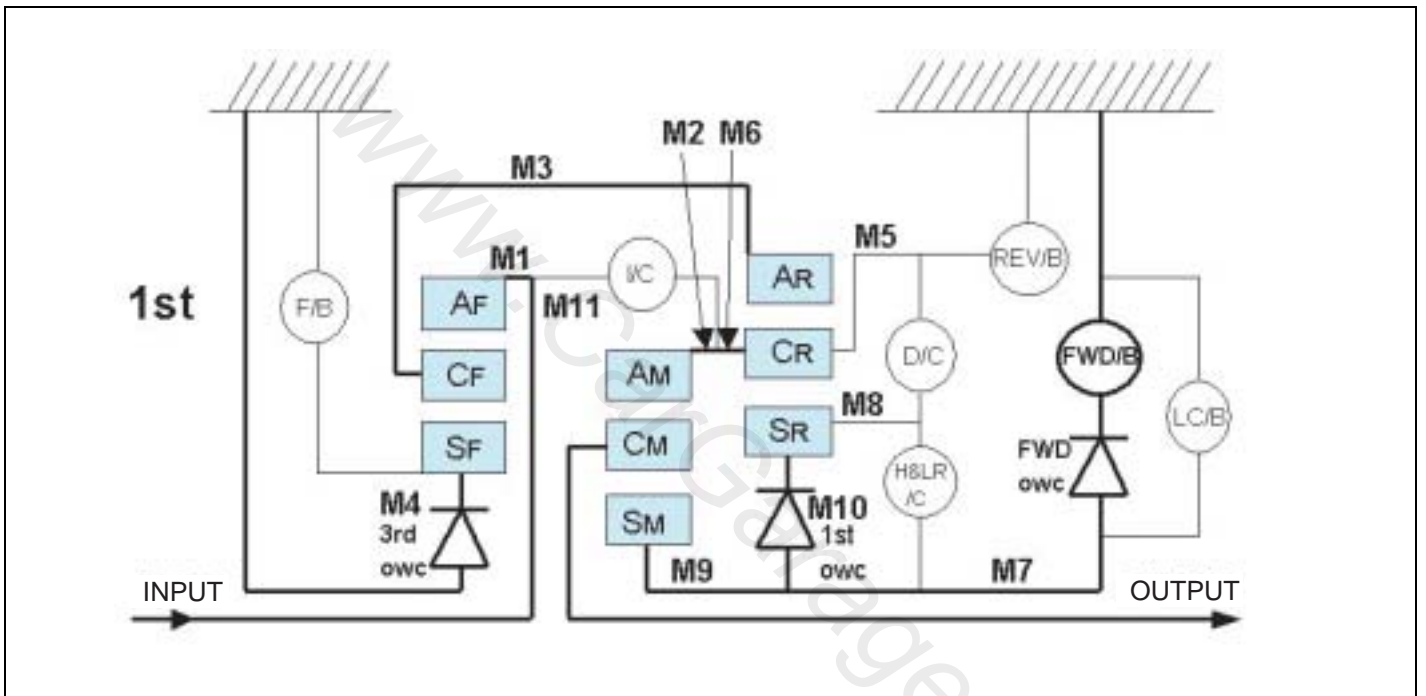

LLAE002A

- Since the middle sun gear rotates forward during deceleration, the forward one-way clutch runs idle and engine brake is not activated.


**\* POWER FLOW**

Input shaft Front internal gear Front carrier Rear internal gear Rear carrier Middle internal gear Middle carrier Output shaft

AT -8

AUTOMATIC TRANSAXLE (A5SR1/2)

4. D, M3, M4, M5 range ratio 2nd
- Fasten the front brake.
  - The front brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
  - The 3rd one-way clutch regulates reverse rotation of the front sun gear.

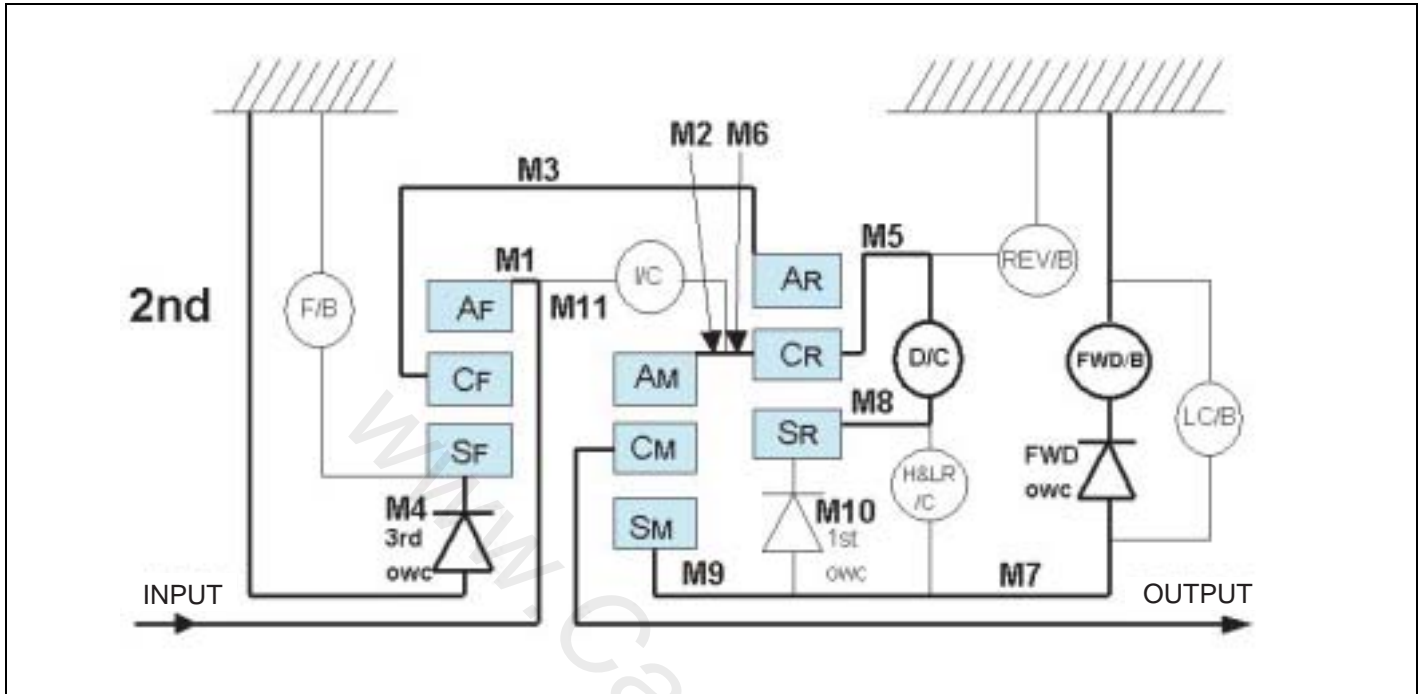

LLAE002B

The direct clutch is coupled and the rear carrier and the rear sun gear are connected.

\* POWER FLOW


Input shaft Front internal gear Front carrier Rear internal gear Rear carrier Rear carrier Middle internal gear Middle carrier Output shaft



**AUTOMATIC TRANSAXLE SYSTEM**

- 5. D, M3, M4, M5 range 3rd speed
  - Fastens the front brake.

- The 3rd one-way clutch regulates reverse rotation of the front sun gear.

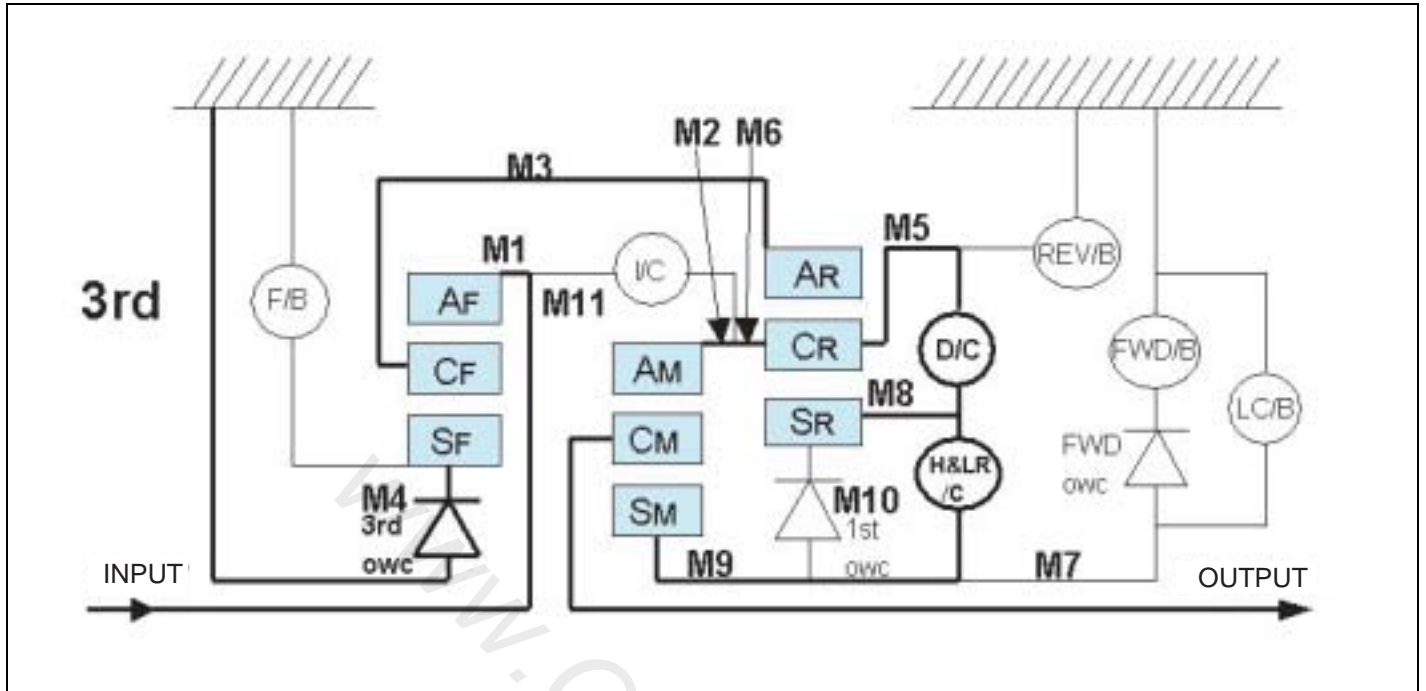


LLAE002C

- The high & low reverse clutch is coupled and the middle and rear sun gears are connected.

**\* POWER FLOW**

Input shaft Front internal gear Front carrier Rear internal gear Rear carrier Rear carrier Middle internal gear Middle carrier Output shaft

6. D, M4, M5 range 4th speed
- The front brake is released and sun gear turns freely forward.
  - The input clutch is coupled and the front and middle internal gears are connected.

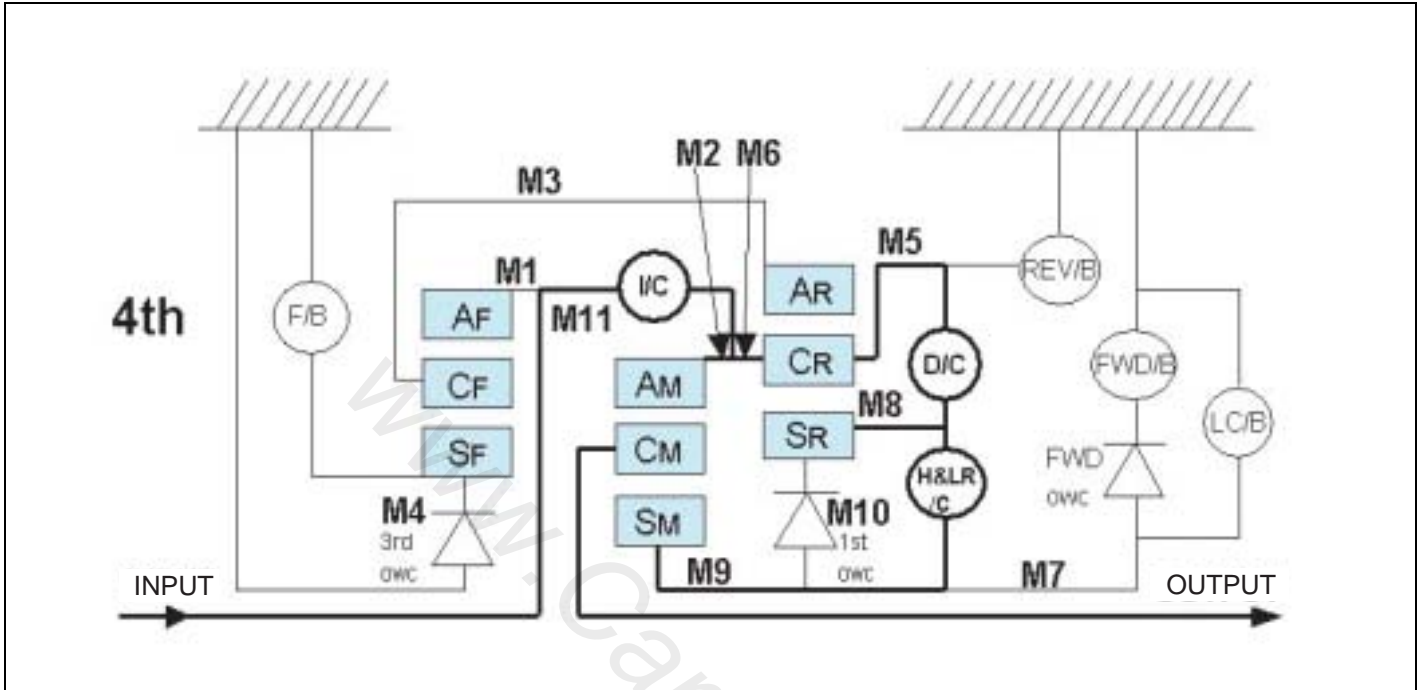

LLAE002D


- Driving force is conveyed to the front internal gear, the middle internal gear, and the rear carrier and the three planetary gears rotate forward as a unit.

**\* POWER FLOW**

Input shaft Front internal gear Front carrier Rear internal gear Rear carrier Middle internal carrier Middle carrier Output shaft

**AUTOMATIC TRANSAXLE SYSTEM**

- 7. D, M5 range 5th speed
  - The front brake fastens the front sun gear.
  - The direct clutch is released and the rear carrier and rear sun gear are disconnected.

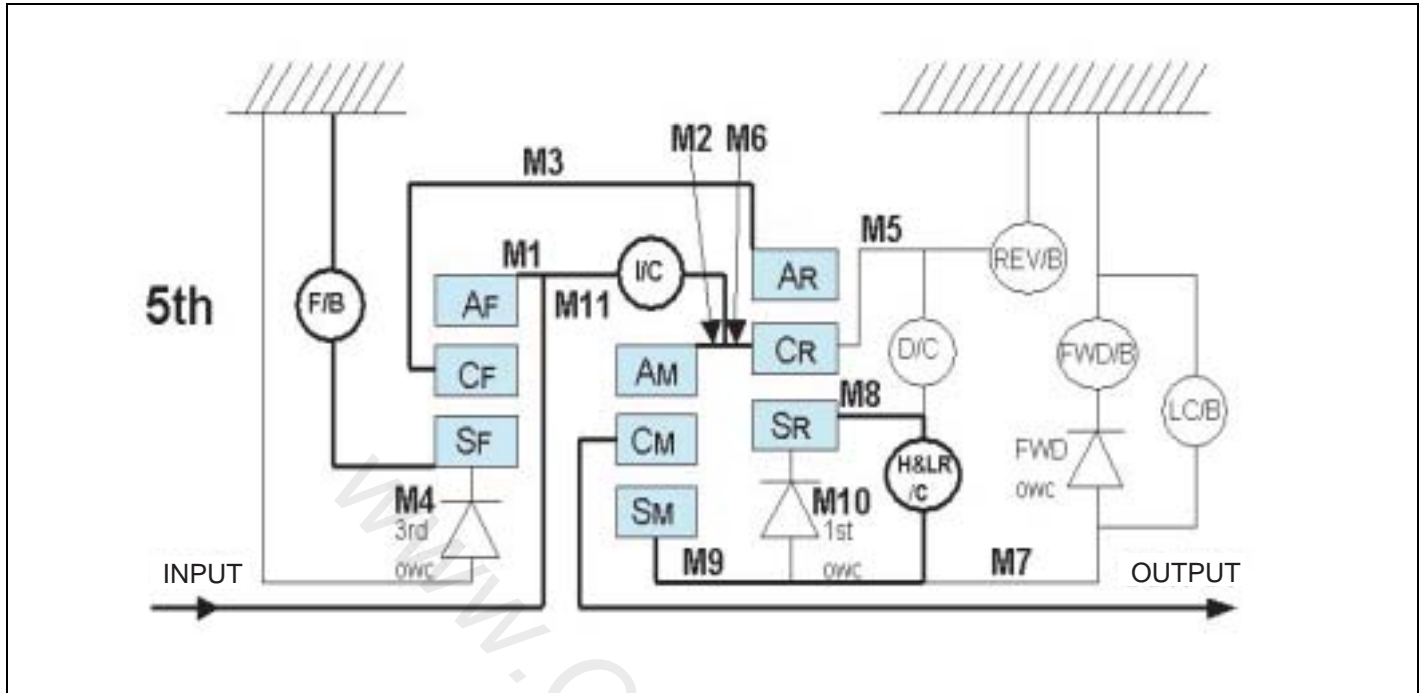


LLAE002E

**\* POWER FLOW**

Input shaft Front internal Front carrier Rear  
 internal input shaft Middle internal Rear  
 carrier Rear sun gear Middle sun carrier Middle  
 carrier Output shaft

8. R range

- The front brake fastens the front sun gear.
- The high & low reverse clutch is coupled and the middle and rear sun gears are connected.
- The reverse brake fastens the rear carrier.

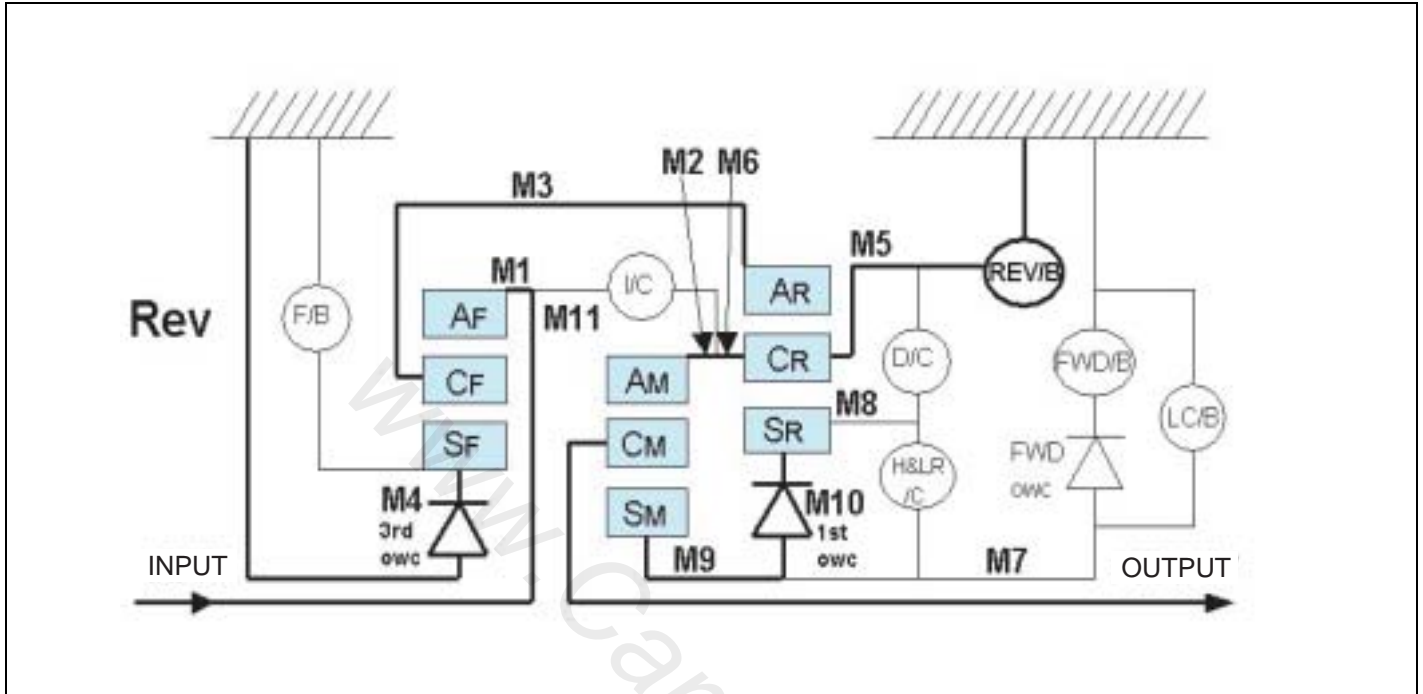


LLAE002F

\* POWER FLOW

Input shaft Front internal Front carrier Rear internal  
 Rear sun gear Middle sun gear Middle carrier  
 Output shaft

**AUTOMATIC TRANSAXLE SYSTEM**

**CONTROL SYSTEM DIAGRAM**

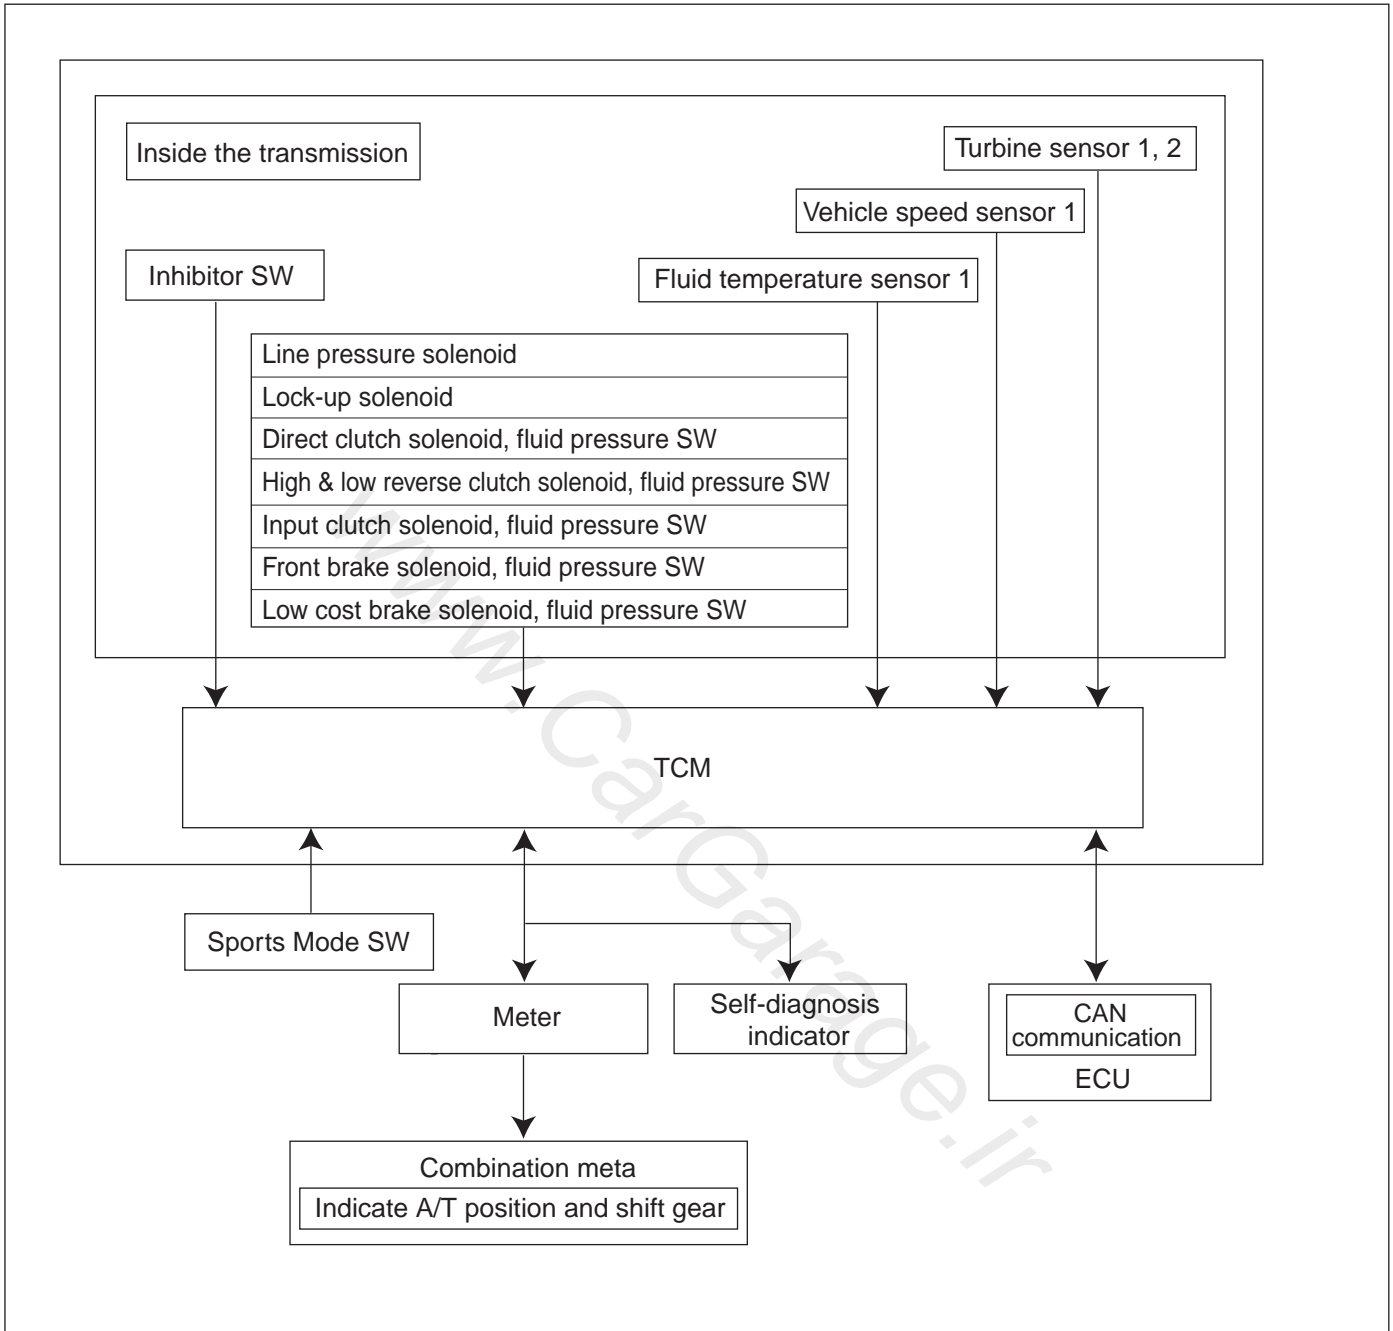


**MAIN COMMUNICATION SIGNAL**

Input to ECM (CAN)	Output to ECM(CAN)	Input from external sys.	Output to external sys.
-	-	A/T driving mode SW	Self-diagnosis indicator
Engine torque signal	Output revolution signal	Sports mode SW	Range signal (P, R, N, D)
Engine revolution signal	Turbine sensor signal	Up SW	Range signal
-	Torque reduction request signal	Down SW	Reverse lamp signal
Accelerator opening signal		Stop lamp SW	N position signal
Power		4x4 Low signal	

**LINE PRESSURE CONTROL**

- If the engine control unit sends the input torque signal equivalent to the engine driving force to the A/T control unit (TCM), the A/T control unit (TCM) controls line pressure solenoid.
- This line pressure solenoid controls the pressure regulator valve as the signal pressure and adjusts the pressure of the operating oil discharged from the oil pump to the line pressure most appropriate to the driving plate.

**LINE PRESSURE SYSTEM DIAGRAM**

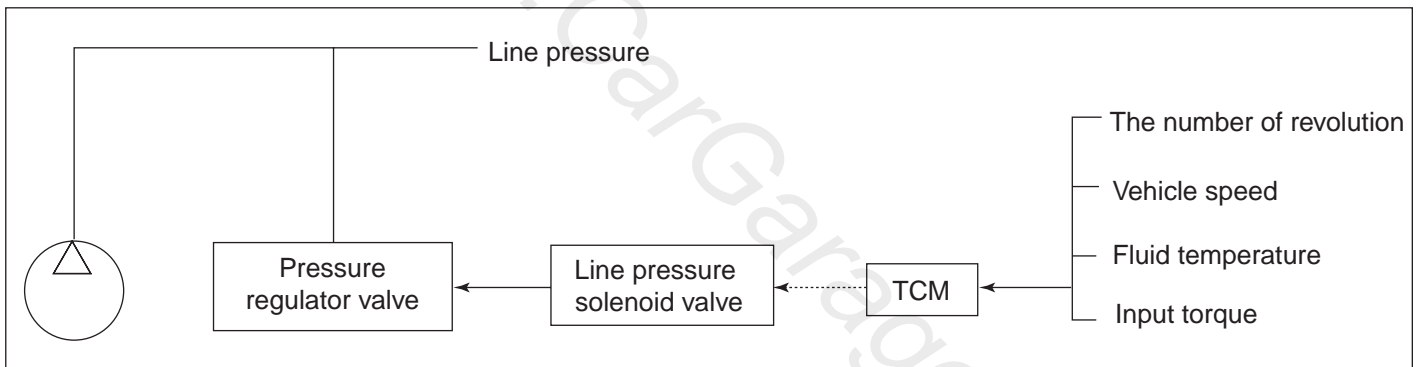


LLAE002H

**LINE PRESSURE CONTROL BASED ON LINE PRESSURE CHARACTERISTIC PATTERN OF A/T CONTROL UNIT (TCM)**

- A/T control unit (TCM) has stored in memory a number of patterns for the optimum line pressure characteristics according to driving conditions.
- In order to obtain the most appropriate line pressure characteristic to meet the current driving state, the TCM controls the line pressure solenoid current valve and thus controls the line pressure.
  - Normal line pressure control.  
Each clutch is adjusted to the necessary pressure to match the engine drive force.


Normal time line pressure characteristic

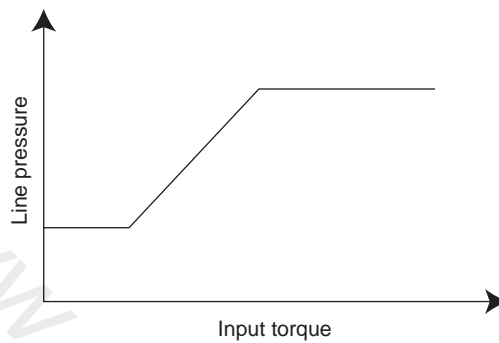

LLAE002I


- Back-up control (Engine brake)  
Line pressure according to speed is set during shift down by select operation while driving.

Line pressure characteristic for backup control

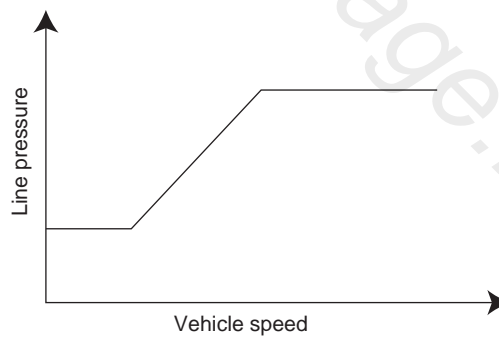


LLAE002J

- During shift change  
Set to line pressure that is necessary for shift change. Therefore, line pressure characteristic is set according to input torque and shift types.

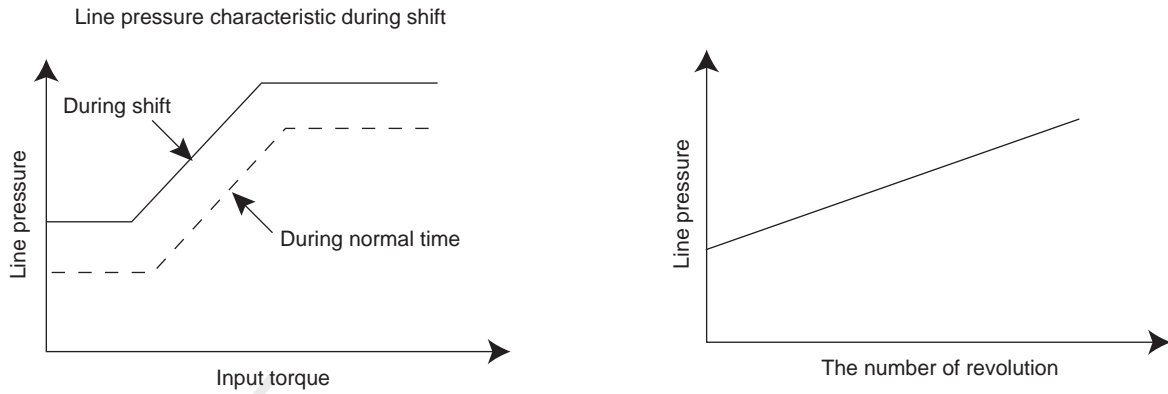

LLAE002K

- At low fluid temperature  
When the A/T fluid temperature drops below the prescribed temperature, in order to speed up the action of each friction element, the line pressure is set higher than the normal line pressure characteristic.

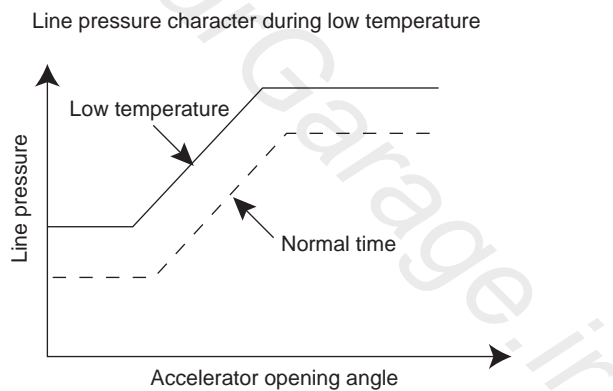


LLAE002L



**SHIFT CONTROL**

- The clutch pressure control solenoid is controlled by the signals from the switches and sensors. Thus the clutch pressure is adjusted to be appropriate to the engine load state and vehicle driving state. It becomes possible to finely control the clutch hydraulic pressure with high precision and a smoother shift change characteristic is attained.

**SHIFT CONTROL SYSTEM DIAGRAM**

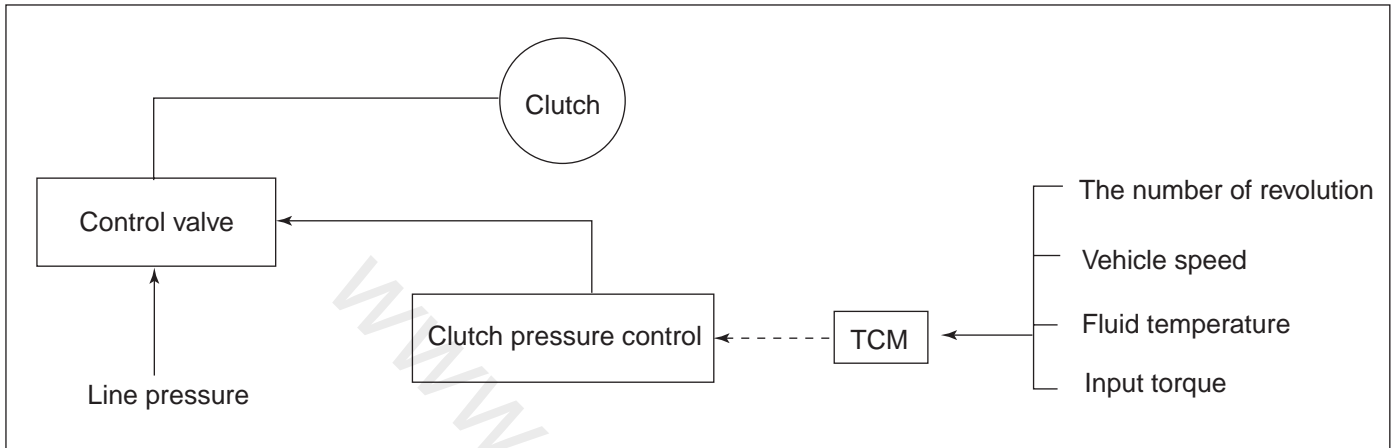

LLAE002M

**Shift description**

Controls clutches with optimum timing and fluid pressure in response to engine speed, engine torque information, and etc.

**LOCK-UP CONTROL**

Lock-up control is to enhance delivery efficiency by preventing the torque converter from slipping, engaging the lock-up piston into the torque converter.

It operates lock-up solenoid control in response to a signal from A/T control unit (TCM) and lock-up control valve behavior control, engages or releases the lock up piston of the torque converter.

**LOCK-UP OPERATING CONDITION TABLE**


Select lever	D range			Sports mode	
	5	4	3	5	4
Gear position	5	4	3	5	4
Lock-up	○	-	-	○	○
Slip lock-up	○	○	-	-	-

LLAE002N

**Lock-up control valve control**

- In the lock-up control valve, there is operating fluid pressure circuit linked into the lock-up piston and lock-up solenoid operates valve shift in response to a signal from the A/T control unit.
- Operating fluid pressure circuit that is applied to the lock-up piston chamber is controlled with the release or apply sides.

## LOCK-UP CONTROL SYSTEM DIAGRAM

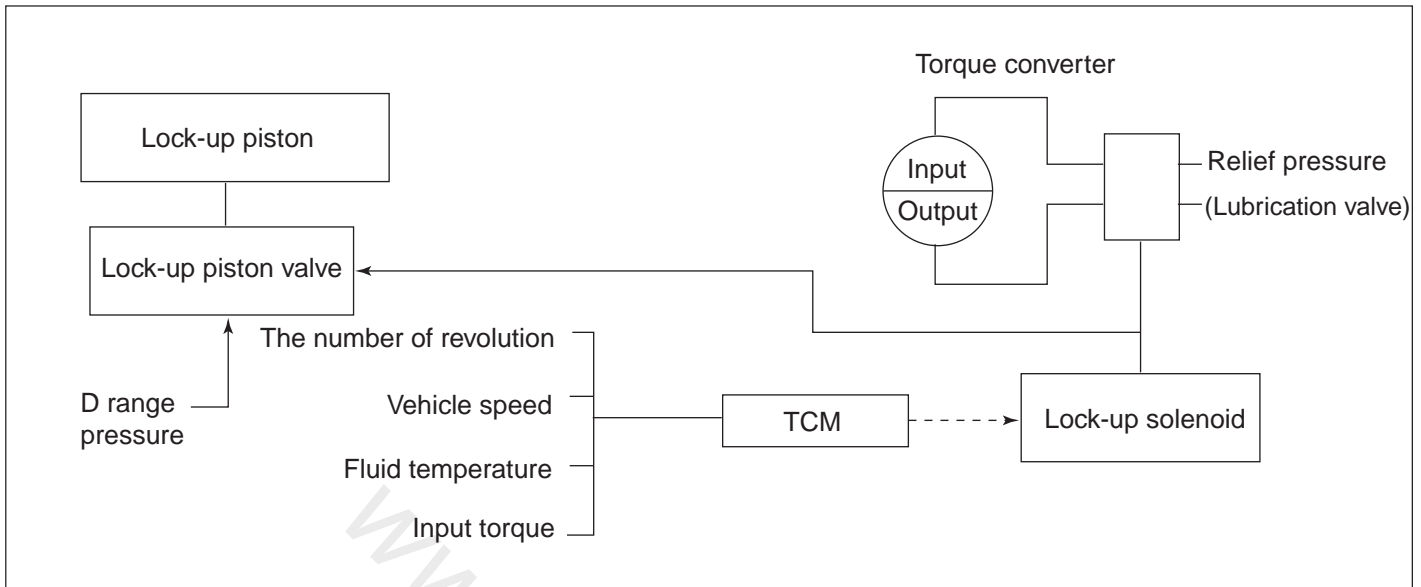

LLAE0020

## Lock-up released

- In the lock-up control valve, there is operating fluid pressure circuit connected into the lock-up piston and lock-up solenoid operates valve shift in response to a signal from the A/T control unit. Therefore, the lock-up piston is not coupled.

## Lock-up applied

- During the lock-up applied status, lock-up apply pressure is generated having the lock-up control valve to L/U by the lock-up solenoid. Therefore, press the lock-up piston to be coupled.

## Smooth lock-up control

- A/T control unit (TCM) controls current value that is output to the lock-up solenoid when shifting lock-up applied state from lock-up released state. Therefore the lock-up clutch is temporarily set to half-clutched state when shifting the lock-up applied state to reduce the shock.

## Half-clutched state

- Changes current value that is output to the lock-up solenoid from A/T control unit (TCM) to gradually increase lock-up solenoid pressure. In this way, the lock up apply pressure gradually rises and while the lock-up piston is put into half-clutched status, the lock-up piston operating pressure is increased and the coupling is completed smoothly.


## Slip lock-up control

- In the slip region, A/T control unit controls current value of the lock-up solenoid to half-clutched status. Therefore lock-up operates from low speed absorbing torque fluctuation of engine. Thereby fuel consumption was increased during low accelerator opening with 4th, and 5th gears at low speed.

**ENGINE BRAKE CONTROL**

- The forward one-way clutch delivers driving force from the engine to the rear wheel but reverse driving from the wheel drive is not delivered since the one-way clutch is idling. Therefore low coast brake solenoid is operated to prevent the forward one-way clutch from idling so that the engine brake is operated in the same as before.

**ENGINE BRAKE CONTROL SYSTEM DIAGRAM**

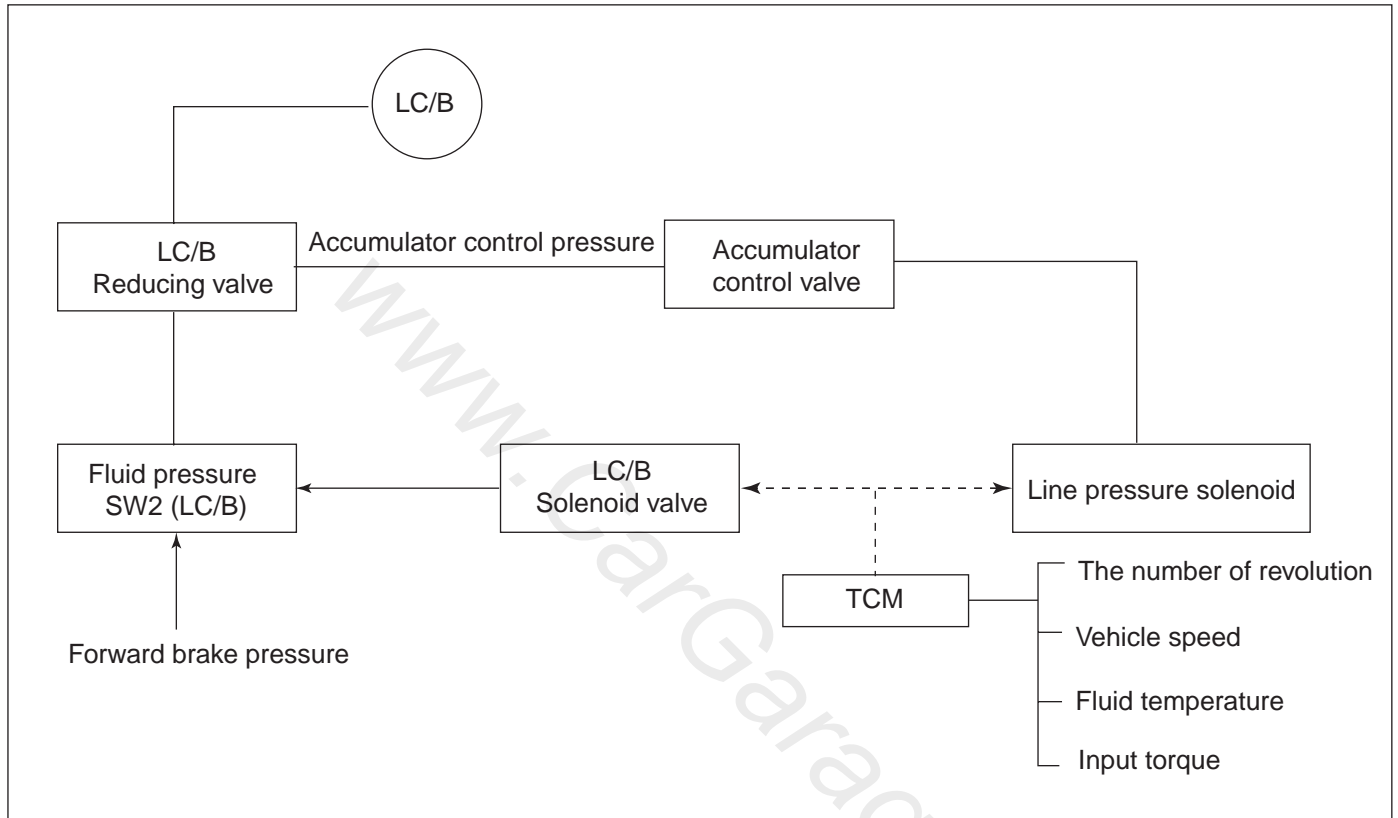

LLAE002P

- The operation of the low coast brake solenoid switches the low coast brake switch valve and controls the coupling and releasing of the low coast brake. The low coast brake reducing valve controls the low coast brake coupling force.

## CONTROL VALVE

## CONTROL VALVE FUNCTIONS

Valve name	Function
Torque converter regulator valve	Regulates line pressure to the optimum pressure (torque converter operating pressure) to prevent pressure applied to the torque converter from being excessive.
Pressure regulator valve Pressure regulator plug Pressure regulator sleeve	Regulates oil pump discharge pressure to the optimum pressure (line pressure) in response to the driving conditions.
Front brake control valve	Regulates line pressure to the optimum pressure (front brake pressure) to be applied to the front brake during the front brake apply.
Accumulator control valve	Regulates pressure applied to the accumulator piston, and the low coast reducing valve (accumulator control pressure) in response to the driving conditions (regulates clutch pressure at 1st, 2nd, 3rd, 5th gears).
Pilot valve A	Regulates line pressure to the regular pressure required by line pressure control, shift control, and lock-up control (pilot pressure).
Pilot valve B	Regulates line pressure to the regular pressure required by shift control (pilot pressure).
Low coast brake switching valve	Provides the low coast brake reducing valve with line pressure during engine brake operation.
Low coast brake reducing valve	Regulates line pressure to the optimum pressure to be applied to the low coast brake when the low coast brake is coupled.
N-R accumulator	Produces the stabilizing pressure for when N-R is selected.
Direct clutch piston switching valve	Operates in 4th gear and switches the direct clutch coupling capacity.
High & low reverse clutch control valve	Regulates line pressure to the optimum pressure (high & low reverse clutch pressure) to be applied to the high & low reverse clutch when the high & low reverse clutch is coupled (regulates clutch pressure in 1st, 3rd, 4th, 5th gears).
Input clutch control valve	Regulates line pressure to the optimum pressure (input clutch pressure) to be applied to the input clutch when the input clutch is coupled (regulates clutch pressure in 4th, 5th gears).
Direct clutch control valve	Regulates line pressure to the optimum pressure (direct clutch pressure) to be applied to the direct clutch when the direct clutch is coupled (regulates clutch pressure in 2nd, 3rd, 4th gears).
Lock-up control valve Lock-up control plug Lock-up control sleeve	Switches lock-up to operating or released. Also, by performing the lock-up operation transiently, lock-up smoothly.
Torque converter lubrication valve	Operates to switch torque converter, cooling, and oil path of lubrication system during lock-up.
Cool bypass valve	Allows excess oil to by pass cooler circuit without being fed into it.
Line pressure relief valve	Discharges excess oil from line pressure circuit.
N-D accumulator	Produces the stabilizing pressure for when N-D is selected.
Manual valve	Delivers line pressure to each circuit in response to each select position. Circuit to which line pressure is not sent drain.

**AUTOMATIC TRANSAXLE SYSTEM**


**FUNCTION OF PRESSURE SWITCH**

<b>Name</b>	<b>Function</b>
Fluid pressure switch 1 (FR/B)	Detects abnormal fluid pressure of the front brake. When it detects any malfunction, it puts the system into fail-safe mode.
Fluid pressure switch 2(LC/B)	Detects abnormal fluid pressure of the low coast brake. When it detects any malfunction, it puts the system into fail-safe mode.
Fluid pressure switch 3(I/C)	Detects abnormal fluid pressure of the input clutch. When it detects any malfunction, it puts the system into fail-safe mode.
Fluid pressure switch 5(D/C)	Detects abnormal fluid pressure of the direct clutch. When it detects any malfunction, it puts the system into fail-safe mode.
Fluid pressure switch 6(H&LR/C)	Detects abnormal fluid pressure of the high & low reverse clutch. When it detects any malfunction, it puts the system into fail-safe mode.


www.CarGarage.ir

**SUB ROM UNIT**

1. Installing location: The valve body upper part
2. Function: To obtain A/T fluid pressure stability by compensating for solenoid & valve body unit fluid pressure differential.
3. Principle: Install additional ROM onto valve body of automatic transmission and input fluid pressure differential of solenoid & valve body so that TCM reads the input data to perform fluid pressure compensation.

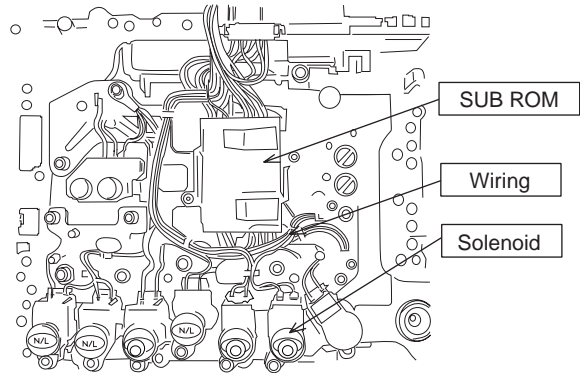

LLAE117A

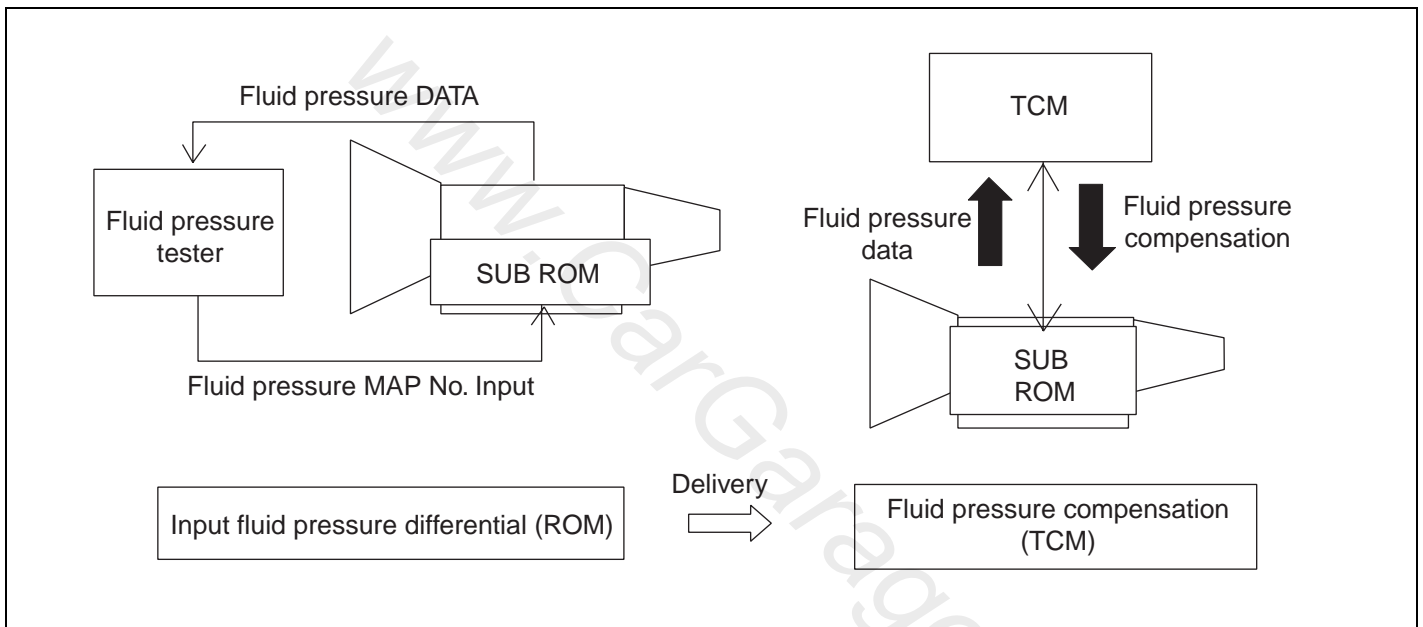


LLAE117B

**4. Maintenance**

- 1) When replacing with a new TCM in the vehicle
  - TCM automatically reads SUB ROM DATA during I.G ON. At this time, shift range valve is off for about 2.5 second.
- 2) When replacing A/T (regardless of new or old ones) in the vehicle
  - Must erase SUB ROM DATA stored in TCM.
  - Erase SUB ROM DATA in SCAN TOOL delete mode during shift stage in R-range + accelerator opening angle maintains 50% + I.G ON.
  - TCM reads SUB ROM DATA from a new A/T upon I.G ON again after I.G OFF.
- 3) Moving TCM from vehicle A to another vehicle B
  - Perform the same way as in 2) above.


**AUTOMATIC TRANSAXLE SYSTEM**

**VALVE BODY FLUID PRESSURE CIRCUIT  
DIAGRAM (D RANGE) E5EB94AB**

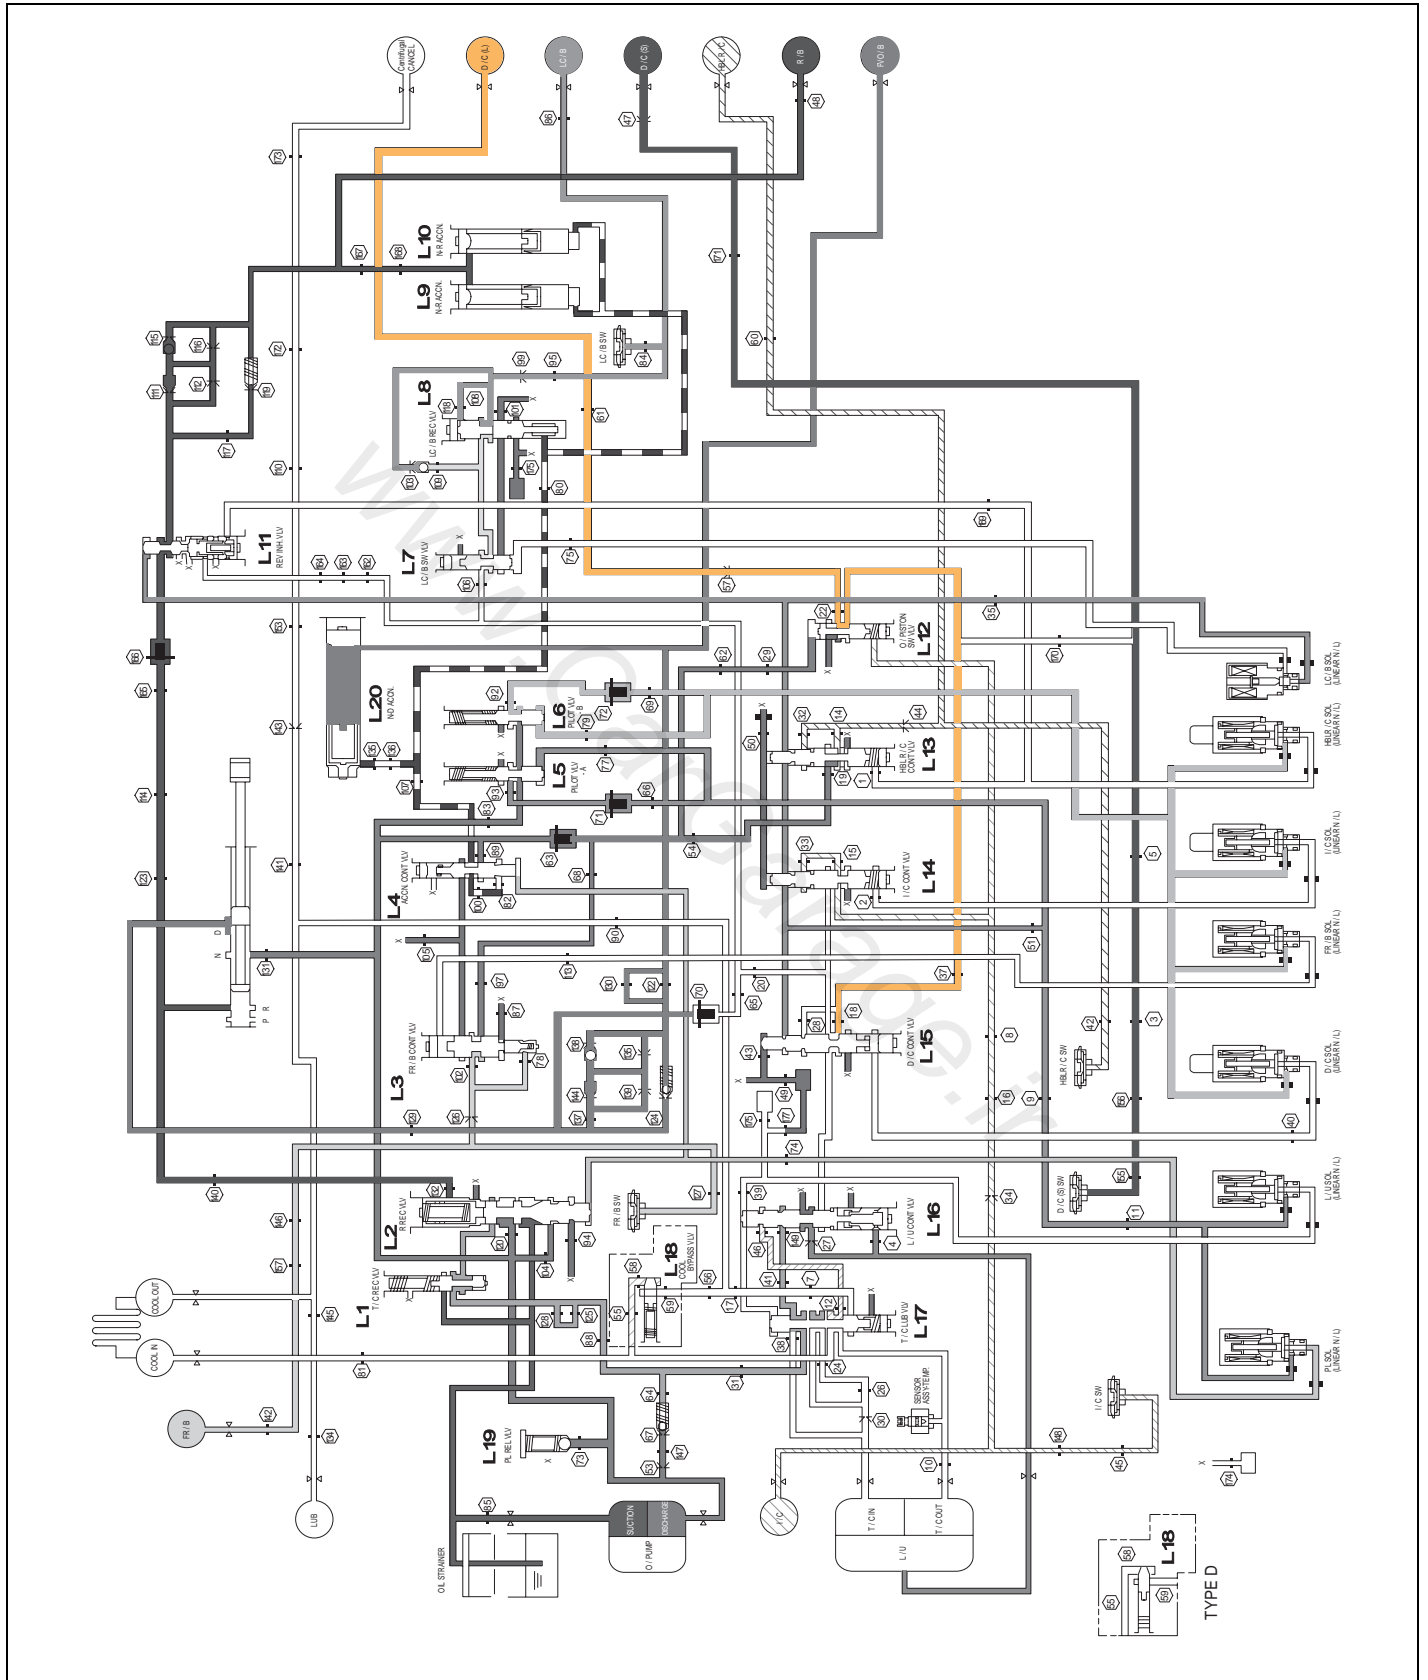

\* Refer to body valves for L(number) valve name.

1ST GEAR

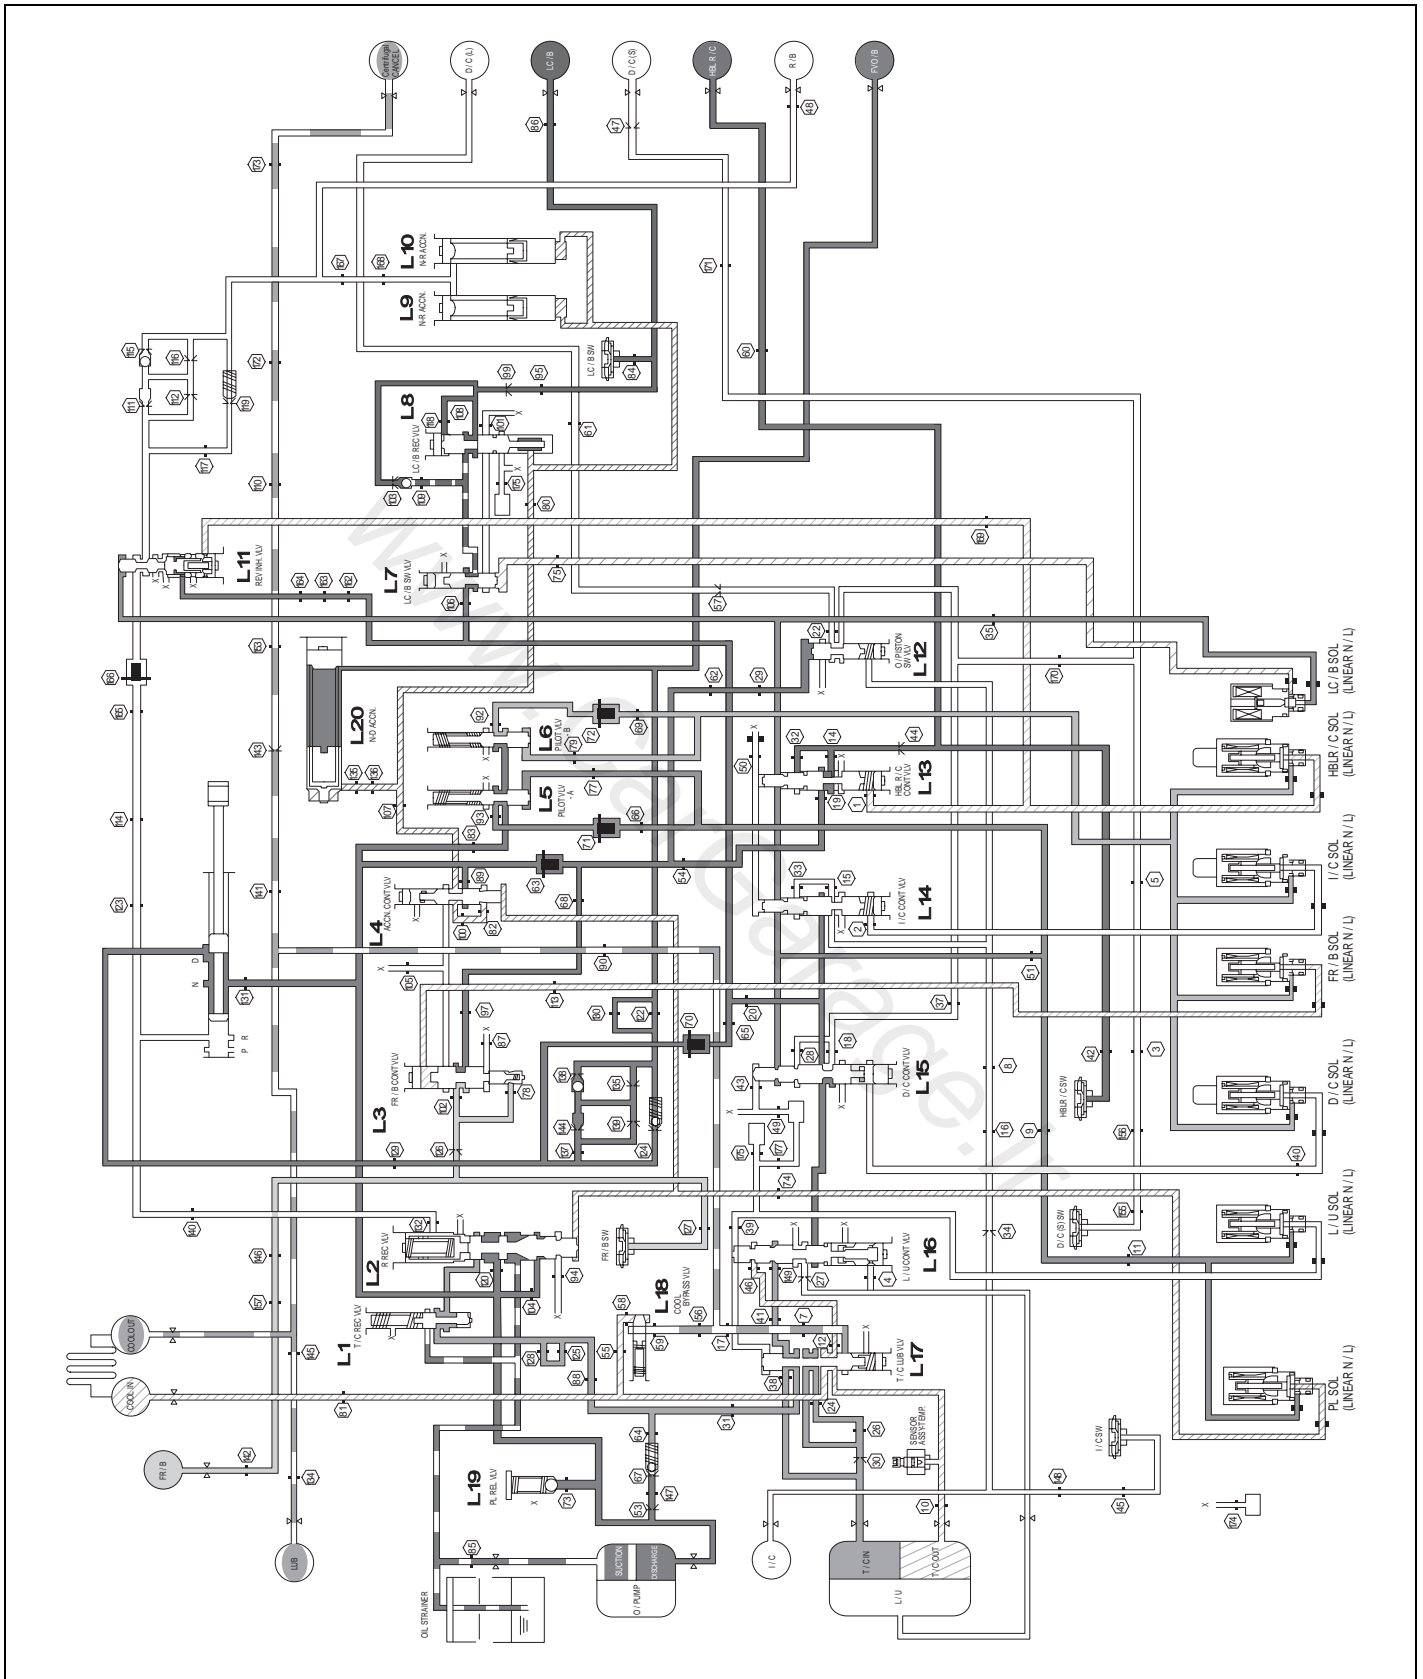


LLAE006B




AUTOMATIC TRANSAXLE SYSTEM

2ND GEAR

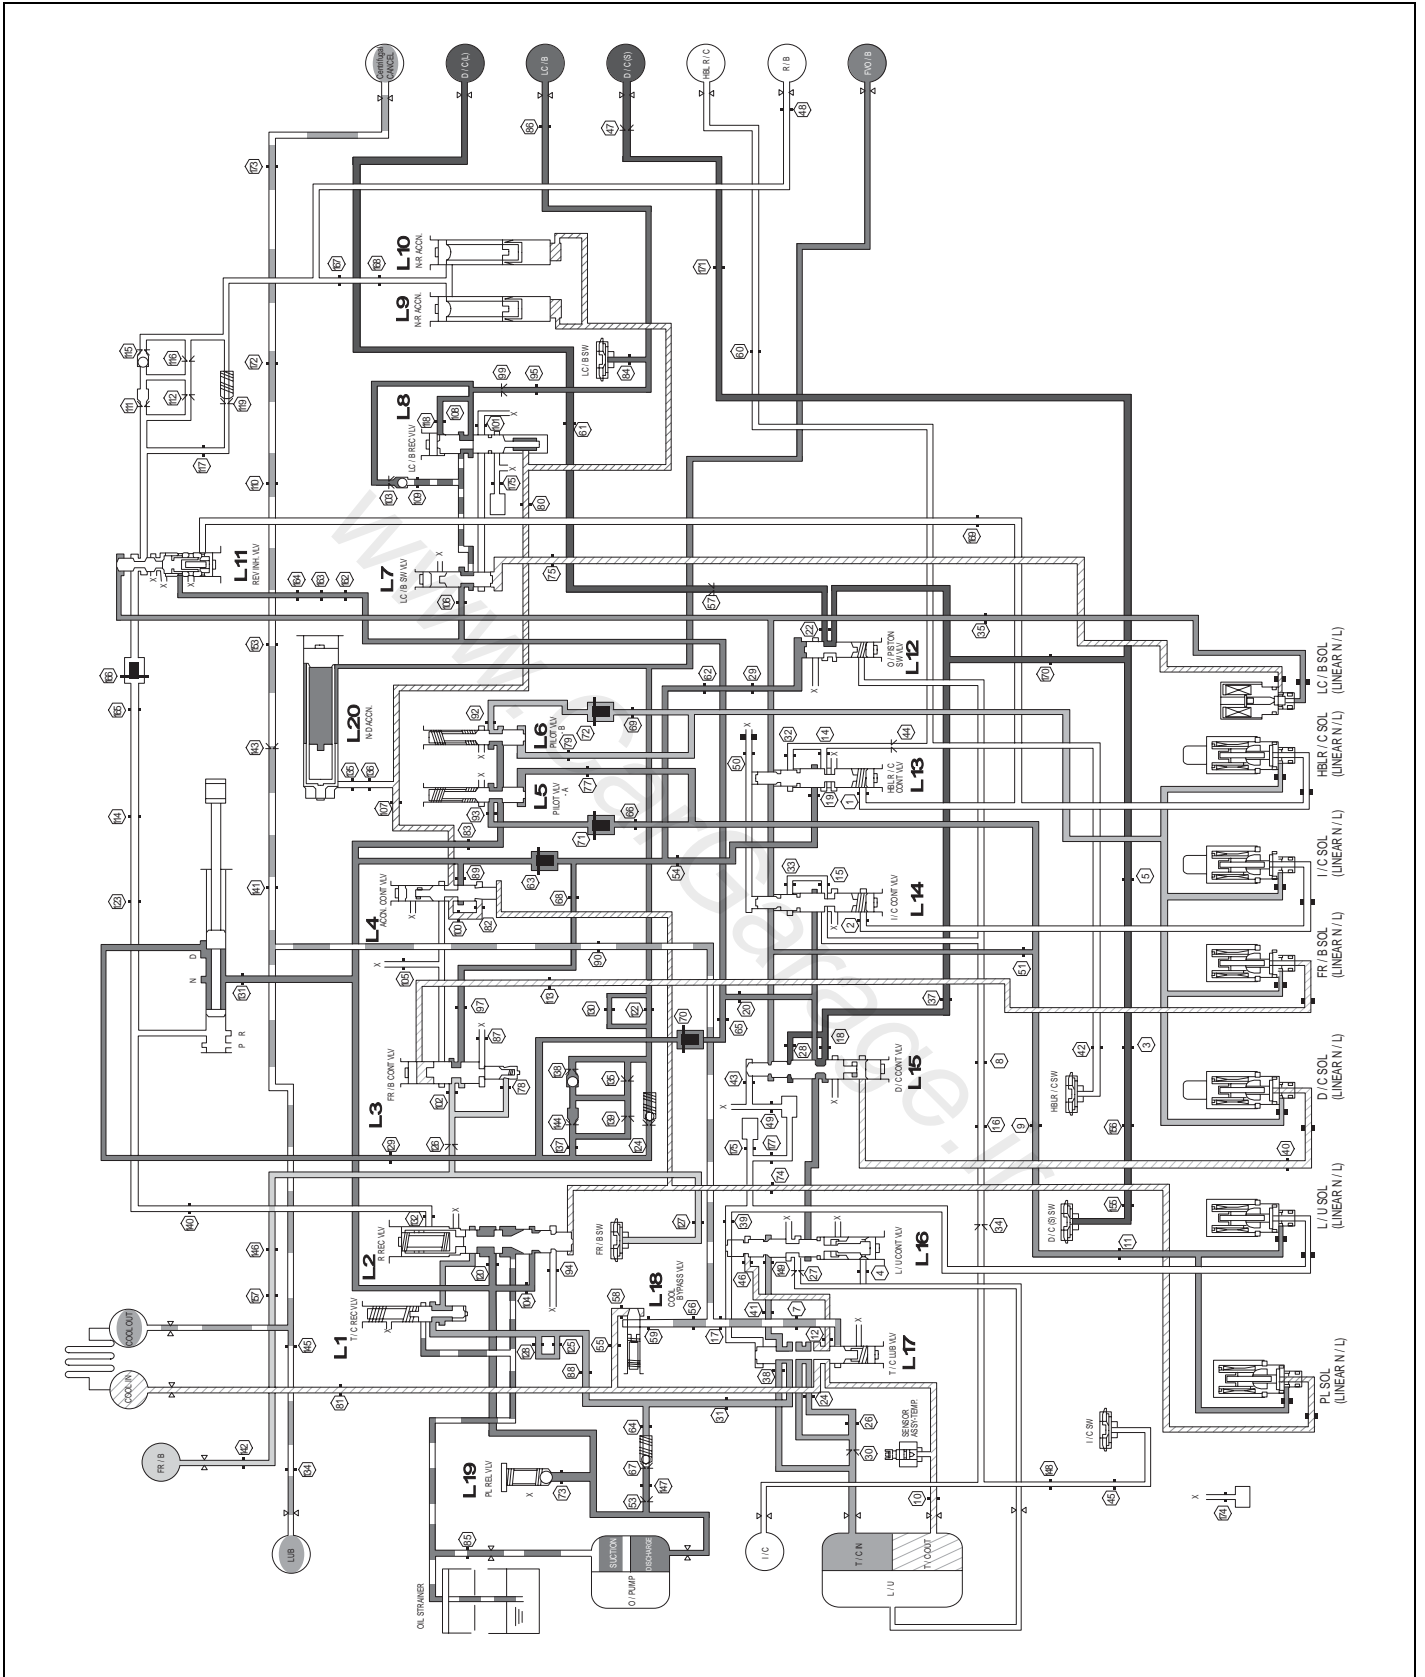

LLAE006C


3RD GEAR

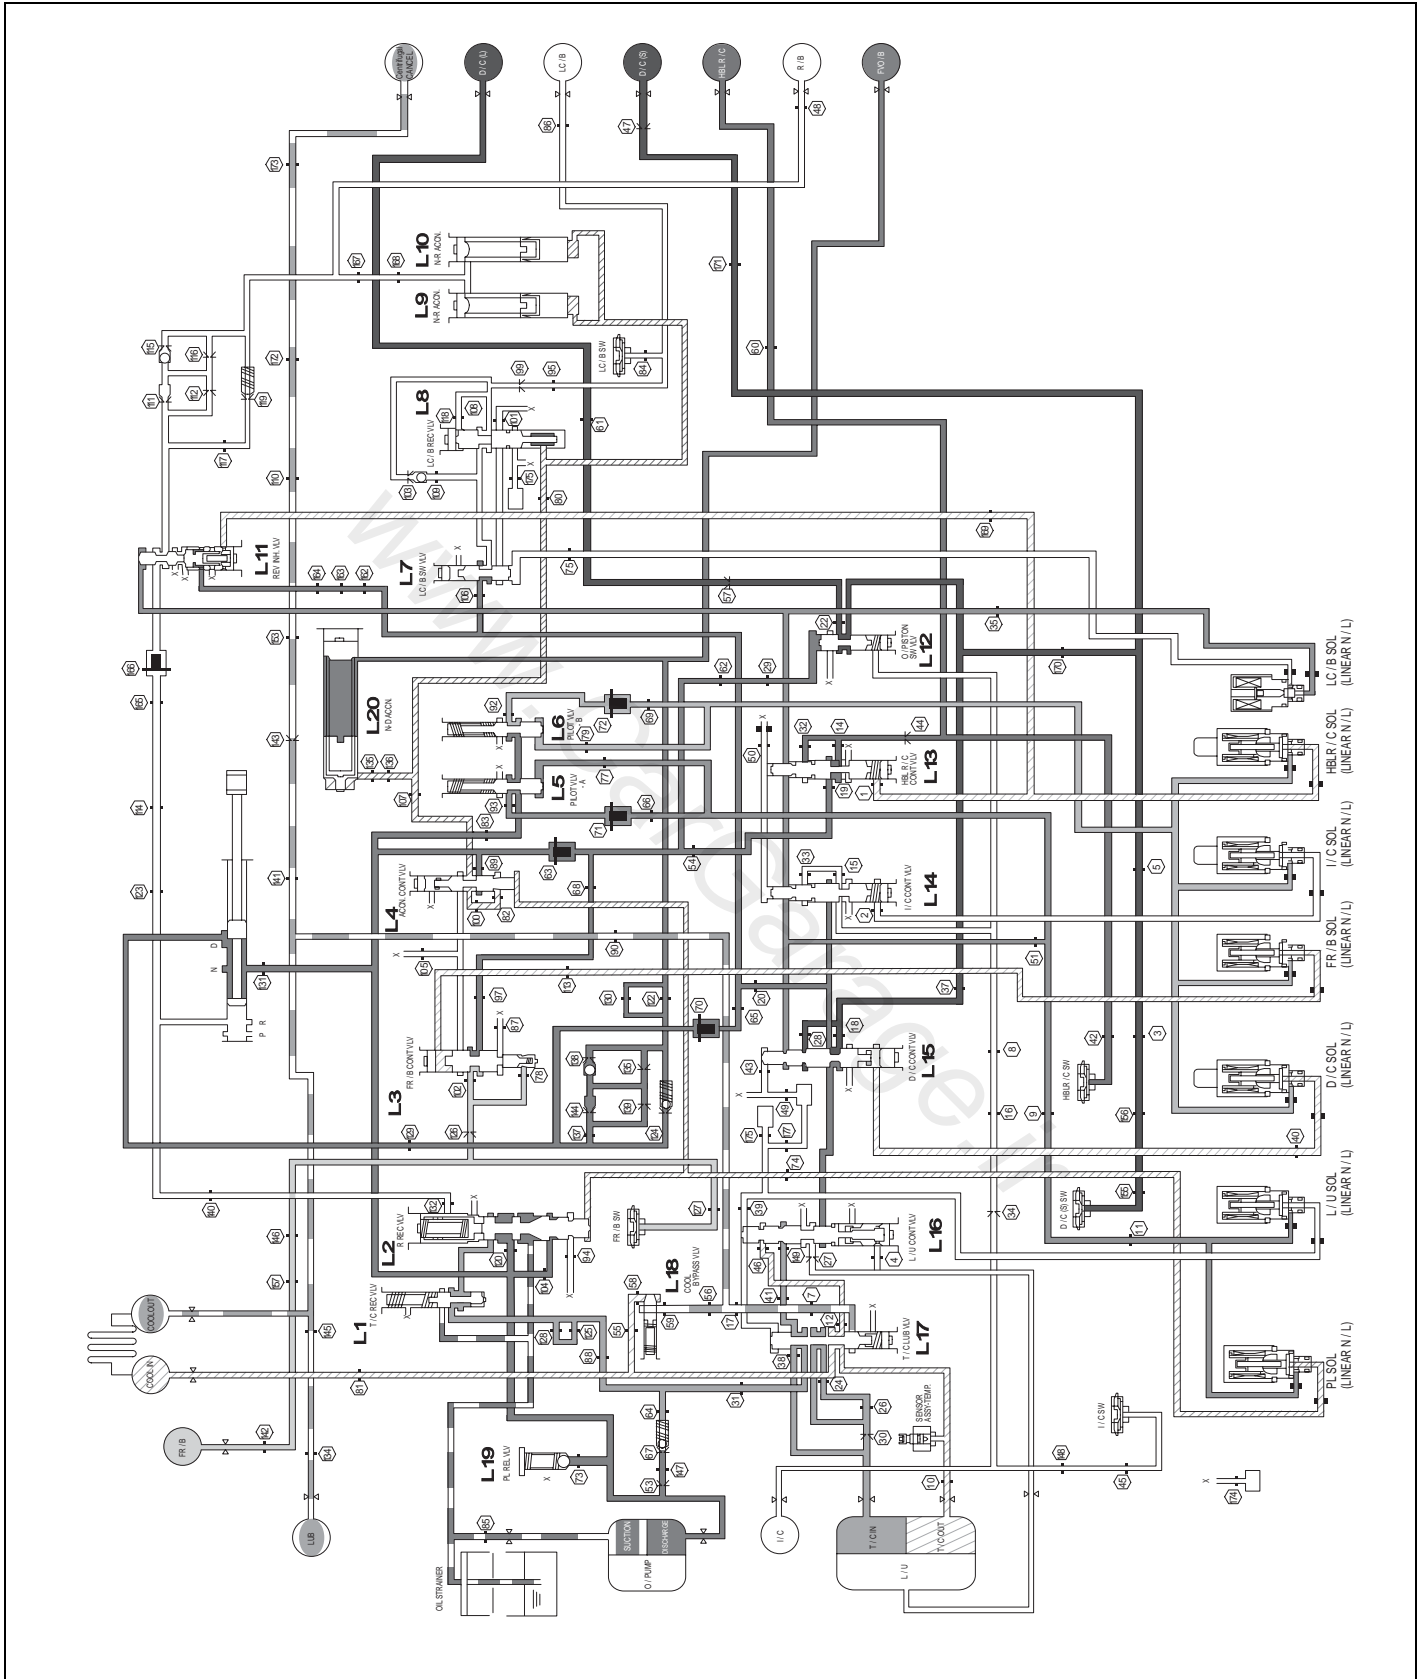

LLAE006D


# AUTOMATIC TRANSAXLE SYSTEM

## 4TH GEAR

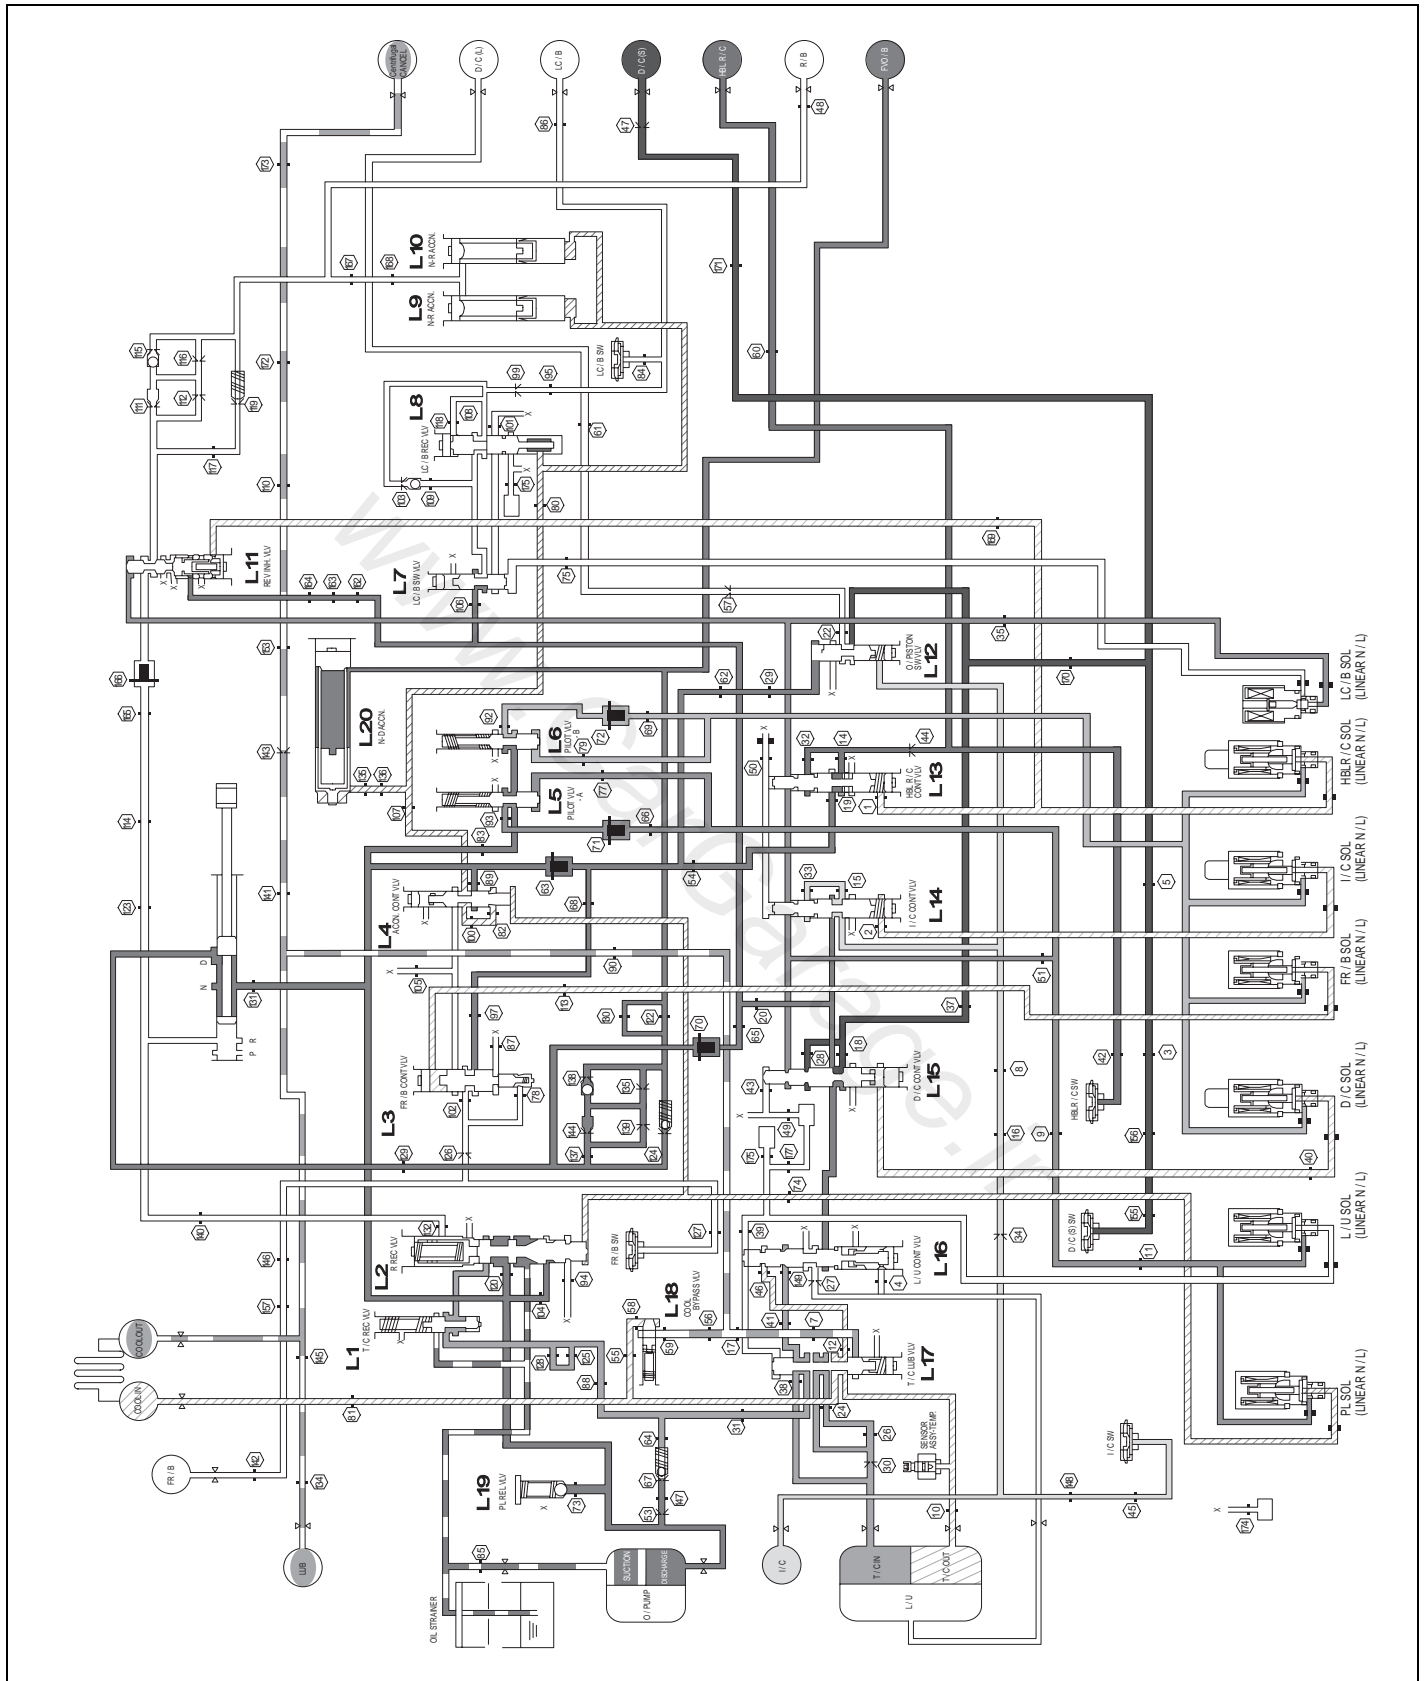

LLAE006E


5TH GEAR (LOCK-UP)

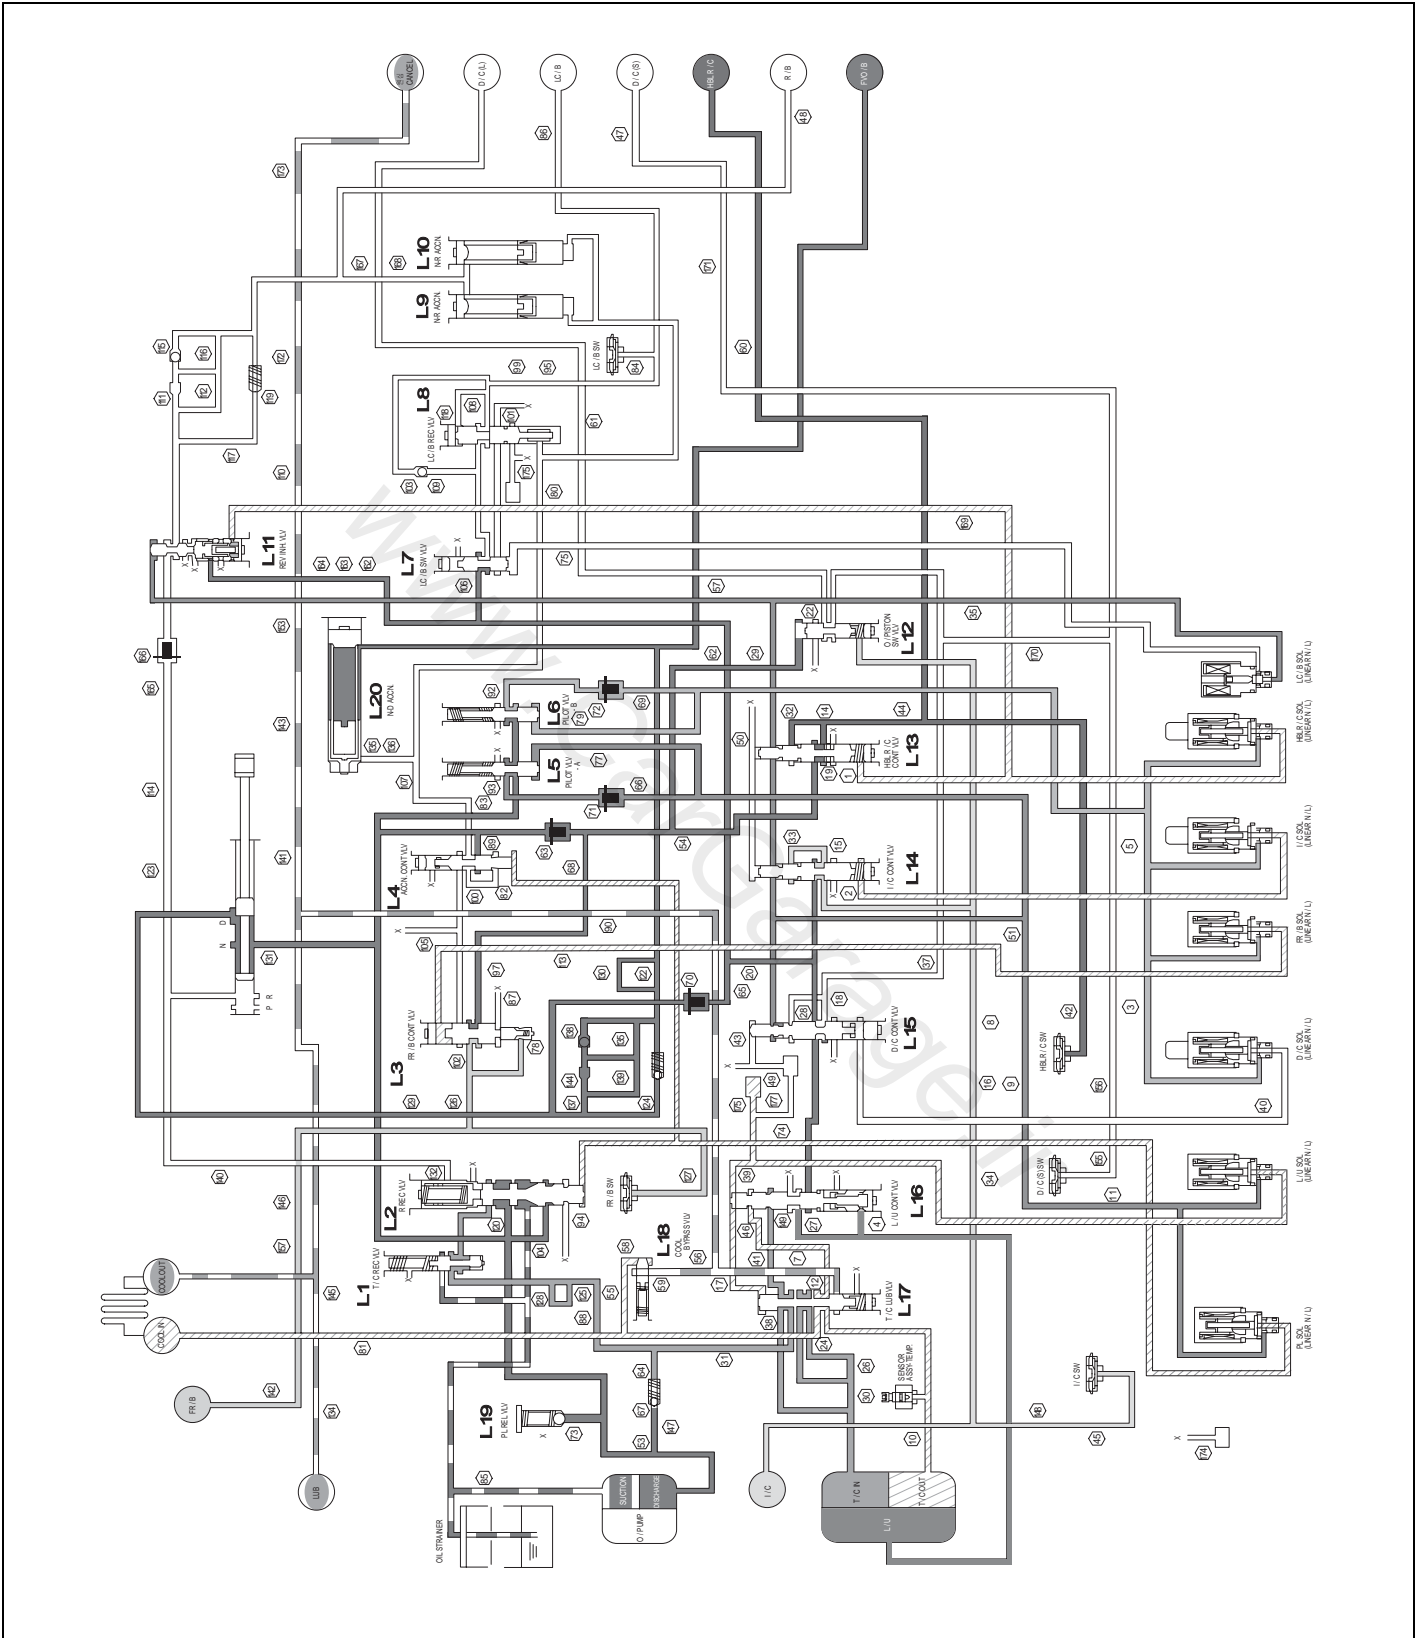

LLAE006F


**AUTOMATIC TRANSAXLE SYSTEM**

**5TH GEAR**

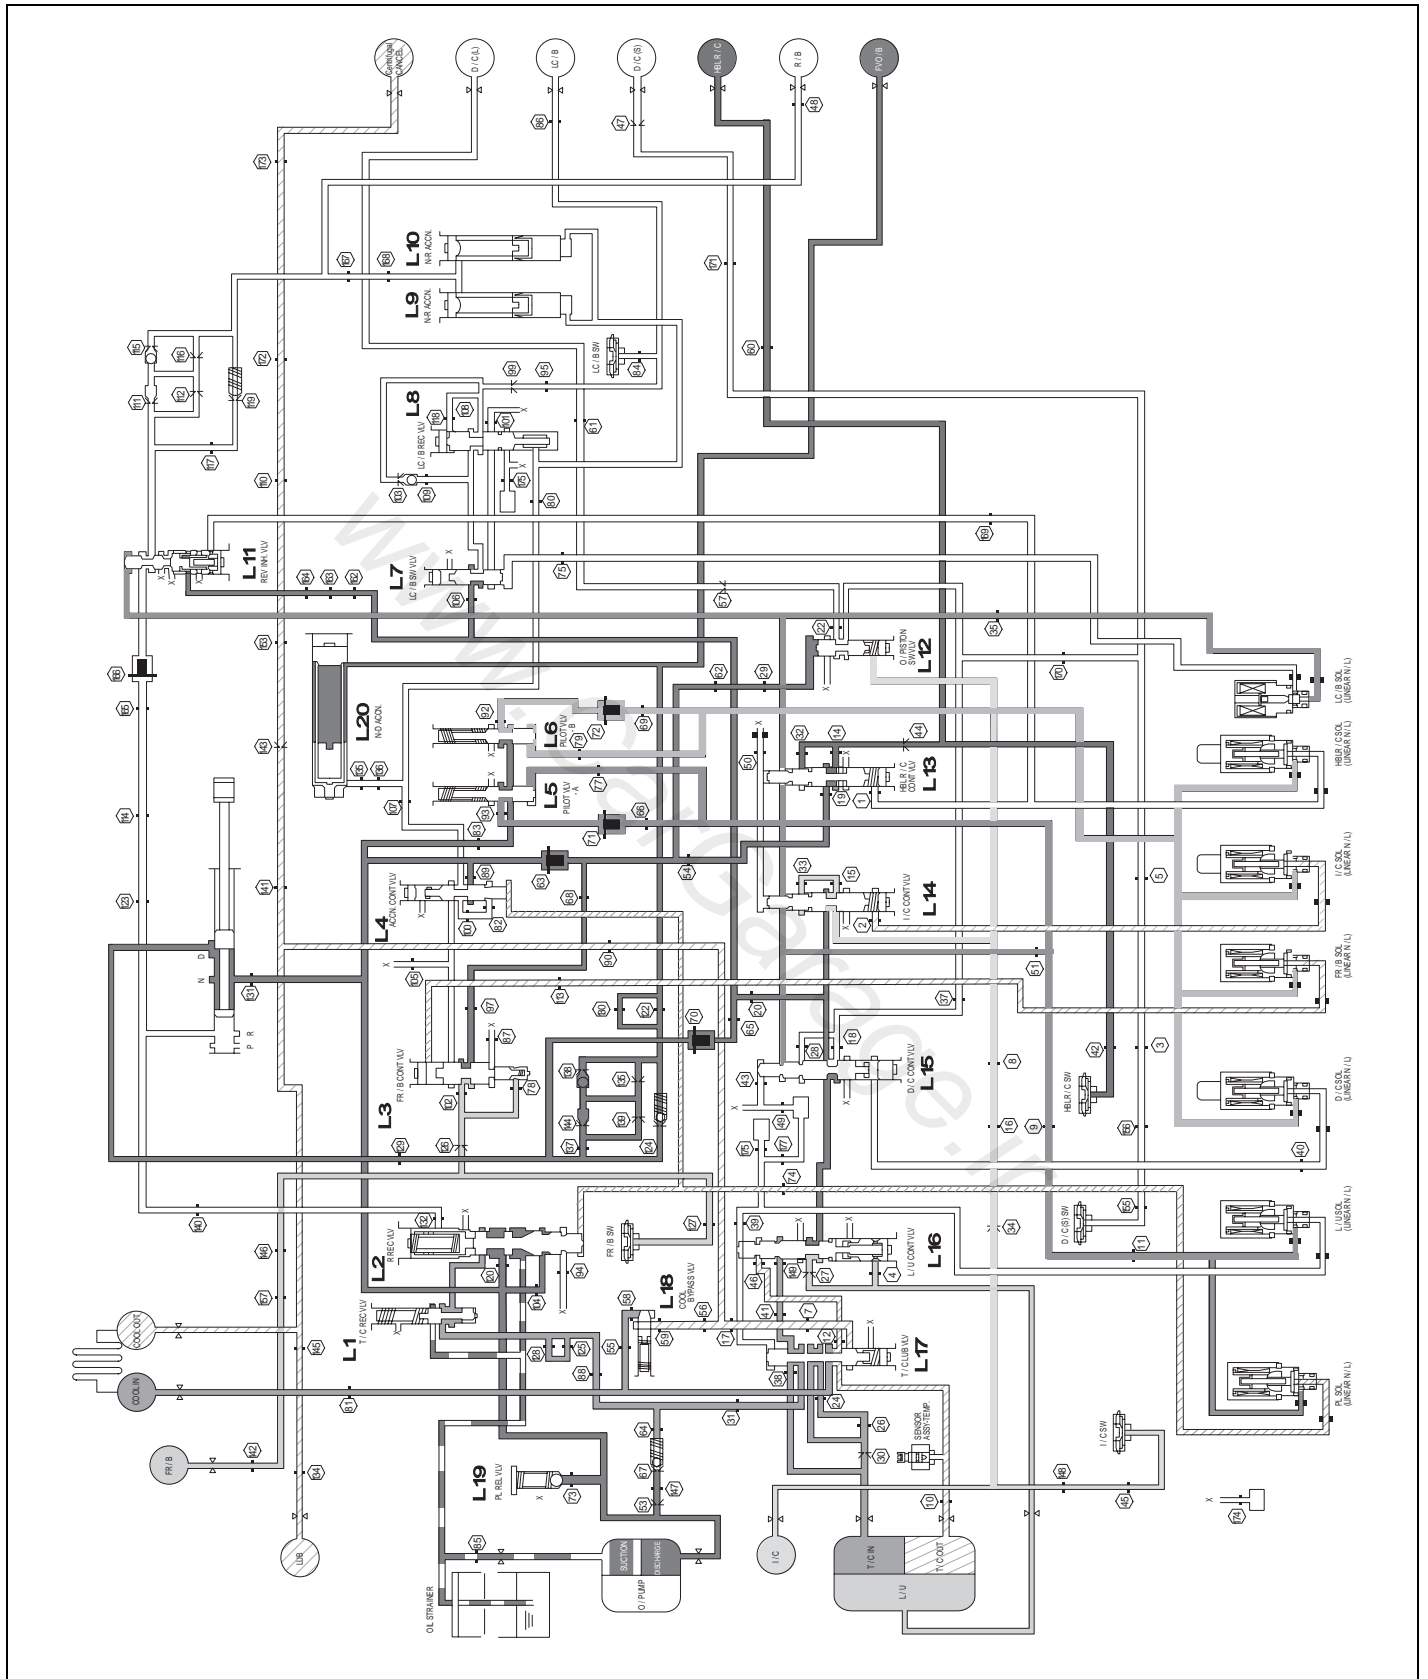

LLAE006G


P&N RANGE

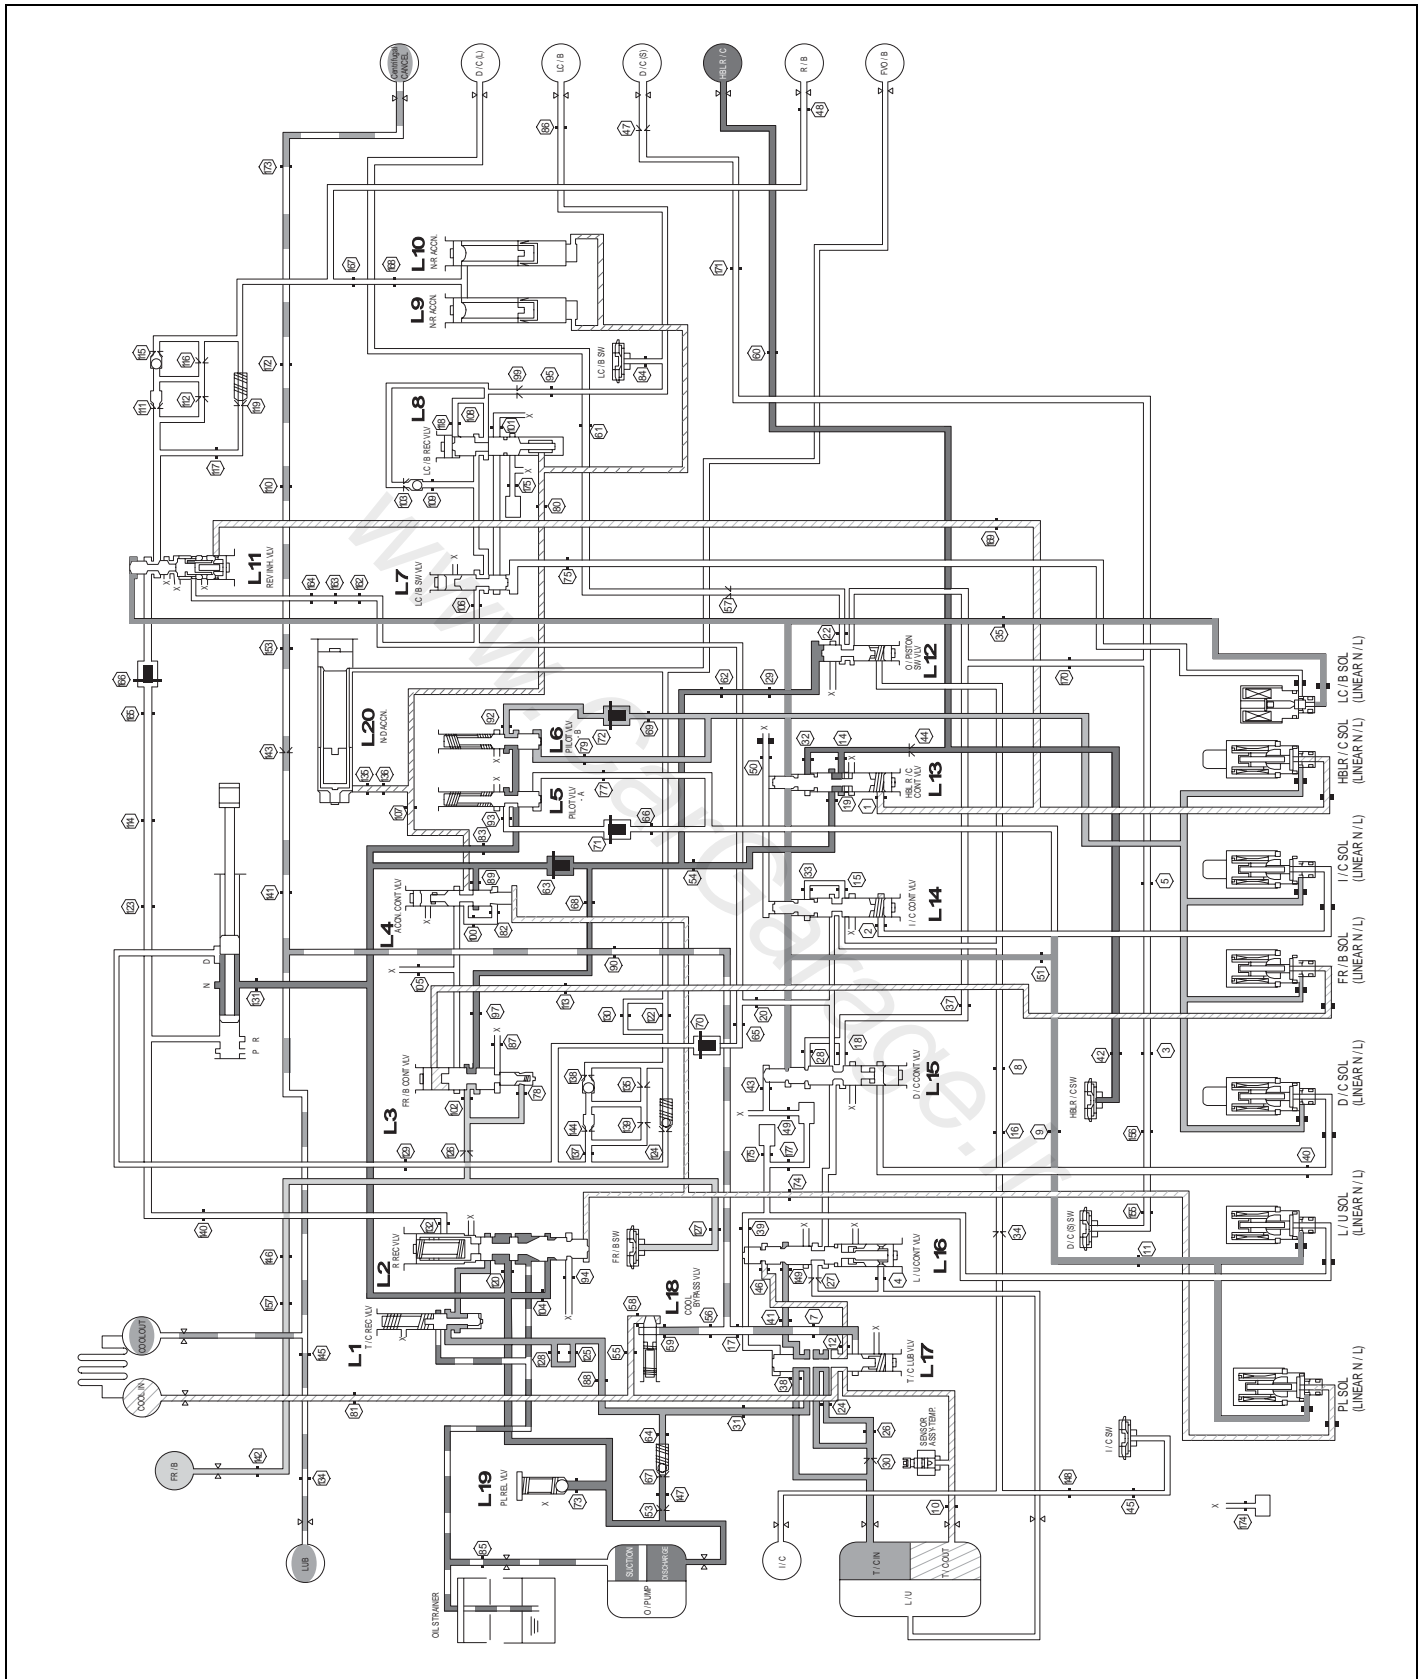

LLAE006H

**AUTOMATIC TRANSAXLE SYSTEM**

**R RANGE**

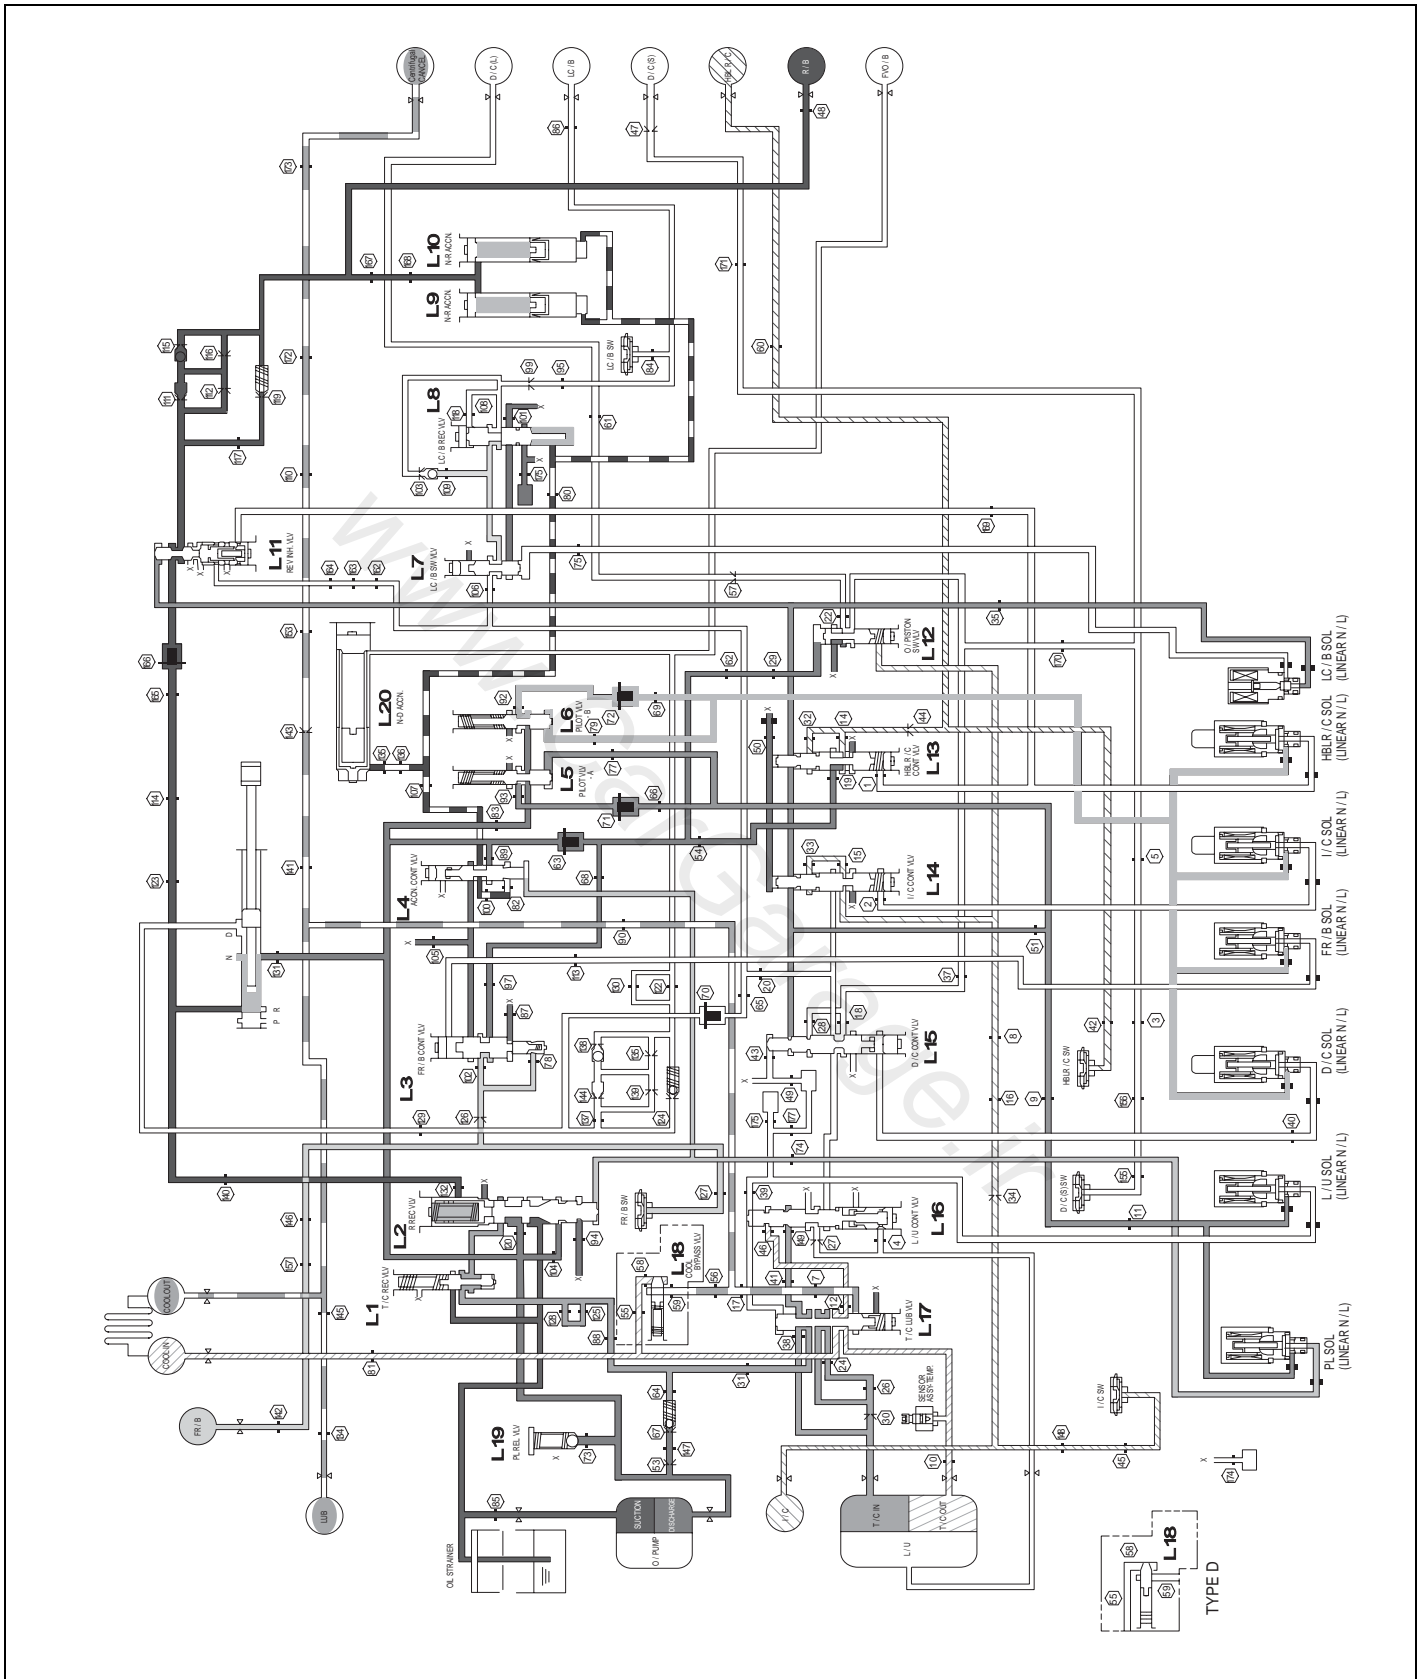

LLAE0061

## BASIC INSPECTION ADJUSTMENT

EF75F3A9

## TRANSAXLE FLUID LEVEL

## INSPECTION

1. Drive the vehicle until the fluid reaches normal operating temperature [70~80°C(158~176°F)].
2. Place the vehicle on a level surface.
3. Move the gear selector lever through all gear positions. This will fill the torque converter with trans fluid. Set the selector lever to the "N" (Neutral) position.
4. Before removing the oil level gauge, wipe all contaminants from around the oil level gauge. Then take out the oil level gauge and check the condition of the fluid.

**NOTE**

If the fluid smells as if it is burning, it means that the fluid has been contaminated by fine particles from the bushes and friction materials, a transmission overhaul may be necessary.

5. Check that the fluid level is in the "HOT" mark on the oil level gauge. If fluid level is low, add automatic transaxle fluid until the level reaches the "HOT" mark.

---

Automatic transaxle fluid :

APOLLOIL ATF RED-1

ATF capacity: 10 (10.57 US qt, 8.8 Imp.qt)

---

**NOTE**

Low fluid level can cause a variety of abnormal conditions because it allows the pump to take in air along with fluid. Air trapped in the hydraulic system forms bubbles, which are compressible. Therefore, pressures will be erratic, causing delayed shifting, slipping clutches and brakes, etc. Improper filling can also raise fluid level too high. When the transaxle has too much fluid, gears churn up foam and cause the same conditions which occur with low fluid level, resulting in accelerated deterioration of automatic transaxle fluid. In either case, air bubbles can cause overheating, and fluid oxidation, which can interfere with normal valve, clutch, and brake operation. Foaming can also result in fluid escaping from the transaxle vent where it may be mistaken for a leak.

6. Insert the oil level gauge securely.

**NOTE**

When new, automatic transmission fluid should be red, The red dye is added so the assembly plant can identify it as transmission fluid and distinguish it from engine oil or antifreeze. The red dye, which is not an indicator of fluid quality, is not permanent. As the vehicle is driven the transmission fluid will begin to look darker. The color may eventually appear light brown.

## REPLACEMENT

If you have a fluid changer, use this changer to replace the fluid. If you do not have a fluid replace the fluid by the following procedure.

1. Disconnect the hose, which connects the transmission and the oil cooler (inside the radiator).
2. Start the engine and let the fluid drain out.

---


Running conditions : "N" range with engine idling

---

**CAUTION**

**The engine should be stopped within one minute after it is started. If the fluid has all drained out before then, the engine should be stopped at that point.**

3. Remove the drain plug(A) from the bottom of the transmission case to drain the fluid.

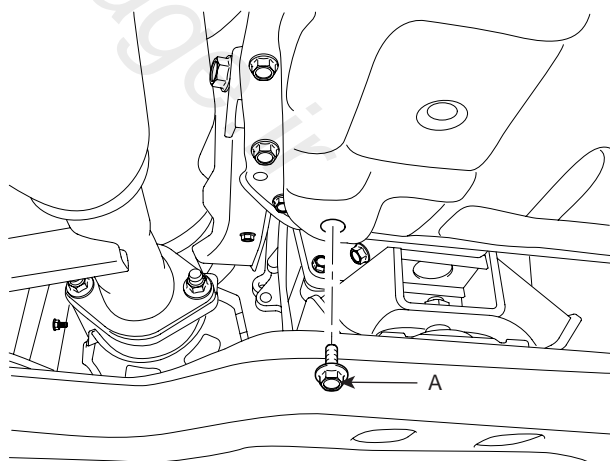

SBLAT6030L

4. Install the drain plug via the gasket, and tighten it the specified torque.

---

TORQUE:

58.83~63.74Nm (6~6.5kgf.m, 43.39~47.01lb-ft)

---



5. Pour the new fluid in through the oil filler tube.



**CAUTION**

***Stop pouring if the full volume of fluid cannot be poured in.***

6. Repeat the procedure in step (2).



**NOTE**

*Check the old fluid for contamination. If it has been contaminated, repeat the steps (5) and (6).*

7. Pour the new fluid in through the oil filler tube.
8. Reconnect the hose, which was disconnected in step (1) above, and firmly replace the oil level gauge. (In case of this "replace", this means after wiping off any dirt around the oil level gauge, insert it into the filler tube.)
9. Start the engine and run it at idle for 1~2 minutes.
10. Move the select lever through all positions, and then move it to the "N" or "P" position.
11. Drive the vehicle until the fluid temperature rises to the normal temperature (70~80°C(158~176°F)), and then check the fluid level again. The fluid level must be at the HOT mark.
12. Firmly insert the oil level gauge into the oil filler tube.

**TROUBLESHOOTING** E1F24B52**DIAGNOSTIC TROUBLE CODES (INSPECTION PROCEDURE)**

Check the Diagnostic Trouble Codes

1. Turn the ignition switch to OFF.
2. Connect the Hi-scan tool to the DLC connector for diagnosis.
3. Turn the ignition switch to ON.
4. Check the diagnostic trouble codes using the Hi-scan tool.
5. Read the output diagnostic trouble codes. Then follow the remedy procedures according to the "DIAGNOSTIC TROUBLE CODE DESCRIPTION" on the following pages.

 **NOTE**

- A maximum of 10 diagnostic trouble codes (in the sequence of occurrence) can be stored in the Random Access Memory (RAM) incorporated within the control module.
- The same diagnostic trouble code can be stored one time only.
- If the number of stored diagnostic trouble codes or diagnostic trouble patterns exceeds 10, already stored diagnostic trouble codes will be erased in sequence, beginning with the oldest.
- Do not disconnect the battery until all diagnostic trouble codes or diagnostic trouble patterns have been read out, because all stored diagnostic trouble codes or diagnostic trouble patterns will be cancelled when the battery is disconnected.
- All diagnostic trouble codes are deleted from memory the 200th time the ATF temperature reaches 50°C (122°F) after memorization of the most recent diagnostic code.

6. Delete the diagnostic trouble code.
7. Disconnect the Hi-scan tool.

 **NOTE**

DTC cleaning should only be done with the scan tool.

**AUTOMATIC TRANSAXLE SYSTEM****AT -35****DIAGNOSTIC TROUBLE CODE TABLE****[DSL 2.5]**


No.	Code	Item	MIL	Re- mark
1	P0705	TRANSMISSION RANGE SENSOR CIRCUIT MALFUNCTION (PRND Input)	X	AT-42
2	P0711	TRANSMISSION FLUID TEMPERATURE SENSOR A RATIONALITY		AT-48
3	P0712	TRANSMISSION FLUID TEMPERATURE SENSOR A STUCK OFF(HIGH INPUT)		AT-54
4	P0713	TRANSMISSION FLUID TEMPERATURE SENSOR A STUCK ON(LOW INPUT)		AT-56
5	P0716	A/T INPUT SPEED SENSOR CIRCUIT - OPEN or SHORT(GND)		AT-58
6	P0721	A/T OUTPUT SPEED SENSOR CIRCUIT - OPEN or SHORT(GND)		AT-74
7	P0741	TORQUE CONVERTER CLUTCH STUCK OFF		AT-106
8	P0743	TCC CONTROL SOLENOID VALVE CIRCUIT - OPEN or SHORT(GND)		AT-112
9	P0748	PRESSURE CONTROL SOLENOID VALVE-A CIRCUIT - OPEN or SHORT(GND)		AT-115
10	P0751	SHIFT SOLENOID "A(I/C SOLENOID)" PERPOMANCE OR STUCK OFF		AT-120
11	P0752	SHIFT SOLENOID "A(I/C SOLENOID)" PERPOMANCE OR STUCK ON		AT-125
12	P0753	SHIFT SOLENOID "A(I/C SOLENOID)" CIRCUIT - OPEN or SHORT(GND)		AT-127
13	P0756	SHIFT SOLENOID "B(Fr/B SOLENOID)" PERPOMANCE OR STUCK OFF		AT-132
14	P0757	SHIFT SOLENOID "B(Fr/B SOLENOID)" PERPOMANCE OR STUCK ON		AT-137
15	P0758	SHIFT SOLENOID "B(Fr/B SOLENOID)" CIRCUIT - OPEN or SHORT(GND)	X	AT-139
16	P0761	SHIFT SOLENOID "C(D/C SOLENOID)" PERPOMANCE OR STUCK OFF	X	AT-144
17	P0762	SHIFT SOLENOID "C(D/C SOLENOID)" PERPOMANCE OR STUCK ON	X	AT-149
18	P0763	SHIFT SOLENOID "C(D/C SOLENOID)" CIRCUIT - OPEN or SHORT(GND)	X	AT-151
19	P0766	SHIFT SOLENOID "D(H & LR/C SOLENOID)" PERPOMANCE OR STUCK OFF	X	AT-156
20	P0767	SHIFT SOLENOID "D(H & LR/C SOLENOID)" PERPOMANCE OR STUCK ON		AT-161
21	P0768	SHIFT SOLENOID "D(H & LR/C SOLENOID)" CIRCUIT - OPEN or SHORT(GND)		AT-163
22	P0772	SHIFT SOLENOID "E(LC/B SOLENOID)" PERPOMANCE OR STUCK OFF		AT-168
23	P0773	SHIFT SOLENOID "E(LC/B SOLENOID)" CIRCUIT - OPEN or SHORT(GND)		AT-172
24	P0863	CAN COMMUNICATION BUS OFF		AT-182
25	P0893	MULTIPLE GEARS ENGAGED		AT-186

## [GSL 3.3/3.8]

No.	Code	Item	MIL	Re- mark
1	P0601	INTERNAL CONTROL MODULE MEMORY CHECK SUM ERROR		AT-37
2	P0641	SENSOR REFERENCE VOLTAGE "A" CIRCUIT - OPEN		AT-39
3	P0705	TRANSMISSION RANGE SENSOR CIRCUIT MALFUNCTION (PRND Input)		AT-42
4	P0711	TRANSMISSION FLUID TEMPERATURE SENSOR A RATIONALITY		AT-48
5	P0712	TRANSMISSION FLUID TEMPERATURE SENSOR A STUCK OFF(HIGH INPUT)		AT-54
6	P0713	TRANSMISSION FLUID TEMPERATURE SENSOR A STUCK ON(LOW INPUT)		AT-56
7	P0716	A/T INPUT SPEED SENSOR CIRCUIT - OPEN or SHORT(GND)		AT-58
8	P0717	A/T INPUT SPEED SENSOR CIRCUIT - NO SIGNAL		AT-66
9	P0721	A/T OUTPUT SPEED SENSOR CIRCUIT - OPEN or SHORT(GND)		AT-74
10	P0731	GEAR 1 INCORRECT RATIO		AT-82
11	P0732	GEAR 2 INCORRECT RATIO		AT-88
12	P0733	GEAR 3 INCORRECT RATIO		AT-93
13	P0734	GEAR 4 INCORRECT RATIO		AT-97
14	P0735	GEAR 5 INCORRECT RATIO		AT-102
15	P0741	TORQUE CONVERTER CLUTCH STUCK OFF		AT-106
16	P0743	TCC CONTROL SOLENOID VALVE CIRCUIT - OPEN or SHORT(GND)		AT-112
17	P0748	PRESSURE CONTROL SOLENOID VALVE-A CIRCUIT - OPEN or SHORT(GND)		AT-115
18	P0753	SHIFT SOLENOID "A(I/C SOLENOID)" CIRCUIT - OPEN or SHORT(GND)		AT-127
19	P0758	SHIFT SOLENOID "B(Fr/B SOLENOID)" CIRCUIT - OPEN or SHORT(GND)		AT-139
20	P0763	SHIFT SOLENOID "C(D/C SOLENOID)" CIRCUIT - OPEN or SHORT(GND)		AT-151
21	P0768	SHIFT SOLENOID "D(H&LR/C SOLENOID)" CIRCUIT - OPEN or SHORT(GND)		AT-163
22	P0773	SHIFT SOLENOID "E(LC/B SOLENOID)" CIRCUIT - OPEN or SHORT(GND)		AT-172
23	P0819	UP AND DOWN SHIFT SWITCH TO TRANSMISSION RANGE CORRELATION	X	AT-176
24	U0001	CAN COMMUNICATION BUS		AT-190
25	U0100	LOST COMMUNICATION WITH PCM "A"		AT-194

**AUTOMATIC TRANSAXLE SYSTEM**

AT -37

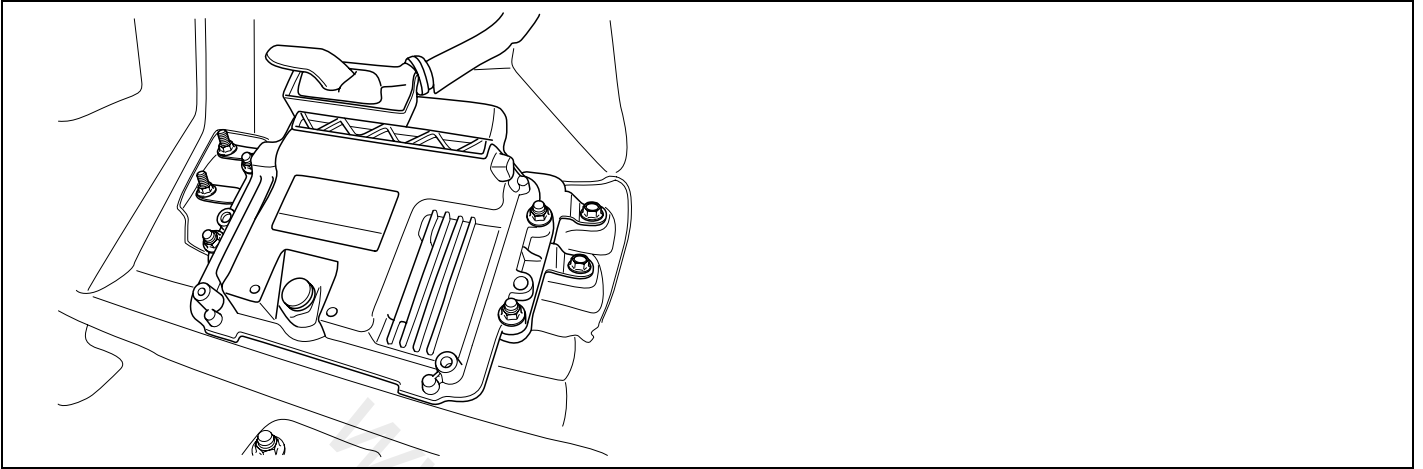**DTC P0601 EEPROM-CHECK SUM ERROR****COMPONENT LOCATION** EA71F251

SBLAT6200L

**GENERAL DESCRIPTION** EFF06479

The TCU check ROM I.D all the time, in order to maintain for best condition and surrounding.

**DTC DESCRIPTION** E239491D

The TCU set this code when the ROM I.D is changed by external force or input non-available data.

**DTC DETECTING CONDITION** EC25D0F8

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>• Check sum fault</li> </ul>	<ul style="list-style-type: none"> <li>• Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>• IG "on"</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>• Checksum fault or TCU internal Failure</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>• More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>• Locked in 3rd gear</li> </ul>	

**MONITOR SCANTOOL DATA** E28D4FFB

1. Connect scantool to data link connector(DLC).
2. Ignition "ON".
3. Confirm the "ROM I.D".
4. Perform the "ROM UP-DATE".
5. Perform the Re-diagnosis
6. Is "DTC" disappeared?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Replace PCM/TCM as necessary and then go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR** E41990B1

After a repair, it is essential to verify that the fault has been corrected.

1. Connect scantool and select "Diagnostic Trouble Codes(DTCs)" mode.
2. Using a scantool, Clear DTC.
3. Operate the vehicle within DTC Enable conditions in General information.
4. Are any DTCs present?

**YES**

Go to the applicable troubleshooting procedure.

**NO**

System performing to specification at this time.

**AUTOMATIC TRANSAXLE SYSTEM****AT -39****DTC P0641 SENSOR REFERENCE VOLTAGE "A" CIRCUIT OPEN****COMPONENT LOCATION** EEE7C17

Refer to DTC P0601.

**GENERAL DESCRIPTION** E4A2D7DF

The TCM monitors voltage that supplied to solenoid valve.

**DTC DESCRIPTION** EE53B1A

The TCM sets this code when supplying voltage to TCM is lower or higher than specification.

**DTC DETECTING CONDITION** EE53B1A

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	• Check voltage range	• Faulty TCM
<b>Enable Conditions</b>	• Battery voltage > 11.7V	
<b>Threshold value</b>	• 10.4V < Sensor supply voltage > 16V	
<b>Diagnostic Time</b>	• More than 0.2sec	
<b>Fail Safe</b>	• Damper clutch "OFF" • Prevention of pressure adaptation	

**MONITOR SCANTOOL DATA** E44BB402

1. Connect scantool to data link connector(DLC).
2. Ignition "ON" & Engine "OFF".
3. Monitor the "BATTERY VOLTAGE and A/T MAIN RELAY VOLTAGE" parameter on the scantool.

Specification : approx. 12V

1.11 CURRENT DATA		03/34
×	BATTERY VOLTAGE	13.8 V
×	A/T MAIN RELAY VOLTAGE	13.8 V
	ENGINE TORQUE	
	DRIVING PATTERN	
	CALEFF	
	LU CAL.MAP NUMBER	
	LU CAL.GAIN	
	LU CAL.OFFSET	

FIX PART FULL HELP GRPH RCRD

SBLAT6201L

**AT -40**

**AUTOMATIC TRANSAXLE (A5SR1/2)**

4. Does "BATTERY VOLTAGE and A/T MAIN RELAY VOLTAGE" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection" procedure.

**TERMINAL & CONNECTOR INSPECTION** ECBDE7AB

1. Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
2. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
3. Has a problem been found?

**YES**

Repair as necessary and go to "Verification of vehicle Repair" procedure.


**NO**

Go to "Power supply circuit inspection" procedure.

**POWER SUPPLY CIRCUIT INSPECTION** E5402EEB

1. IG "ON" Engine "OFF".
2. Disconnect the "PCM/TCM" connector.
3. Measure voltage between terminal No"29" of TCM harness connector and chassis ground and then terminal No"73" of the TCM harness connector and chassis ground.

Specification : approx. 12V

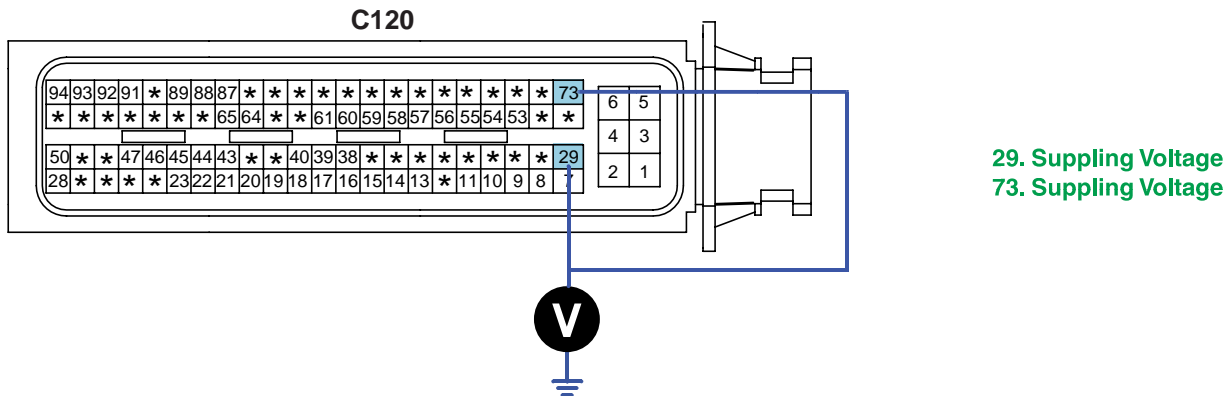



## AUTOMATIC TRANSAXLE SYSTEM

AT -41

4. Is voltage within specifications?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. And go to Verification of Vehicle Repair procedure.

**NO**

Substitute with a known-good PCM/TCM and check for proper operation. If the problem is corrected, replace PCM/TCM as necessary and then go to "Verification of Vehicle Repair" procedure.


## VERIFICATION OF VEHICLE REPAIR E9BF9C0F

Refer to DTC P0601.

www.CarGarage.ir

**DTC P0705 TRANSAXLE RANGE SWITCH (TR SWITCH)**

**COMPONENT LOCATION** E505DFFD

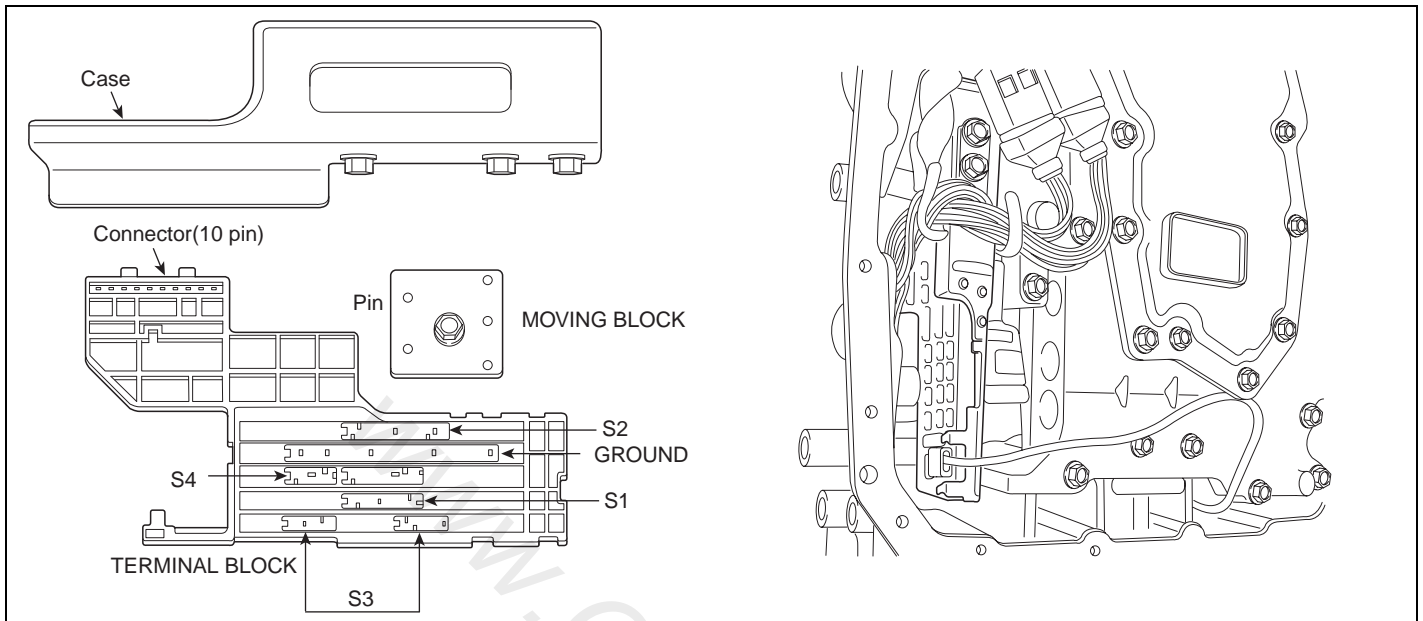

SBLAT6100L

**GENERAL DESCRIPTION** E37B66E4

The TRANSMISSION Range Switch sends the shift lever position information to the TCM using a 5V signal. Deciding each TCM range depend on 4 s/w signal. Standard patterns are fixed and these patterns are on the Specification table as listed below. For example, when s/w 1,2,4 are 'ON(0V)' and s/w 3 is 'OFF(5V)', TCM recognizes 'D Range'. When the shift lever is in the D (Drive) position the output signal of Tansaxle Range Switch is 12V and in all other positions the voltage is 0V. The TCM judges the shift lever position by reading all signals, for the TRANSMISSION Range Switch, simultaneously.

**DTC DESCRIPTION** EDB095D4

The TCM sets this code when patterns are without Specification of the table shown below. The TRANSMISSION Range Switch has no output signal for an extended period of time.

**AUTOMATIC TRANSAXLE SYSTEM****AT -43****DTC DETECTING CONDITION** EBEC8AEB

[DSL 2.5]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Range decision by switch pattern</li> </ul>	<ul style="list-style-type: none"> <li>OPEN OR SHORT IN CIRCUIT</li> <li>Faulty TRANSMISSION RANGE SWITCH</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed 10km/h[6.2MPH]</li> <li>Throttle opening 12.5%</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Detect irregular range pattern (REFER TO SPECIFICATION)</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 2sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>SELECT POSITION IS REGARDED AS "D"</li> <li>INDICATOR DECISION "OFF"</li> <li>START RERAY SIGNAL "OFF"</li> <li>REVERSE LAMP SIGNAL "OFF"</li> </ul>	

[GSL 3.3/3.8]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Range decision by switch pattern</li> </ul>	<ul style="list-style-type: none"> <li>OPEN OR SHORT IN CIRCUIT</li> <li>Faulty TRANSMISSION RANGE SWITCH</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Always</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>"INHIBITOR SWITCH" pattern check.</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 10sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>SELECT POSITION IS REGARDED AS "D"</li> <li>INDICATOR DECISION "OFF"</li> <li>REVERSE LAMP SIGNAL "OFF"</li> </ul>	

**SPECIFICATION** EE4C763C**A/T RANGE PATTERN**

A/T range switch				Range swsitch	Remarks
SW1	SW2	SW3	SW4		
OFF	OFF	OFF	OFF	Pst	P start
OFF	OFF	ON	OFF	P	P
OFF	OFF	ON	ON	P-R	Intermediate
ON	OFF	ON	ON	R	R
ON	OFF	ON	OFF	N-R	Intermediate
ON	OFF	OFF	OFF	Nst	N start
ON	OFF	OFF	ON	N-D	Intermediate
ON	ON	OFF	ON	D	D
OFF	ON	OFF	ON	3	3
OFF	ON	ON	ON	2	2
OFF	ON	ON	OFF	1	1
Irregular Pattern				Other	

[OFF= 5V, ON = 0V]

MONITOR SCANTOOL DATA

EF6B38A6

1. Connect scantool to data link connector(DLC).
2. Ignition "ON" & Engine "OFF".
3. Monitor the "TRANSMISSION RANGE SWITCH" parameter on the scantool.
4. Move selector lever from "P" range to "D" range.

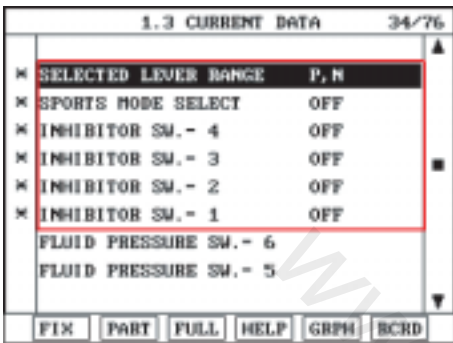


FIG.1)

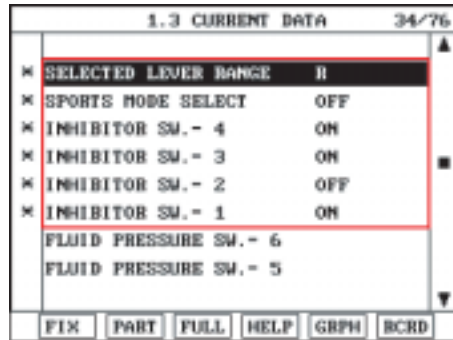


FIG.2)

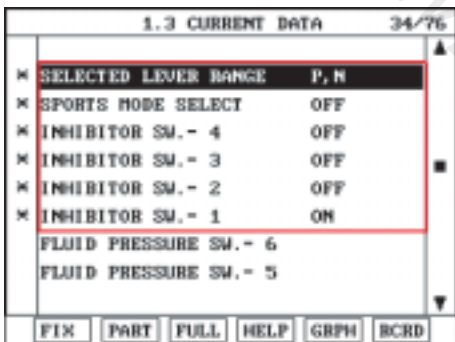


FIG.3)

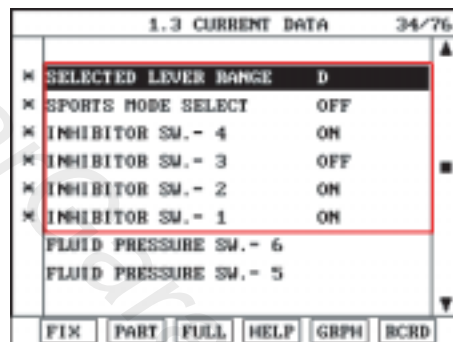


FIG.4)

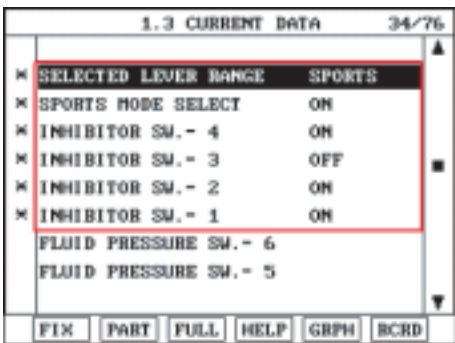


FIG.5)

- FIG.1) P RANGE
- FIG.2) R RANGE
- FIG.3) N RANGE
- FIG.4) D RANGE
- FIG.5) SPORTS MODE

**AUTOMATIC TRANSAXLE SYSTEM****AT -45**

5. Does "TRANSMISSION RANGE SWITCH" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection" procedure.

**TERMINAL & CONNECTOR INSPECTION** EDDEB23B

1. Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
2. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
3. Has a problem been found?

**YES**

Repair as necessary and go to "Verification of vehicle Repair" procedure.


**NO**

Go to "Signal circuit inspection" procedure.

**SIGNAL CIRCUIT INSPECTION** E2A878C4

1. Disconnect "C06-3/C106-3" connector.
2. Ignition "ON" & Engine "OFF".
3. Measure voltage between each terminal "1,2,3,4" of the TCM side harness connector and chassis ground.

Specification : approx. 5V

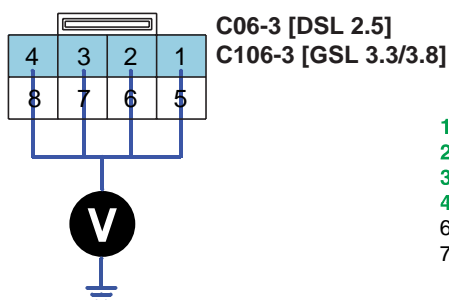

1. TRANSMISSION RANGE SWITCH SW1
2. TRANSMISSION RANGE SWITCH SW2
3. TRANSMISSION RANGE SWITCH SW3
4. TRANSMISSION RANGE SWITCH SW4
6. TURBINE SENSOR 1
7. TURBINE SENSOR 2

SBLAT6102L

4. Is voltage within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Substitute with a known-good PCM/TCM and check for proper operation. If the problem is corrected, replace PCM/TCM as necessary and go to "Verification of Vehicle Repair" procedure.

**COMPONENT INSPECTION** EE64569B

1. Ignition "OFF".
2. Disconnect "C06-3/C106-3" connector.
3. Measure the resistance between each terminal of the sensor.


Specification :

PIN No.	GND	1(S1)	2(S2)	3(S3)	4(S4)	IND
P-ST	●					P
P-R(middle)	●				●	-
R	●	●		●	●	R
N-R(middle)	●	●	●		●	-
N-ST	●	●				N
N-D(middle)	●	●	●	●		-
D	●	●	●		●	D

● : SWITCH IS ON(GND LEVER)

- : RANGE INDICATER LAMP "OFF" AND MAINTAIN PREVIOUS RANGE

[RANGE SWITCH continuity check table]

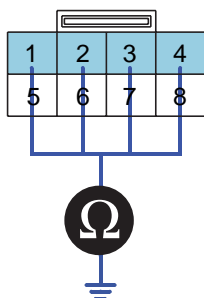

C06-3 [DSL 2.5]  
C106-3 [GSL 3.3/3.8]  
Component side

- 1. TRANSMISSION RANGE SWITCH SW1
- 2. TRANSMISSION RANGE SWITCH SW2
- 3. TRANSMISSION RANGE SWITCH SW3
- 4. TRANSMISSION RANGE SWITCH SW4
- 6. TURBINE SENSOR 1
- 7. TURBINE SENSOR 2

4. Is resistance within specifications?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Substitute with a known-good "TRANSMISSION RANGE SWITCH" and check for proper operation. If the problem is corrected, replace "TRANSMISSION RANGE SWITCH" as necessary and go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR** E53F1BDD

After a repair, it is essential to verify that the fault has been corrected.

1. Connect scantool and select "Diagnostic Trouble Codes(DTCs)" mode.
2. Using a scantool, Clear DTC.
3. Operate the vehicle within DTC Enable conditions in General information.
4. Are any DTCs present?

**YES**

Go to the applicable troubleshooting procedure.

**NO**


System performing to specification at this time.

AT -48

AUTOMATIC TRANSAXLE (A5SR1/2)

**DTC P0711 TRANSAXLE FLUID TEMPERATURE SENSOR RATIONALITY**

**COMPONENT LOCATION** EE2FDAD9

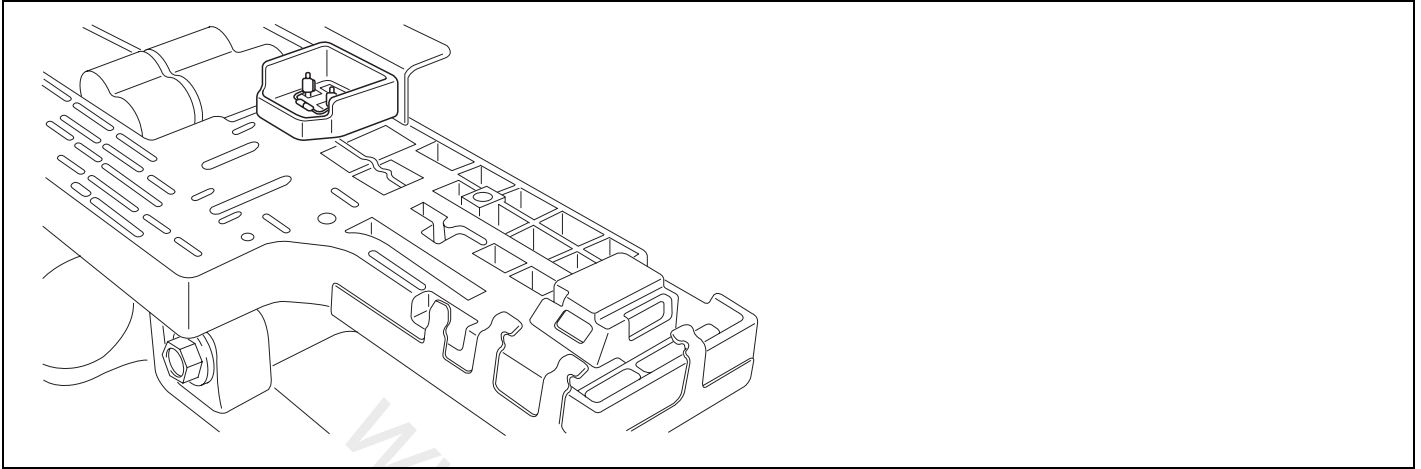

SBLAT6110L

**GENERAL DESCRIPTION** E71EE02E

The automatic transmission fluid(ATF) temperature sensor A is installed in the INHIBITOR SWITCH and fluid(ATF) temperature sensor B is installed in the valve body. Sensor "B" is measure the oil temperature that inflowed in from Torque convertor. This sensors use a thermistor whose resistance changes according to the temperature changes. The TCM supplies a 5V reference voltage to the sensor, and the output voltage of the sensor changes when the ATF temperature varies. The automatic transmission fluid(ATF) temperature provides very important data for the TCM's control of the Torque Converter Clutch, and is also used for many other purposes.

**DTC DESCRIPTION** EA59CCAF

This DTC is for checking sensor failure. This code is set if the temperture data from Oil Temperture sensor is fixed between -4°F and 32°F or 32°F and 68°F for 10min. after driving a behicle.



## AUTOMATIC TRANSAXLE SYSTEM

AT -49

## DTC DETECTING CONDITION EFEB37C

[DSL 2.5]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Fluctuation of A/T fluid temperature</li> </ul>	ATF T/S : Automatic Transmission Fluid Temperature Sensor  <ul style="list-style-type: none"> <li>OPEN OR SHORT IN CIRCUIT</li> <li>Faulty ATF T/S 1</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>A/T range switch is D range</li> <li>Vehicle speed 6.2MPH(10km/h)</li> <li>Throttle opening 12.5%</li> <li>Engine speed 305rpm</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>-4°F A/T fluid temperature &lt; 32°F for cumulative total of 10 minutes or 32°F A/T fluid temperature &lt; 68°F for cumulative total of 10 minutes(refer fig.2 Diagnostic logic for ATF temp. sensor)</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>10minutes accumulative total</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>S-MODE is Inhibited</li> <li>5th gear is Inhibited</li> </ul>	

[GSL 3.3/3.8]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Rationality</li> </ul>	ATF T/S : Automatic Transmission Fluid Temperature Sensor  <ul style="list-style-type: none"> <li>OPEN OR SHORT IN CIRCUIT</li> <li>Faulty ATF T/S 1</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Always</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Oil temp. at IG "ON" - Coolant temp. at IG "ON" &gt; 10°C</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 2 sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Fluid temperature is regarded as 80°C</li> </ul>	

## SPECIFICATION E42BB6FD

	PIN No	TEMPERATURE (°F)	RESISTANCE (K )	VOLTAGE (V)
ATF 1	C06-1/C106-1 : 9 ~ Earth	32	Approx. 15	Approx. 3.3
		68	Approx. 6.5	Approx. 2.7
		176	Approx. 0.9	Approx. 0.9
ATF 2	C06-2/C106-2 : 1 ~ Earth	32	Approx. 10.5	Approx. 3.3
		68	Approx. 4.3	Approx. 2.5
		176	Approx. 0.5	Approx. 0.7

**MONITOR SCANTOOL DATA** EEF3D5D0

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "TRANSAXLE FLUID TEMPERATURE SENSOR "1" parameter on the scantool.

Specification : Increasing Gradually

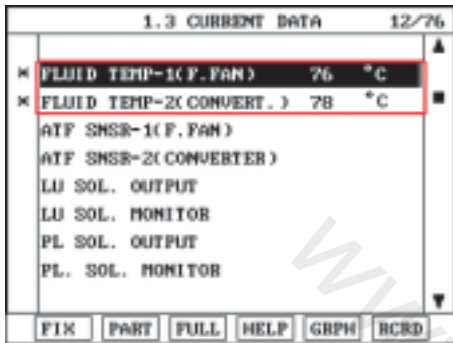


FIG.1)

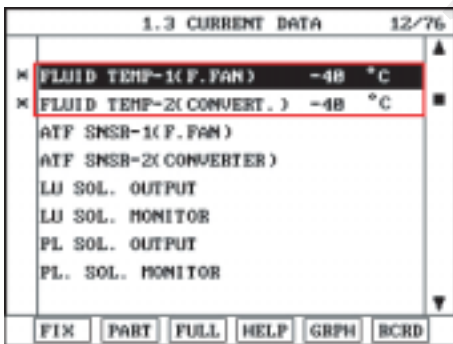


FIG.2)

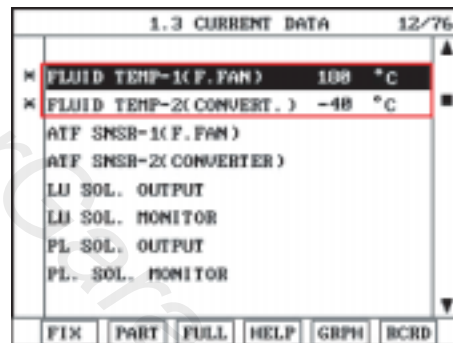


FIG.3)

FIG.1) Normal

FIG.2) Signal harness open

FIG.3) Signal harness ground short

4. Does "TRANSMISSION FLUID TEMPERATURE SENSOR " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection" procedure.

SBLAT6111L

**AUTOMATIC TRANSAXLE SYSTEM****AT -51****TERMINAL & CONNECTOR INSPECTION** EEB04194

1. Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
2. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
3. Has a problem been found?

**YES**

Repair as necessary and go to "Verification of vehicle Repair" procedure.

**NO**

Go to "Signal circuit inspection" procedure.


**SIGNAL CIRCUIT INSPECTION** EF9D4BA0

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "ATF 1[C06-1/C106-1] and ATF 2[C06-2/C106-2]" connector.
3. Measure the voltage between terminal "9" of the "ATF 1 [C06-1/C106-1]" harness connector and chassis ground.

---

Specification : Approx. 5 V

---

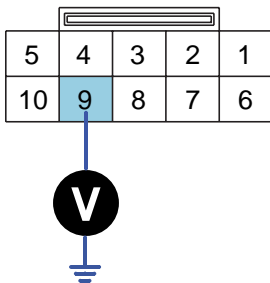

**C06-1 [DSL 2.5]**  
**C106-1 [GSL 3.3/3.8]**

- 1.VIGN-OUT 1
- 2.DATA BIT 1
- 3.PSB 2
- 4.PSC 2
- 5.SEL 1
- 6.SEL 2
- 7.SEL 3
- 8.GND
- 9.ATF 1**
- 10.VSP 1

SBLAT6112L

4. Is voltage within specifications?

**YES**

Go to "Component Inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Go to "CHECK TCM" of the "Component Inspection" procedure.

**COMPONENT INSPECTION** E41CBBC3


## 1. CHECK "TRANSMISSION FLUID TEMPERATURE SENSOR"

- 1) Ignition "OFF" .
- 2) Disconnect the "ATF 1 [C06-1/C106-1] and ATF 2 [C06-2/C106-2]" connector.
- 3) Measure the resistance between terminal "9" of the "ATF 1 [C06-1/C106-1]" harness connector and chassis ground.

Specification : Refer to " Reference data"

**[REFERENCE DATA]**

	PIN No	TEMPERATURE (°F)	RESISTANCE (K )	VOLTAGE (V)
ATF 1	C06-1/C106-1 : 9 ~ Earth	32	Approx. 15	Approx. 3.3
		68	Approx. 6.5	Approx. 2.7
		176	Approx. 0.9	Approx. 0.9
ATF 2	C06-2/C106-2 : 1 ~ Earth	32	Approx. 10.5	Approx. 3.3
		68	Approx. 4.3	Approx. 2.5
		176	Approx. 0.5	Approx. 0.7

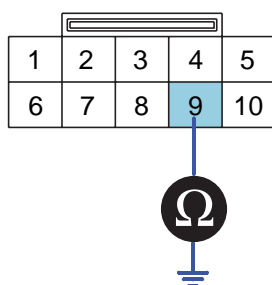

**C06-1 [DSL 2.5]  
C106-1 [GSL 3.3/3.8]**  
Component side

- 1.VIGN-OUT 1
- 2.DATA BIT 1
- 3.PSB 2
- 4.PSC 2
- 5.SEL 1
- 6.SEL 2
- 7.SEL 3
- 8.GND
- 9.ATF 1**
- 10.VSP 1

SBLAT6113L

- 4) Is resistance within specifications?

**YES**

Go to "CHECK PCM/TCM" as below.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. Replace "TRANSMISSION FLUID TEMPERATURE SENSOR 1" as necessary and Go to "Verification of Vehicle Repair" procedure.

## 2. CHECK TCM

- 1) Ignition "ON" & Engine "OFF".
- 2) Disconnect the "ATF 1 [C06-1/C106-1]" connector.
- 3) Install scantool and select a SIMU-SCAN.
- 4) Simulate voltage (0 ~ 5V) to "TRANSMISSION FLUID TEMPERATURE SENSOR 1, 2" signal circuit.

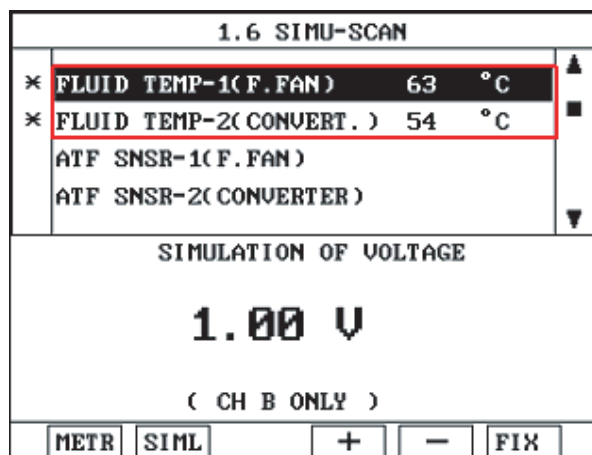


FIG.1)

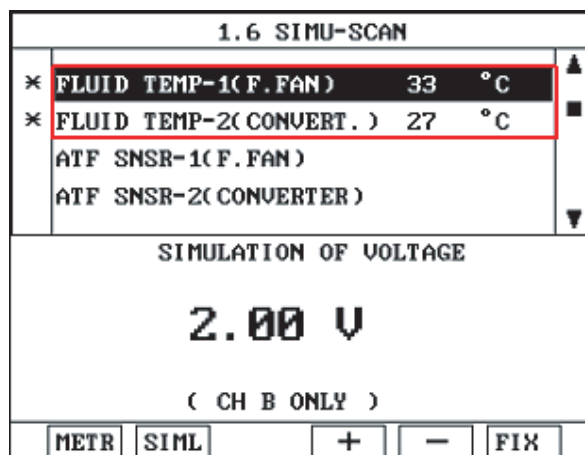


FIG.2)

FIG.1) INPUT 1.02V → 63°C

FIG.2) INPUT 2.00V → 33°C

※ The values are subject to change according to vehicle model or conditions.

SBLAT6114L

- 5) Is FLUID TEMP. SENSOR signal value changed according to simulation voltage?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.

## VERIFICATION OF VEHICLE REPAIR E680C266

After a repair, it is essential to verify that the fault has been corrected.

1. Connect scantool and select "Diagnostic Trouble Codes(DTCs)" mode.
2. Using a scantool, Clear DTC.
3. Operate the vehicle within DTC Enable conditions in General information.
4. Are any DTCs present?

**YES**

Go to the applicable troubleshooting procedure.

**NO**

System performing to specification at this time.

AT -54

AUTOMATIC TRANSAXLE (A5SR1/2)

**DTC P0712 FLUID(OIL) TEMPERATURE SENSOR CIRCUIT - LOW****COMPONENT LOCATION** E48B298D

Refer to DTC P0711.

**GENERAL DESCRIPTION** EA6EB3E2

Refer to DTC P0711.

**DTC DESCRIPTION** EFD3AE8

Refer to DTC P0711.

**DTC DETECTING CONDITION** E07AEA21

[DSL 2.5]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Fluctuation of A/T fluid temperature</li> </ul>	ATF T/S :Automatic Transmission Fluid Temperature Sensor <ul style="list-style-type: none"> <li>OPEN IN CIRCUIT</li> <li>Faulty ATF T/S 1</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>A/T range switch is D range</li> <li>Vehicle speed 6.2MPH(10km/h)</li> <li>Throttle opening 12.5%</li> <li>Engine speed 305rpm</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>A/T fluid is below then -4°F for 10 minutes (refer fig.2 Diagnostic logic for ATF temp. sensor)</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>10minutes accumulative total</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>S-MODE is Inhibited</li> <li>5th gear is Inhibite</li> </ul>	

[GSL 3.3/3.8]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check the voltage range</li> </ul>	ATF T/S : Automatic Transmission Fluid Temperature Sensor <ul style="list-style-type: none"> <li>OPEN IN CIRCUIT</li> <li>Faulty ATF T/S 1</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Battery voltage &gt; 10V</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Input voltage &lt; 0.05V</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 2 sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Fluid temperature is regarded as 80°C</li> </ul>	

**SPECIFICATION** EA6B3DFD

Refer to DTC P0711.

**MONITOR SCANTOOL DATA** E2CB1D26

Refer to DTC P0711.


**AUTOMATIC TRANSAXLE SYSTEM****AT -55****TERMINAL & CONNECTOR INSPECTION** E23BB628

Refer to DTC P0711.

**SIGNAL CIRCUIT INSPECTION** E4D9E65E

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "ATF 1[C06-1/C106-1] and ATF 2[C06-2/C106-2]" connector.
3. Measure the voltage between terminal "9" of the "ATF 1 [C06-1/C106-1]" harness connector and chassis ground.

Specification : Approx. 5 V

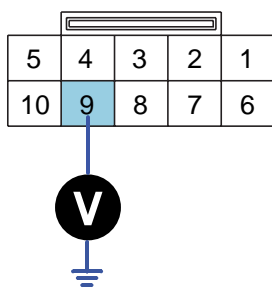

C06-1 [DSL 2.5]  
C106-1 [GSL 3.3/3.8]

- 1.VIGN-OUT 1
- 2.DATA BIT 1
- 3.PSB 2
- 4.PSC 2
- 5.SEL 1
- 6.SEL 2
- 7.SEL 3
- 8.GND
- 9.ATF 1
- 10.VSP 1

SBLAT6112L

4. Is voltage within specifications?

**YES**

Go to "Component Inspection" procedure.

**NO**

Check for open in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure.

**COMPONENT INSPECTION** E7BC367A

Refer to DTC P0711.

**VERIFICATION OF VEHICLE REPAIR** ED4E0B63

Refer to DTC P0711.

AT -56

AUTOMATIC TRANSAXLE (A5SR1/2)

**DTC P0713 FLUID(OIL) TEMPERATURE SENSOR CIRCUIT - HIGH****COMPONENT LOCATION** E2AA6EFF

Refer to DTC P0711.

**GENERAL DESCRIPTION** E2FC2200

Refer to DTC P0711.

**DTC DESCRIPTION** EC33B44D

Refer to DTC P0711.

**DTC DETECTING CONDITION** E96422CB

[DSL 2.5]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Fluctuation of A/T fluid temperature</li> </ul>	ATF T/S :Automatic Transmission Fluid Temperature Sensor <ul style="list-style-type: none"> <li>OPEN IN CIRCUIT</li> <li>Faulty ATF T/S 1</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>A/T range switch is D range</li> <li>Vehicle speed 6.2MPH(10km/h)</li> <li>Throttle opening 12.5%</li> <li>Engine speed 305rpm</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>A/T fluid is over than 180degrees for 10 minutes(refer fig.2 Diagnostic logic for ATF temp. sensor)</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>10minutes accumulative total</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>S-MODE is Inhibited</li> <li>5th gear is Inhibite</li> </ul>	

[GSL 3.3/3.8]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check the voltage range</li> </ul>	ATF T/S : Automatic Transmission Fluid Temperature Sensor <ul style="list-style-type: none"> <li>OPEN OR SHORT IN CIRCUIT</li> <li>Faulty ATF T/S 1</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Oil temp. at IG "ON" -39°C</li> <li>Engine speed &gt; 1000rpm</li> <li>Output speed 500rpm</li> <li>Engine coolant temp. 70°C</li> <li>Delay time = 160sec</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Input voltage &gt; 4.8V</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>10 minutes accumulative total</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Fluid temperature is regarded as 80°C</li> </ul>	



## **AUTOMATIC TRANSAXLE SYSTEM**

**AT -57**

### **SPECIFICATION** EF876B5E

Refer to DTC P0711.

### **MONITOR SCANTOOL DATA** EC65CE6B

Refer to DTC P0711.

### **TERMINAL & CONNECTOR INSPECTION** EFC0B06F

Refer to DTC P0711.

### **SIGNAL CIRCUIT INSPECTION** ECAD37FF

Refer to DTC P0712.

### **COMPONENT INSPECTION** E438B851


Refer to DTC P0711.

### **VERIFICATION OF VEHICLE REPAIR** E5CF477D

Refer to DTC P0711.

**DTC P0716 INPUT SPEED SENSOR RANGE/PERFORMANCE**

**COMPONENT LOCATION** EB7BFDFE

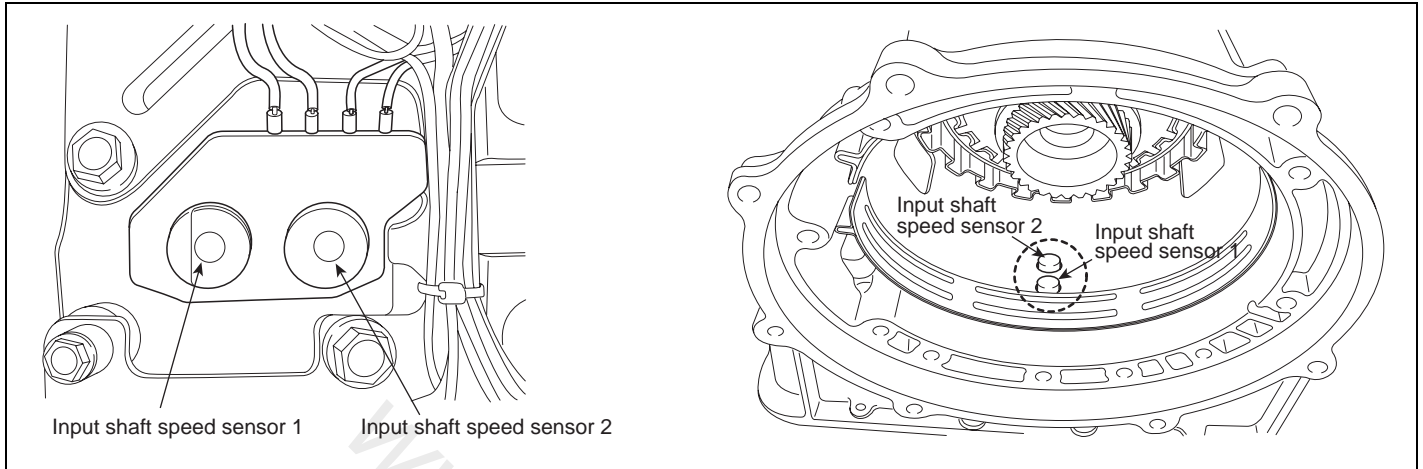

SBLAT6120L

**GENERAL DESCRIPTION** E3ABBCE0

The Input Sensor of RXC Auto transmission is composed of S1(Sensor1) and S2(Sensor2). S1 inputs signal to TCM only at 4th gear and S2 does at 1st, 2nd, 3rd, 4th and 5th gear. Therefore, sensing pulse frequency outputted from 2 of signal, TCM calculates Inputshaft speed and compute Turbine rotation. This value is mainly used to control the optimum fluid pressure during shifting.

**DTC DESCRIPTION** EF6DAECB

The TCM sets this code if an output pulse-signal is not detected, from the INPUT SPEED SENSOR 1 or 2, when the vehicle is running faster than 24.85MPH(40km/h). The Fail-Safe function will be set by the TCM if this code is detected.

**DTC DETECTING CONDITION** E6F78E7D

[DSL 2.5]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Speed rationality check</li> </ul>	<ul style="list-style-type: none"> <li>Signal circuit is open or short</li> <li>Sensor power circuit is open</li> <li>Sensor ground circuit is open</li> <li>Faulty INPUT SPEED SENSOR 1</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed &gt; 24.85MPH(40km/h)</li> <li>Engine speed &gt; 1500 rpm</li> <li>Throttle opening 12.5%</li> <li>A/T range switch is D range</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Input speed &lt; 600rpm</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>more than 5sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>"Nt" is regarded as 600rpm(Nt = 600rpm)</li> <li>S-MODE is Inhibited</li> <li>5th gear is Inhibited</li> </ul>	

## AUTOMATIC TRANSAXLE SYSTEM

AT -59

[GSL 3.3/3.8]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Speed rationality check</li> </ul>	<ul style="list-style-type: none"> <li>Signal circuit is open or short</li> <li>Sensor power circuit is open</li> <li>Sensor ground circuit is open</li> <li>Faulty INPUT SPEED SENSOR 1</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Battery voltage &gt; 10V</li> <li>Output speed &gt; 200rpm</li> <li>Engine speed &gt; 700 rpm</li> <li>State of "TRANSMISSION" is "STATIC"</li> <li>The time after the last shift was finished 500sec</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Input speed1 &gt; 50rpm</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 2sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>"Input speed" is regarded as 600rpm(Nt = 600rpm)</li> <li>Shift prevention over 4th gear</li> <li>Prevention of manual shift</li> <li>Prevention of pressure adaptation</li> </ul>	

## SPECIFICATION

E5ACEF55

NAME	PIN NO	Measurement condition	Spec
Turbine Sensor1	6	<ul style="list-style-type: none"> <li>1gear</li> <li>12.42MPH(20km/h)</li> <li>Idle SW OFF</li> </ul>	Approx. 1.1K(Hz)
Turbine Sensor2	7	<ul style="list-style-type: none"> <li>4gear</li> <li>31MPH(50km/h)</li> <li>Idle SW OFF</li> </ul>	

 **CAUTION**

Scan tool data link cable is maintain to connecting condition.

## SIGNAL WAVEFORM &amp; DATA

EB50540C

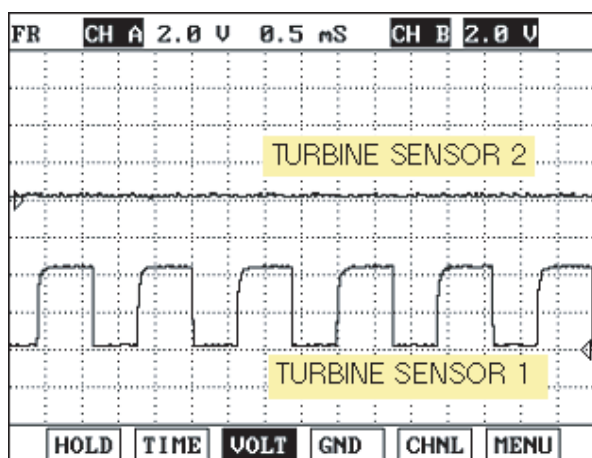


FIG.1)

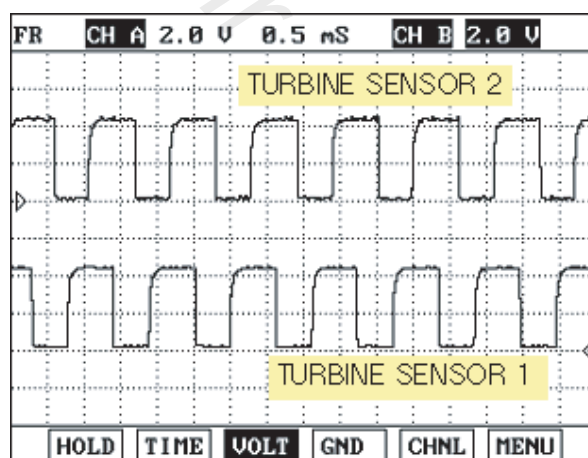


FIG.2)

FIG.1) 1GEAR

FIG.2) 4 GEAR

Caution:TURBINE SENSOR 2 CAN BE DETECTED 5V IN FIG.1

SBLAT6121L

**MONITOR SCANTOOL DATA** E1F16A86

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "INPUT SPEED SENSOR 1" parameter on the scantool.
4. Driving at speed of over 12.42MPH(20km/h) at 1gear.

Specification : Increasing Gradually

1.3 CURRENT DATA		05/76
✖	TURBIN SPEED SENSOR	704 rpm
✖	ENGINE SPEED	736 rpm
	DAMPER CLUTCH SL.RPM	
	ACCEL. OPEN SIGNAL	
	TPS OPEN SIGNAL	
	ACCEL.FULL SW(CAL.)	
	ACCEL.IDLE SW(CAL.)	
	FLUID TEMP-1(F.FAN)	

FIX PART FULL HELP GRPH RCRD

FIG.1)

1.3 CURRENT DATA		05/76
✖	TURBIN SPEED SENSOR	3744 rpm
✖	ENGINE SPEED	3744 rpm
	DAMPER CLUTCH SL.RPM	
	ACCEL. OPEN SIGNAL	
	TPS OPEN SIGNAL	
	ACCEL.FULL SW(CAL.)	
	ACCEL.IDLE SW(CAL.)	
	FLUID TEMP-1(F.FAN)	

FIX PART FULL HELP GRPH RCRD

FIG.2)

FIG.1) Low speed  
FIG.2) High speed

SBLAT6122L

5. Does "INPUT SPEED SENSOR" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection" procedure.

**AUTOMATIC TRANSAXLE SYSTEM****AT -61****TERMINAL & CONNECTOR INSPECTION** EB2FE4FA

1. Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
2. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
3. Has a problem been found?

**YES**

Repair as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Signal circuit inspection" procedure.


**SIGNAL CIRCUIT INSPECTION** E9BE3DEC

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "C06-3/C106-3" connector.
3. Measure voltage between terminal "6" of the C06-3/C106-3 harness connector and chassis ground.

---

Specification : Approx. 5 V

---

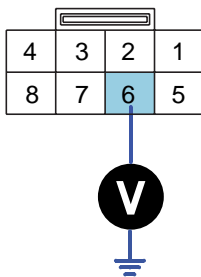

C06-3 [DSL 2.5]  
C106-3 [GSL 3.3/3.8]

1. TRANSMISSION RANGE SWITCH SW1
2. TRANSMISSION RANGE SWITCH SW2
3. TRANSMISSION RANGE SWITCH SW3
4. TRANSMISSION RANGE SWITCH SW4
6. **TURBINE SENSOR 1**
7. TURBINE SENSOR 2

SBLAT6123L

4. Is voltage within specifications?

**YES**

Go to "Power supply circuit inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Go to "Check TCM" of the "Component Inspection" procedure.


**POWER SUPPLY CIRCUIT INSPECTION** E254C4E3

1. Remove "OIL PAN".
2. Ignition "ON", Engine "OFF".
3. Connect the "C06-3/C106-3 and Shift CM" connector.
4. Measure resistance between terminal "4" of the TURBINE SENSOR harness connector and chassis ground.

---

Specification : approx. 12V

---

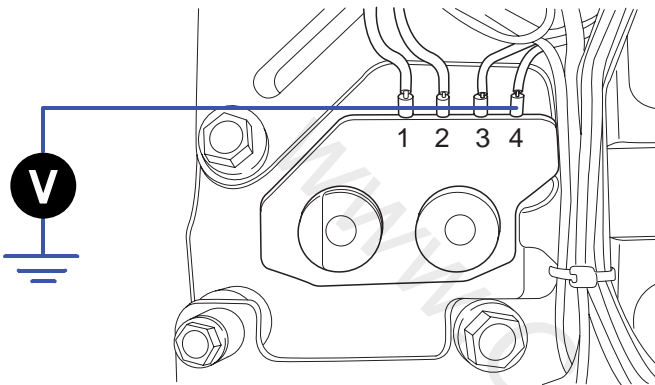

SBLAT6124L

5. Is voltage within specifications ?

**YES**

Go to "Ground circuit inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If power circuit in harness is OK, Substitute with a known-good Shift CM and check for proper operation. If the problem is corrected, replace Shift CM as necessary and go to "Verification of Vehicle Repair" procedure.

## AUTOMATIC TRANSAXLE SYSTEM

AT -63


### GROUND CIRCUIT INSPECTION EFFB9D41

1. Remove "OIL PAN".
2. Engine "OFF".
3. Disconnect the "C06-3/C106-3 and Shift CM" connector.
4. Measure resistance between terminal "3" of the INPUT SPEED SENSOR harness connector and chassis ground.

---

Specification : approx. 0

---

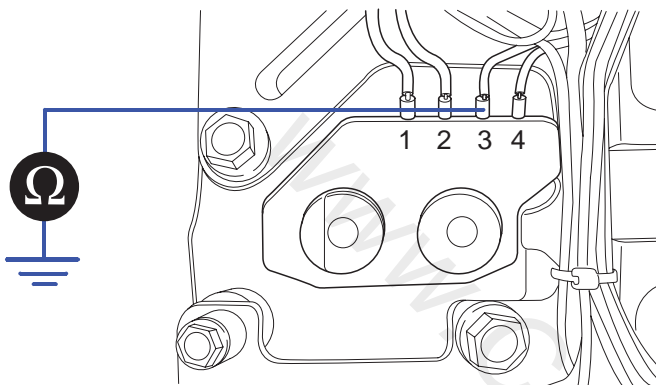

SBLAT6125L

5. Is resistance within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure.

**COMPONENT INSPECTION** EFBD73FE

1. Check "TURBINE SENSOR 2"


- 1) Ignition "ON" & Engine "OFF".
- 2) Connect the "C06-3/C106-3" connector.
- 3) Measure Frequency between terminal "6" of the C06-3/C106-3 harness connector and chassis ground.

Specification :

NAME	PIN NO	Measurement condition	Spec
Turbine Sensor1	6	<ul style="list-style-type: none"> <li>• 1gear</li> <li>• 12.42MPH(20km/h)</li> <li>• Idle SW OFF</li> </ul>	Approx. 1.1K(Hz)
Turbine Sensor2	7	<ul style="list-style-type: none"> <li>• 4gear</li> <li>• 31MPH(50km/h)</li> <li>• Idle SW OFF</li> </ul>	

**CAUTION**

Scan tool data link cable is maintain to connecting condition.

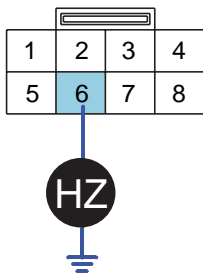

C06-3 [DSL 2.5]  
C106-3 [GSL 3.3/3.8]  
Component side

1. TRANSMISSION RANGE SWITCH SW1
2. TRANSMISSION RANGE SWITCH SW2
3. TRANSMISSION RANGE SWITCH SW3
4. TRANSMISSION RANGE SWITCH SW4
6. **TURBINE SENSOR 1**
7. TURBINE SENSOR 2

SBLAT6126L

4) Is frequency within specifications?

**YES**

Go to "CHECK TCM " as below.

**NO**

Replace "TURBINE SENSOR" as necessary and Go to "Verification of Vehicle Repair" procedure.

2. CHECK TCM

- 1) Ignition "ON" & Engine "OFF".
- 2) Disconnect "C06-3/C106-3" connector.
- 3) Install scantool and select a SIMU-SCAN.
- 4) Simulate frequency to TURBINE SENSOR 1 signal circuit.



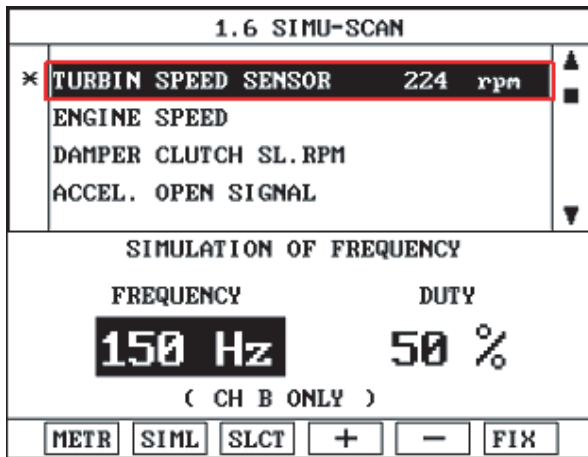


FIG.1)

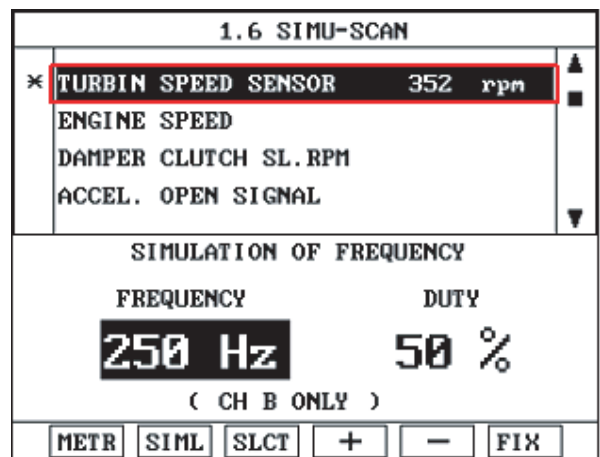


FIG.2)

FIG.1) INPUT 150HZ → 224rpm

FIG.2) INPUT 250HZ → 352rpm

※ The values are subject to change according to vehicle model or conditions.

SBLAT6127L

- 5) Is "TURBINE SENSOR 1" signal value changed according to simulation frequency?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.

## VERIFICATION OF VEHICLE REPAIR E1EE0F5E

After a repair, it is essential to verify that the fault has been corrected.

1. Connect scantool and select "Diagnostic Trouble Codes(DTCs)" mode.
2. Using a scantool, Clear DTC.
3. Operate the vehicle within DTC Enable conditions in General information.
4. Are any DTCs present?

**YES**


Go to the applicable troubleshooting procedure.

**NO**

System performing to specification at this time.

**DTC P0717 INPUT SPEED SENSOR CIRCUIT - NO SIGNAL**

**COMPONENT LOCATION** E92DD061

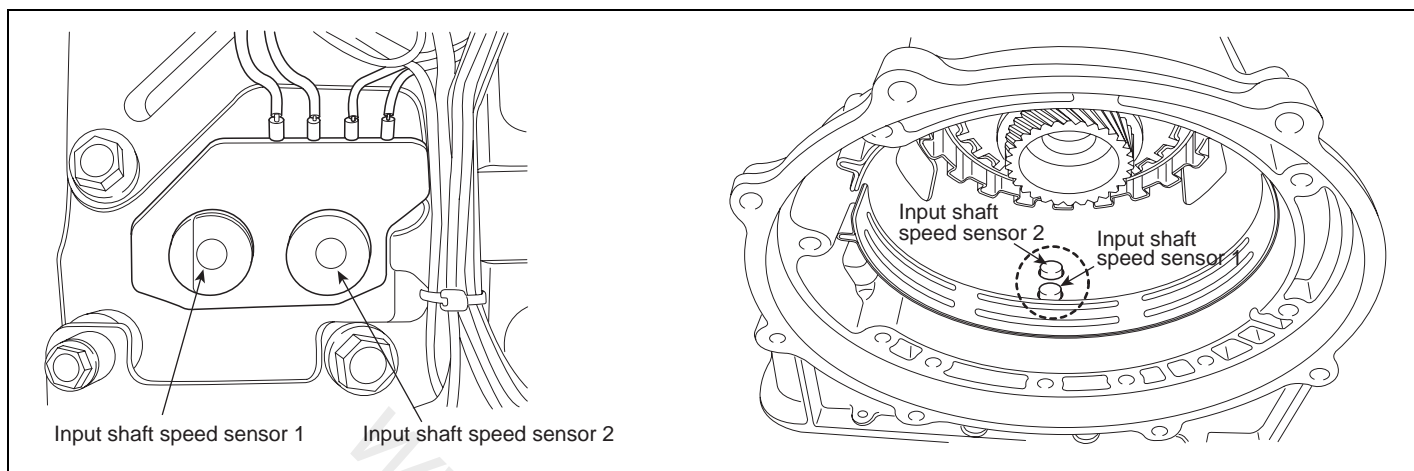

SBLAT6120L

**GENERAL DESCRIPTION** ECF4EAEA

The Input Sensor of RXC Auto transmission is composed of S1(Sensor1) and S2(Sensor2). S1 inputs signal to TCM only at 4th gear and S2 does at 1st, 2nd, 3rd, 4th and 5th gear. Therefore, sensing pulse frequency outputted from 2 of signal, TCM calculates Inputshaft speed and compute Turbine rotation. This value is mainly used to control the optimum fluid pressure during shifting.

**DTC DESCRIPTION** E5DB565D

The TCM sets this code if an output pulse-signal is not detected, from the INPUT SPEED SENSOR 1 or 2, when the vehicle is running faster than 24.85MPH(40km/h). The Fail-Safe function will be set by the TCM if this code is detected.

**DTC DETECTING CONDITION** EF2A0530

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Speed rationality check</li> </ul>	<ul style="list-style-type: none"> <li>Signal circuit is open or short</li> <li>Sensor power circuit is open</li> <li>Sensor ground circuit is open</li> <li>Faulty INPUT SPEED SENSOR 1</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Battery voltage &gt; 10V</li> <li>Output speed &gt; 1000rpm</li> <li>Engine speed(Only current gear is the 1st gear) &gt; 3000 rpm</li> <li>Engine speed(2.3.4.5 gear) &gt; 700 rpm</li> <li>Position lever = "D"</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Input speed1 50rpm</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 2sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>"Input speed" is regarded as 600rpm(Nt = 600rpm)</li> <li>Shift prevention over 4th gear</li> <li>Prevention of manual shift</li> <li>Prevention of pressure adaptation</li> </ul>	

**AUTOMATIC TRANSAXLE SYSTEM**

**AT -67**

**SPECIFICATION** E0AA6D77

NAME	PIN NO	Measurement condition	Spec
Turbine Sensor1	6	<ul style="list-style-type: none"> <li>• 1gear</li> <li>• 12.42MPH(20km/h)</li> <li>• Idle SW OFF</li> </ul>	Approx. 1.1K(Hz)
Turbine Sensor2	7	<ul style="list-style-type: none"> <li>• 4gear</li> <li>• 31MPH(50km/h)</li> <li>• Idle SW OFF</li> </ul>	

**CAUTION**

Scan tool data link cable is maintain to connecting condition.

**SIGNAL WAVEFORM** EA4D3AAD

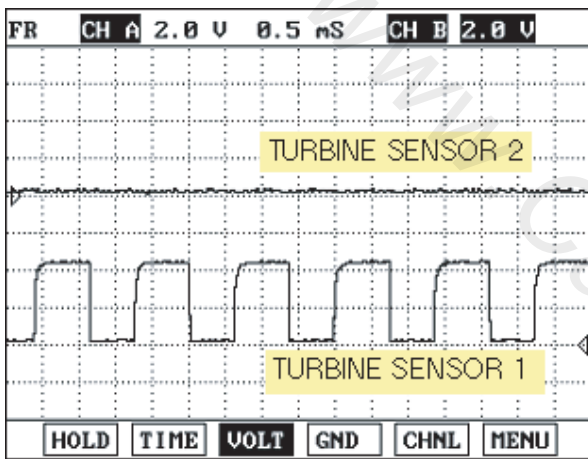


FIG.1)

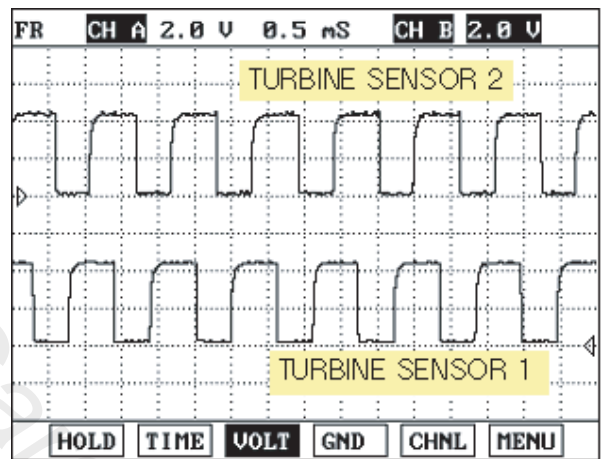


FIG.2)

FIG.1) 1GEAR  
FIG.2) 4 GEAR

Caution: TURBINE SENSOR 2 CAN BE DETECTED 5V IN FIG.1

SBLAT6121L

**MONITOR SCANTOOL DATA** E5FF0AEF

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "INPUT SPEED SENSOR 1" parameter on the scantool.
4. Driving at speed of over 12.42MPH(20km/h) at 1gear.

Specification : Increasing Gradually

1.11 CURRENT DATA 01/59	
ENGINE SPEED	786 rpm
INPUT SPEED(PC-A)	658.8rpm
TURBIN SPEED SENDOR 1	8.8 rpm
TURBIN SPEED SENDOR 2	628.8rpm
TCC SLIP RPM	25.8 rpm
CURRENT GEAR POSITION	P N
SELECTED LEVER RANGE	P
INHIBITOR SWITCH 1	

FIG.1)

1.11 CURRENT DATA 01/59	
ENGINE SPEED	661 rpm
INPUT SPEED(PC-A)	8.8 rpm
TURBIN SPEED SENDOR 1	8.8 rpm
TURBIN SPEED SENDOR 2	8.8 rpm
TCC SLIP RPM	658.8rpm
CURRENT GEAR POSITION	REVERSE
SELECTED LEVER RANGE	R
INHIBITOR SWITCH 1	

FIG.2)

1.11 CURRENT DATA 01/59	
ENGINE SPEED	656 rpm
INPUT SPEED(PC-A)	8.8 rpm
TURBIN SPEED SENDOR 1	8.8 rpm
TURBIN SPEED SENDOR 2	8.8 rpm
TCC SLIP RPM	654.8rpm
CURRENT GEAR POSITION	1 GEAR
SELECTED LEVER RANGE	D
INHIBITOR SWITCH 1	

FIG.3)

1.11 CURRENT DATA 01/59	
ENGINE SPEED	1927 rpm
INPUT SPEED(PC-A)	1898.rpm
TURBIN SPEED SENDOR 1	8.8 rpm
TURBIN SPEED SENDOR 2	1887.rpm
TCC SLIP RPM	14.8 rpm
CURRENT GEAR POSITION	1 GEAR
SELECTED LEVER RANGE	D
INHIBITOR SWITCH 1	

FIG.4)

1.11 CURRENT DATA 01/59	
ENGINE SPEED	1005 rpm
INPUT SPEED(PC-A)	1862.rpm
TURBIN SPEED SENDOR 1	8.8 rpm
TURBIN SPEED SENDOR 2	1857.rpm
TCC SLIP RPM	26.8 rpm
CURRENT GEAR POSITION	2 GEAR
SELECTED LEVER RANGE	D
INHIBITOR SWITCH 1	

FIG.5)

1.11 CURRENT DATA 01/59	
ENGINE SPEED	2148 rpm
INPUT SPEED(PC-A)	2116.rpm
TURBIN SPEED SENDOR 1	8.8 rpm
TURBIN SPEED SENDOR 2	2879.rpm
TCC SLIP RPM	32.8 rpm
CURRENT GEAR POSITION	3 GEAR
SELECTED LEVER RANGE	D
INHIBITOR SWITCH 1	

FIG.6)

1.11 CURRENT DATA 01/59	
ENGINE SPEED	1907 rpm
INPUT SPEED(PC-A)	1986.rpm
TURBIN SPEED SENDOR 1	1838.rpm
TURBIN SPEED SENDOR 2	3822.rpm
TCC SLIP RPM	8.8 rpm
CURRENT GEAR POSITION	4 GEAR
SELECTED LEVER RANGE	D
INHIBITOR SWITCH 1	

FIG.7)

1.11 CURRENT DATA 01/59	
ENGINE SPEED	2838 rpm
INPUT SPEED(PC-A)	2848.rpm
TURBIN SPEED SENDOR 1	8.8 rpm
TURBIN SPEED SENDOR 2	2872.rpm
TCC SLIP RPM	8.8 rpm
CURRENT GEAR POSITION	5 GEAR
SELECTED LEVER RANGE	D
INHIBITOR SWITCH 1	

FIG.8)

FIG.1) "P,N" range

FIG.2) "R" range

FIG.3) "D" range 1st gear, vehicle speed = 0

FIG.4) "D" range 1st gear

FIG.5) "D" range 2nd gear

FIG.6) "D" range 3rd gear

FIG.7) "D" range 4th gear

FIG.8) "D" range 5th gear

**AUTOMATIC TRANSAXLE SYSTEM****AT -69**

5. Does "INPUT SPEED SENSOR" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection" procedure.

**TERMINAL & CONNECTOR INSPECTION** EC63CFB6

1. Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
2. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
3. Has a problem been found?

**YES**

Repair as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Signal circuit inspection" procedure.


**SIGNAL CIRCUIT INSPECTION** EABF6385

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "C106-3" connector.
3. Measure voltage between terminal "6" of the C106-3 harness connector and chassis ground.

---

Specification : Approx. 5 V

---

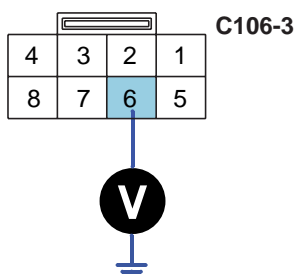

1. TRANSMISSION RANGE SWITCH SW1
2. TRANSMISSION RANGE SWITCH SW2
3. TRANSMISSION RANGE SWITCH SW3
4. TRANSMISSION RANGE SWITCH SW4
6. **TURBINE SENSOR 1**
7. TURBINE SENSOR 2

SBLAT6204L

4. Is voltage within specifications?

**YES**

Go to "Power supply circuit inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Go to "Check TCM" of the "Component Inspection" procedure.


**POWER SUPPLY CIRCUIT INSPECTION** EDD609D6

1. Remove "OIL PAN".
2. Ignition "ON", Engine "OFF".
3. Connect the "C106-3 and Shift CM" connector.
4. Measure resistance between terminal "4" of the TURBINE SENSOR harness connector and chassis ground.

---

Specification : approx. 12V

---

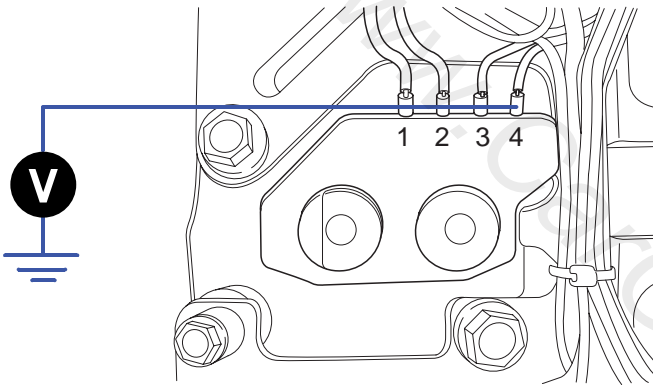

SBLAT6124L

5. Is voltage within specifications ?

**YES**

Go to "Ground circuit inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If power circuit in harness is OK, Substitute with a known-good Shift CM and check for proper operation. If the problem is corrected, replace Shift CM as necessary and go to "Verification of Vehicle Repair" procedure.


**GROUND CIRCUIT INSPECTION** EB485BFF

1. Remove "OIL PAN".
2. Engine "OFF".
3. Disconnect the "C106-3 and Shift CM" connector.
4. Measure resistance between terminal "3" of the INPUT SPEED SENSOR harness connector and chassis ground.

---

Specification : approx. 0

---

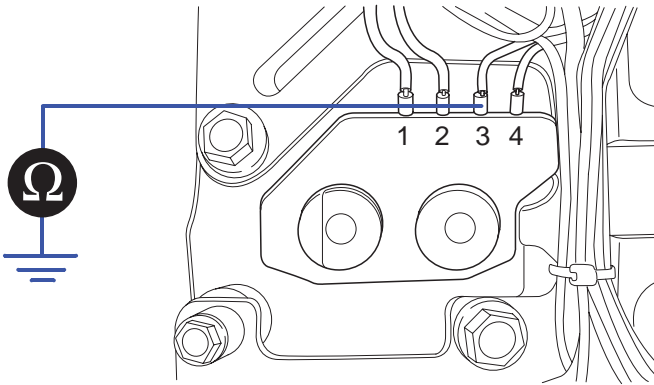

SBLAT6125L

5. Is resistance within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure.

## COMPONENT INSPECTION ED2F6EB7

1. Check "TURBINE SENSOR 2"

- 1) Ignition "ON" & Engine "OFF".
- 2) Connect the "C106-3" connector.
- 3) Measure Frequency between terminal "6" of the C106-3 harness connector and chassis ground.


Specification :

NAME	PIN NO	Measurement condition	Spec
Turbine Sensor1	6	<ul style="list-style-type: none"> <li>• 1gear</li> <li>• 12.42MPH(20km/h)</li> <li>• Idle SW OFF</li> </ul>	Approx. 1.1K(Hz)
Turbine Sensor2	7	<ul style="list-style-type: none"> <li>• 4gear</li> <li>• 31MPH(50km/h)</li> <li>• Idle SW OFF</li> </ul>	



### CAUTION

Scan tool data link cable is maintain to connecting condition.

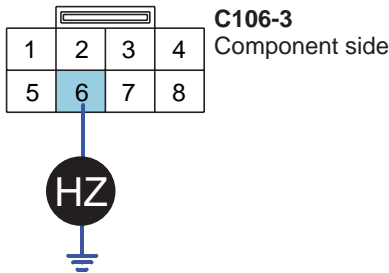

1. TRANSMISSION RANGE SWITCH SW1
2. TRANSMISSION RANGE SWITCH SW2
3. TRANSMISSION RANGE SWITCH SW3
4. TRANSMISSION RANGE SWITCH SW4
6. **TURBINE SENSOR 1**
7. TURBINE SENSOR 2

SBLAT6205L

4) Is frequency within specifications?

**YES**

Go to "CHECK TCM " as below.

**NO**

Replace "TURBINE SENSOR" as necessary and Go to "Verification of Vehicle Repair" procedure.

2. CHECK TCM

- 1) Ignition "ON" & Engine "OFF".
- 2) Disconnect "C106-3" connector.
- 3) Install scantool and select a SIMU-SCAN.
- 4) Simulate frequency to TURBINE SENSOR 1 signal circuit.

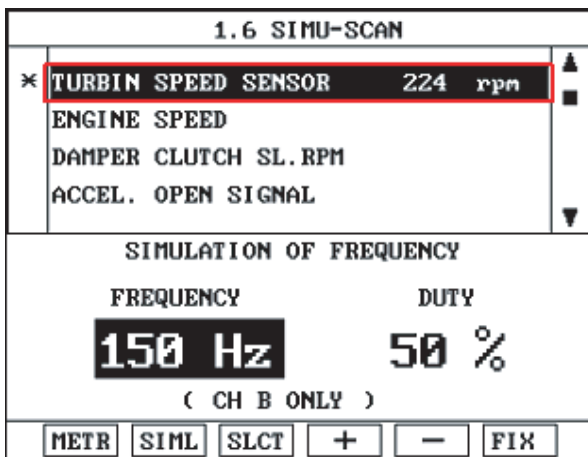


FIG.1)

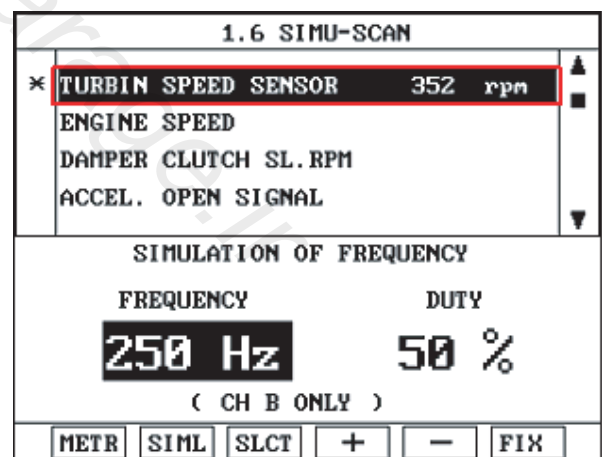


FIG.2)

FIG.1) INPUT 150HZ → 224rpm

FIG.2) INPUT 250HZ → 352rpm

※ The values are subject to change according to vehicle model or conditions.

SBLAT6127L

5) Is "TURBINE SENSOR 1" signal value changed according to simulation frequency?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.



**NO**

Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR** E06CFAEB

After a repair, it is essential to verify that the fault has been corrected.

1. Connect scantool and select "Diagnostic Trouble Codes(DTCs)" mode.
2. Using a scantool, Clear DTC.
3. Operate the vehicle within DTC Enable conditions in General information.
4. Are any DTCs present?

**YES**

Go to the applicable troubleshooting procedure.

**NO**


System performing to specification at this time.

AT -74

AUTOMATIC TRANSAXLE (A5SR1/2)

**DTC P0721 AT OUTPUT SPEED SENSOR CIRCUIT - OPEN OR SHORT(GND)**

**COMPONENT LOCATION** EDFEC73C

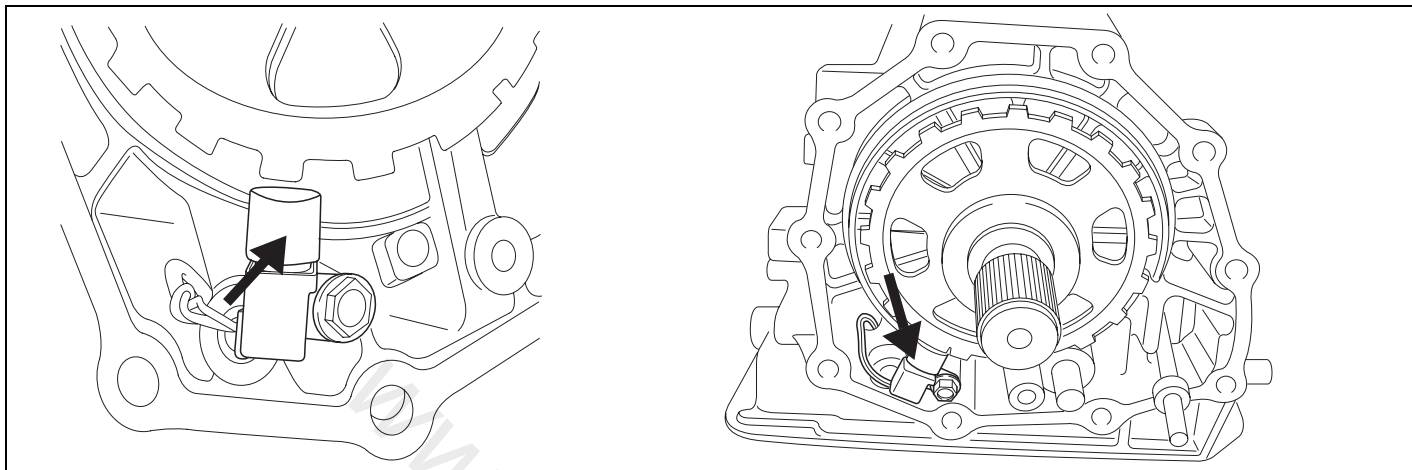

SBLAT6130L

**GENERAL DESCRIPTION** EA08C074

The OUTPUT SPEED SENSOR outputs waveform signals according to the revolutions of the output shaft of the transmission. The Output Speed Sensor is installed in front of the Parking Gear to determine the Parking Gear rpms by counting the frequency of the pulses. This value, together with the throttle position data, is mainly used to decide the optimum gear position.

**DTC DESCRIPTION** E55BEB33

The TCM sets this code if the calculated value of the signals is noticeably different from the value calculated, using the Vehicle Speed Sensor output, when the vehicle is running faster than 18.6MPH(30km/h). The TCM will initiate the fail safe function if this code is detected.

**DTC DETECTING CONDITION** E1DCBBC8

[DSL 2.5]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Speed rationality check</li> </ul>	<ul style="list-style-type: none"> <li>Signal circuit is open or short</li> <li>Sensor power circuit is open</li> <li>Sensor ground circuit is open</li> <li>Faulty OUTPUT SPEED SENSOR</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed 18.6MPH(30km/h) or engine speed &gt; 3500 rpm (in case of failure at vehicle speed)</li> <li>A/T range switch is D range</li> <li>Throttle opening 12.5%</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>output speed &lt; 5 pulse (Reference 18 pulses per 1 output revolution)</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>more than 2sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Substitute for VSS. If Faulty in VSS, Locked into 4th gear (RETURN TO FAILSAFE: 5 &lt; Vehicle speed &lt; 20 SENSOR 1,2)</li> </ul>	

**AUTOMATIC TRANSAXLE SYSTEM**

**AT -75**

[GSL 3.3/3.8]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>• Speed rationality check</li> </ul>	<ul style="list-style-type: none"> <li>• Signal circuit is open or short</li> <li>• Sensor power circuit is open</li> <li>• Sensor ground circuit is open</li> <li>• Faulty OUTPUT SPEED SENSOR</li> <li>• Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>• Battery voltage &gt; 10V</li> <li>• Lever position = "D"</li> <li>• Input speed &gt; 1200 rpm</li> <li>• Output speed &gt; 3000 rpm</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>• Output speed = 0 rpm</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>• More than 4sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>• Shift prevention over 4th gear</li> <li>• Prevention of manual shift</li> <li>• Prevention of pressure adaptation</li> <li>• Output speed from vehicle speed</li> </ul>	

**SPECIFICATION** E3E77D7E

NAME	PIN NO	Measurement condition	Spec
OUTPUT SPEED SENSOR	10	<ul style="list-style-type: none"> <li>• 12.42MPH(20km/h)</li> </ul>	Approx. 149(Hz)

**SIGNAL WAVEFORM** E9878B7C

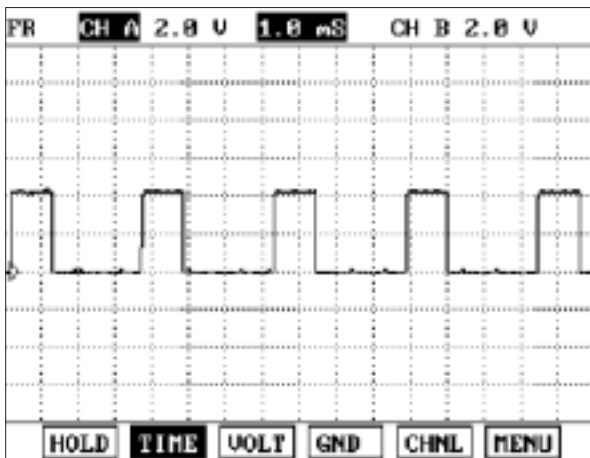


FIG.1)

FIG.1) LOW - SPEED  
FIG.2) HIGH - SPEED

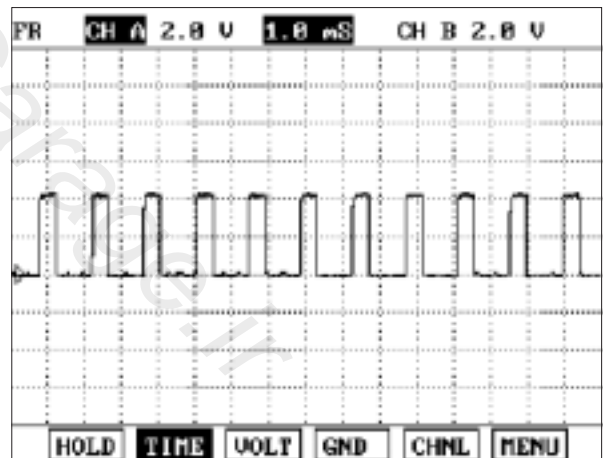


FIG.2)

SBLAT6131L

**MONITOR SCANTOOL DATA** EF0CD50F

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "OUTPUT SPEED SENSOR" parameter on the scantool.
4. Driving at speed of over 5km/h.

Specification : Increasing Gradually

1.3 CURRENT DATA		02/76
× VSS 1(A/T)	11	MPH
× VSS 2(ECU)	11	MPH
× OUTPUT SPEED SNSR	448	rpm
× TURBIN SPEED SENSOR	1760	rpm
× ENGINE SPEED	1760	rpm
× CURRENT GEAR POS.	1	GEAR
× CURRENT SHIFT MODE	SPORTS	
× SELECTED LEVER RANGE	SPORTS	

FIG.1)

1.3 CURRENT DATA		02/76
× VSS 1(A/T)	50	MPH
× VSS 2(ECU)	50	MPH
× OUTPUT SPEED SNSR	2016	rpm
× TURBIN SPEED SENSOR	1664	rpm
× ENGINE SPEED	1728	rpm
× CURRENT GEAR POS.	5	GEAR
× CURRENT SHIFT MODE	SPORTS	
× SELECTED LEVER RANGE	D	

FIG.2)

FIG.1) Low-speed  
 FIG.2) High-speed

SBLAT6132L

5. Does "OUTPUT SPEED SENSOR" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection" procedure.

## TERMINAL & CONNECTOR INSPECTION EC2FFE16

- Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
- Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
- Has a problem been found?

**YES**

Repair as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Signal circuit inspection" procedure.


**AUTOMATIC TRANSAXLE SYSTEM****AT -77****SIGNAL CIRCUIT INSPECTION**

EFD1E861

## 1. CHECK "OUTPUT SPEED SENSOR SIGNAL CIRCUIT 1"

- 1) Ignition "ON" & Engine "OFF".
- 2) Disconnect the "C06-1/C106-1" connector.
- 3) Measure voltage between terminal "10" of the C06-1/C106-1 harness connector and chassis ground.

Specification : approx. 5V

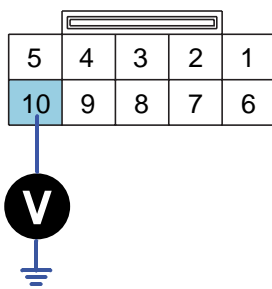

C06-1 [DSL 2.5]  
C106-1 [GSL 3.3/3.8]

- 1.VIGN-OUT 1
- 2.DATA BIT 1
- 3.PSB 2
- 4.PSC 2
- 5.SEL 1
- 6.SEL 2
- 7.SEL 3
- 8.GND
- 9.ATF 1
- 10.OUTPUT SPEED SENSOR

SBLAT6133L

## 4) Is voltage within specifications?

**YES**

Go to "OUTPUT SPEED SENSOR SIGNAL CIRCUIT 2" as below.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Go to "Component Inspection" procedure.

## 2. CHECK "OUTPUT SPEED SENSOR SIGNAL CIRCUIT 2"

- 1) Remove "OIL PAN".
- 2) Connect the "C06-1/C106-1" connector.
- 3) Ignition "ON" & Engine "OFF".
- 4) Disconnect the "OUTPUT SPEED SENSOR" connector.



## AT -78

## AUTOMATIC TRANSAXLE (A5SR1/2)

- 5) Measure voltage between terminal "WHITE COLOR" of the OUTPUT SPEED SENSOR harness connector and chassis ground.

Specification : approx. 5V

## (TRANSMISSION RANGE SWITCH SIDE)

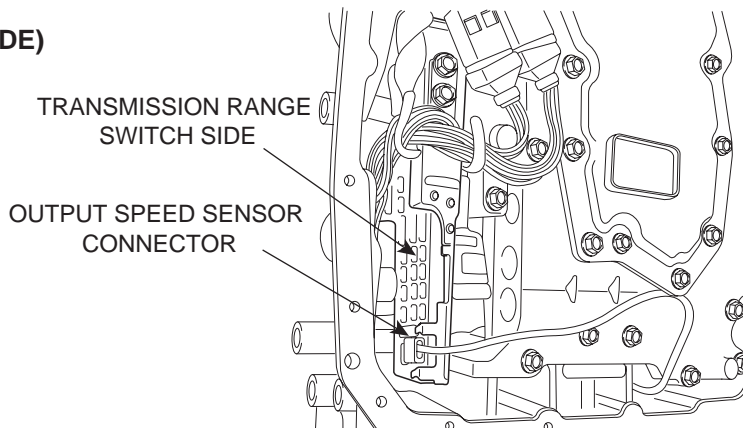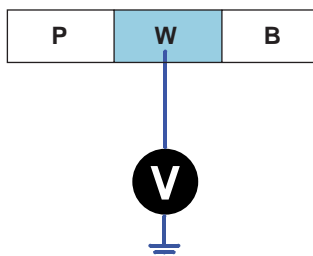

SBLAT6134L

- 6) Is voltage within specifications?

**YES**

Go to "Power supply circuit inspection" procedure.

**NO**

Check for open or short in harness(H-02[A]~TRANSMISSION RANGE SWITCH). Repair as necessary and Go to "Verification of Vehicle Repair" procedure.


If signal circuit in harness is OK, Replace "TRANSMISSION RANGE SWITCH" as necessary and Go to "Verification of Vehicle Repair" procedure.

## POWER SUPPLY CIRCUIT INSPECTION E990A97A


1. Remove "OIL PAN".
2. Connect the "C06-1/C106-1" connector.
3. Ignition "ON" & Engine "OFF".
4. Disconnect the "OUTPUT SPEED SENSOR" connector.
5. Measure voltage between terminal "PINK COLOR" of the OUTPUT SPEED SENSOR harness connector and chassis ground.

Specification : approx. 12V

(TRANSMISSION RANGE SWITCH SIDE)

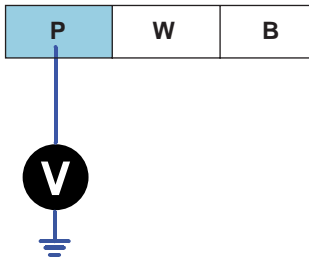

TRANSMISSION RANGE SWITCH SIDE  
OUTPUT SPEED SENSOR CONNECTOR

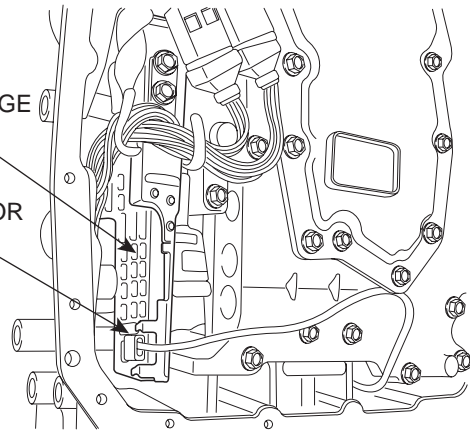

SBLAT6135L

6. Is voltage within specifications?

**YES**

Go to "Ground circuit Inspection" procedure.

**NO**


Replace "TRANSMISSION RANGE SWITCH" as necessary and Go to "Verification of Vehicle Repair" procedure.

**GROUND CIRCUIT INSPECTION** E3E15A3E


1. Ignition "OFF" & Engine "OFF".
2. Remove "OIL PAN".
3. Connect the "C06-1/C106-1" connector.
4. Disconnect the "OUTPUT SPEED SENSOR" connector.
5. Measure resistance between terminal "BLACK COLOR" of the OUTPUT SPEED SENSOR harness connector and chassis ground.

Specification : approx. 0

(TRANSMISSION RANGE SWITCH SIDE)

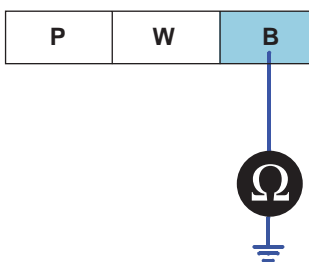

TRANSMISSION RANGE SWITCH SIDE  
OUTPUT SPEED SENSOR CONNECTOR

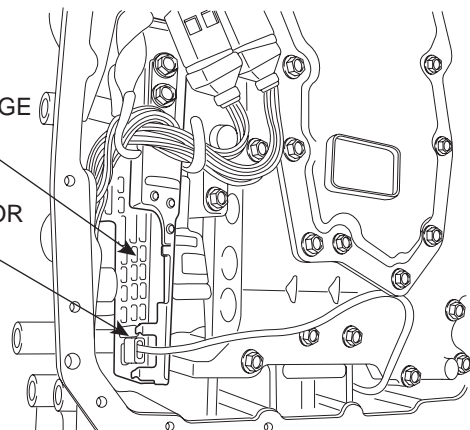

SBLAT6136L

6. Is resistance within specifications?

**YES**

Substitute with a known-good "OUTPUT SPEED SENSOR" and check for proper operation. If the problem is corrected, replace "OUTPUT SPEED SENSOR" as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Replace "TRANSMISSION RANGE SWITCH" as necessary and Go to "Verification of Vehicle Repair" procedure.

**COMPONENT INSPECTION** EBFAA523

**CHECK TCM**

1. Ignition "ON" & Engine "OFF".
2. Disconnect "C06-1/C106-1" connector.
3. Install scantool and select a SIMU-SCAN.
4. Simulate frequency to OUTPUT SPEED SENSOR signal circuit.

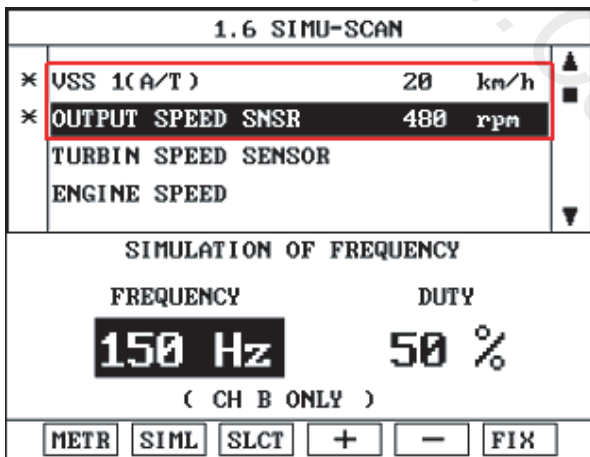


FIG.1)

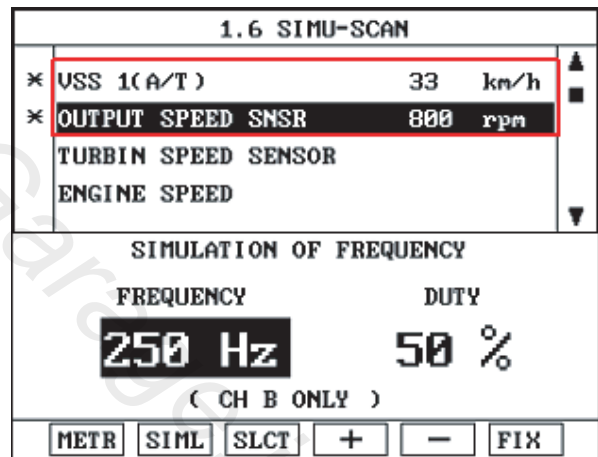


FIG.2)

FIG.1) INPUT 150HZ → 480rpm

FIG.2) INPUT 250HZ → 800rpm

※ The values are subject to change according to vehicle model or conditions.



5. Is "OUTPUT SPEED SENSOR" signal value changed according to simulation frequency?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR** EC146A6C

After a repair, it is essential to verify that the fault has been corrected.

1. Connect scantool and select "Diagnostic Trouble Codes(DTCs)" mode.
2. Using a scantool, Clear DTC.
3. Operate the vehicle within DTC Enable conditions in General information.
4. Are any DTCs present?

**YES**


Go to the applicable troubleshooting procedure.

**NO**

System performing to specification at this time.

**DTC P0731 GEAR 1 INCORRECT RATIO**

**COMPONENT LOCATION** EA6FE550

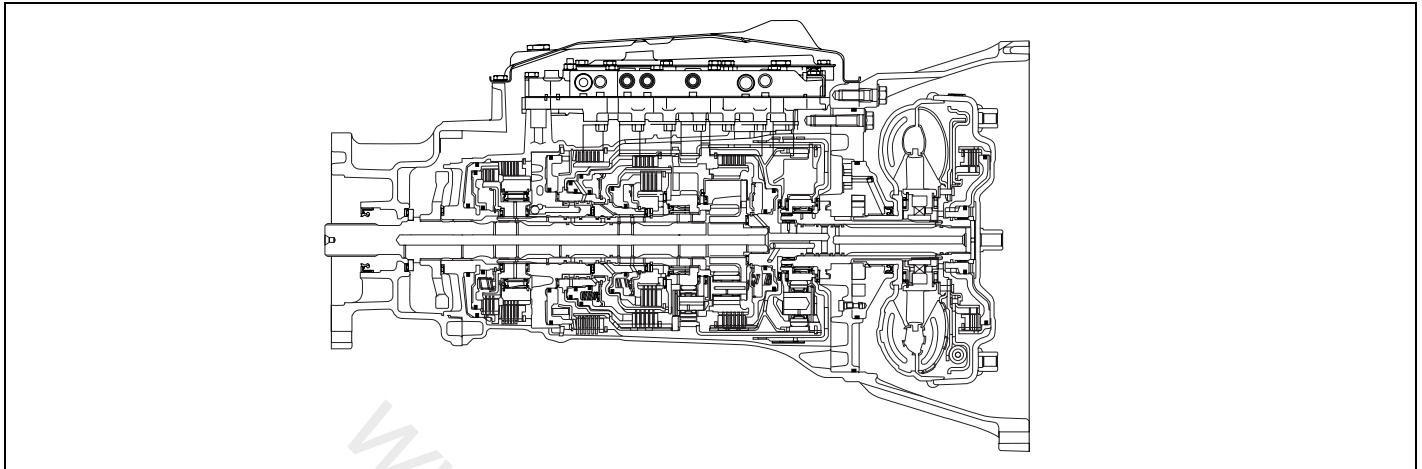

SBLAT6210L

**GENERAL DESCRIPTION** EADAED55

The value of the input shaft speed should be equal to the value of the output shaft speed, when multiplied by the 1st gear ratio, while the transaxle is engaged in the 1st gear. For example, if the output speed is 1000 rpm and the 1st gear ratio is 3.827, then the input speed is 3827 rpm.

**DTC DESCRIPTION** EE85EBBB

This code is set if the value of input shaft speed is not equal to the value of the output shaft, when multiplied by the 1st gear ratio, while the transaxle is engaged in 1st gear. This malfunction is mainly caused by mechanical troubles such as control valve sticking or solenoid valve malfunctioning rather than an electrical issue.

**DTC DETECTING CONDITION** E5009A92

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>1st gear incorrect ratio</li> </ul>	<ul style="list-style-type: none"> <li>Faulty input speed sensor</li> <li>Faulty output speed sensor</li> <li>Faulty inside transmission element</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Engine speed &gt; 600rpm</li> <li>150rpm &gt; Output speed &lt; 6000rpm</li> <li>Lever Position = "D"</li> <li>Input speed &gt; 600rpm</li> <li>A/T oil temp output -10°C</li> <li>Throttle opening &gt; 15%</li> <li>The time after the last shift was finish &gt; 1sec</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>  Input speed - output speed × 1st gear ratio   200rpm</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>4th gear Limp-Home mode</li> </ul>	

**AUTOMATIC TRANSAXLE SYSTEM**

**SIGNAL WAVEFORM** EADA829C

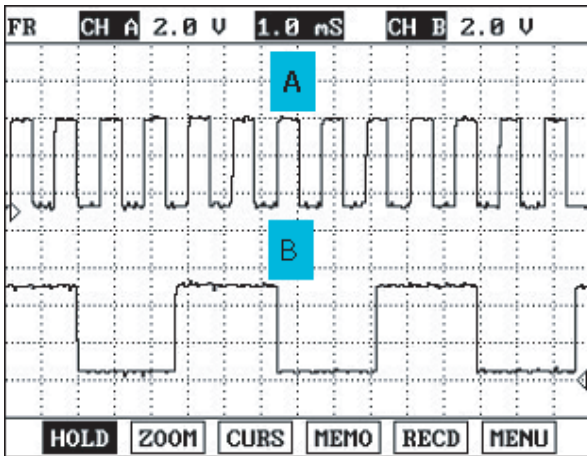


FIG.1)

A : INPUT SPEED SENSOR  
 B : OUTPUT SPEED SENSOR

SBLAT6211L

**MONITOR SCANTOOL DATA** EE18F60D

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "ENGINE SPEED, INPUT SPEED SENSOR, OUTPUT SPEED SENSOR, GEAR POSITION" parameter on the scantool.
4. Perform the "STALL TEST" with gear position "1"

Specification : 2300 ± 200 engine rpm

1.11 CURRENT DATA		01/59
×	ENGINE SPEED	2233 rpm
×	INPUT SPEED(PG-A)	0.0 rpm
×	OUTPUT SPEED(PG-B)	0.0 rpm
×	CURRENT GEAR POSITION	1 GEAR
×	SELECTED LEVER RANGE	D
	ACC ON FLAG	
	SPORTS MODE SWITCH	
	SPORTS MODE UP SW	

SBLAT6212L

OPERATING ELEMENT OF EACH SHIFTING RANGE

Shifting Position	Input clutch	High&Low Reverse Clutch	Direct clutch	Reverse Brake	Front Brake	Low Coast Brake	Forward Brake	1st OwnWayClutch	Forward OwnWayClutch	3rd OwnWayClutch
P		▲			▲					
R		●		●	●			●		●
N		▲			▲	★				
D	1st gear	★			▲		●	●	●	●
	2nd gear		●		▲		●		●	●
	3rd gear	●	●		●		▲	◆		●
	4th gear	●	●	●			▲	◆		
	5th gear	●	●			●	▲	◆		◆

- : WORKING.
- ◆ : PARTICIPATE IN DELIVERY TORQUE WHEN COAST DRIVING.
- ▲ : SUPPLING OIL PRESSURE TO ELEMENT, BUT NOT EFFECT ON OUTPUT.
- ★ : TEMPORARY WORKING.

SBLAT6213L

**Stall test procedure in D1 and reason**

Procedure

1. Warm up the engine
2. After positioning the select lever in "D", depress the foot brake pedal fully. After that, depress the accelerator pedal to the maximum

\* The slippage of 1st gear operating parts can be detected by stall test in D

Reason for stall test

1. If there is no mechanical defaults in A/T, all slippage occurs in the torque converter.
2. Therefore, engine revolution is output, but input and output speed revolution must be "zero" due to wheel's lock.
3. If 1st gear operating parts have faults, input speed revolution will be out of specification.
4. If output speed revolution is output. It means that the foot brake force is not applied fully. Remeasuring is required.

5. Is "STALL TEST " within specification?

**YES**

Go to "Signal Circuit Inspection" procedure.

**NO**

Go to "Component inspection" procedure.

**CAUTION**

Do not let anybody stand in front of or behind the vehicle while this test is being carried out.  
Check the A/T fluid level and temperature and the engine coolant temperature.

- Fluid level : At the hot mark on the oil level gauge.
- Fluid temperature : 176 °F~ 212 °F (80~100 °C).
- Engine coolant temperature : 176 °F~ 212 °F (80~100 °C).

Chock both rear wheels(left and right).

Pull the parking brake lever on with the brake pedal fully depressed.

The throttle should not be left fully open for more than eight seconds.

If carrying out the stall test two or more times, move the select lever to the "N" position and run the engine at 1,000 rpm to let the A/T fluid cool down before carrying out subsequent tests.

**SIGNAL CIRCUIT INSPECTION** EC2F6D2D

1. Connect Scantool.
2. Engine "ON".
3. Monitor the "INPUT & OUTPUT SPEED SENSOR" parameter on the scantool.
4. Accelerate the Engine speed until about 2000 rpm in the 1st gear.

---

Specification : INPUT SPEED - (OUTPUT SPEED × 1st GEAR RATIO) 200 RPM

---

1.11 CURRENT DATA		01/59
× ENGINE SPEED	2044 rpm	
× INPUT SPEED(PG-A)	2050.rpm	
× TURBIN SPEED SENDOR 1	0.0 rpm	
× TURBIN SPEED SENDOR 2	2070.rpm	
× OUTPUT SPEED(PG-B)	544.0rpm	
× CURRENT GEAR POSITION	1 GEAR	
× SELECTED LEVER RANGE	D	
INHIBITOR SWITCH 1		

FIX PART FULL HELP GRPH RCRD

SBLAT6214L

5. Does "INPUT & OUTPUT SPEED SENSOR" within specifications?

**YES**

Go to "Component Inspection" procedure.


**NO**

Check for electrical noise of circuit in INPUT & OUTPUT SPEED SENSOR or replace INPUT & OUTPUT SPEED SENSOR. Repair as necessary and go to "Verification of Vehicle Repair" procedure.

**COMPONENT INSPECTION** EFAF5E2F

1. Connect Scantool.
2. Engine "ON".
3. Monitor the "OIL PRESSURE. S/W 1,2,3,5,6" parameter on the scantool.
4. Move select lever to "D" range and operate vehicle within 1st gear condition.

Shift position		Oil Pressure Switch				
		I/C(SW3)	H & LR/C(SW6)	H & LR/C(SW6)	FR/B(SW1)	LC/B(SW2)
P		X	O	X	O	X
R		X	O	X	O	X
N		X	O	X	O	X
D	1st gear	X	X	X	O	X
	2nd gear	X	X	O	O	X
	3rd gear	X	O	O	O	X
	4th gear	O	O	O	X	X
	5th gear	O	O	X	O	X

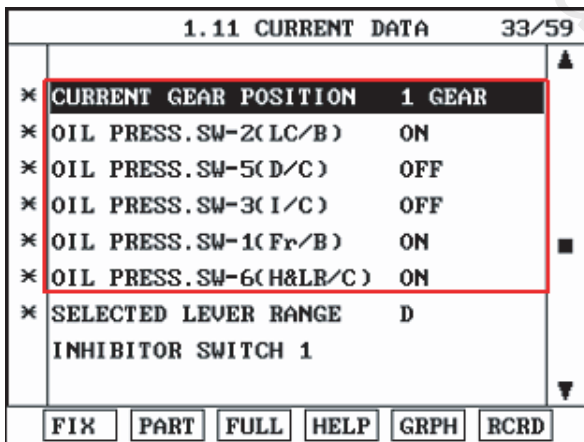

SBLAT6216L

5. Does "OIL PRESSURE. S/W 1,2,3,5,6 " follow the reference data?

**YES**

Repair AUTO TRANSAXLE(Clutch or Brake) as necessary and Go to "Verification of Vehicle Repair" procedure.

**NO**

Replace AUTO TRANSAXLE (BODY CONTROL VALVE faulty) as necessary and go to "Verification of Vehicle Repair " procedure.

**VERIFICATION OF VEHICLE REPAIR** ED60FCCF

After a repair, it is essential to verify that the fault has been corrected.

1. Connect scan tool and select "Diagnostic Trouble Codes(DTCs)" mode.
2. Using a scantool, Clear DTC.
3. Operate the vehicle within DTC Enable conditions in general information.
4. Are any DTCs present ?

**YES**

Go to the applicable troubleshooting procedure.

**NO**

System performing to specification at this time.

www.CarGarage.ir

AT -88

AUTOMATIC TRANSAXLE (A5SR1/2)

**DTC P0732 GEAR 2 INCORRECT RATIO****COMPONENT LOCATION** EEBC4CC1

Refer to DTC P0731.

**GENERAL DESCRIPTION** EEA5DCDF

The value of the input shaft speed should be equal to the value of the output shaft speed, when multiplied by the 2nd gear ratio, while the transaxle is engaged in the 2nd gear. For example, if the output speed is 1000 rpm and the 2nd gear ratio is 2.368, then the input speed is 2368 rpm.

**DTC DESCRIPTION** EDDF71B5

This code is set if the value of input shaft speed is not equal to the value of the output shaft, when multiplied by the 2nd gear ratio, while the transaxle is engaged in 2nd gear. This malfunction is mainly caused by mechanical troubles such as control valve sticking or solenoid valve malfunctioning rather than an electrical issue.

**DTC DETECTING CONDITION** E08BCE29

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>2nd gear incorrect ratio</li> </ul>	<ul style="list-style-type: none"> <li>Faulty input speed sensor</li> <li>Faulty output speed sensor</li> <li>Faulty inside transmission element</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Engine speed &gt; 600rpm</li> <li>150rpm &gt; Output speed &lt; 6000rpm</li> <li>Lever Position = "D"</li> <li>Input speed &gt; 600rpm</li> <li>A/T oil temp output <math>-10^{\circ}\text{C}</math></li> <li>Throttle opening &gt; 15%</li> <li>The time after the last shift was finish &gt; 1sec</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li><math> \text{Input speed} - \text{output speed} \times \text{2nd gear ratio}  &gt; 200\text{rpm}</math></li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>4th gear Limp-Home mode</li> </ul>	



**AUTOMATIC TRANSAXLE SYSTEM**

**SIGNAL WAVEFORM** EBC9ECA5

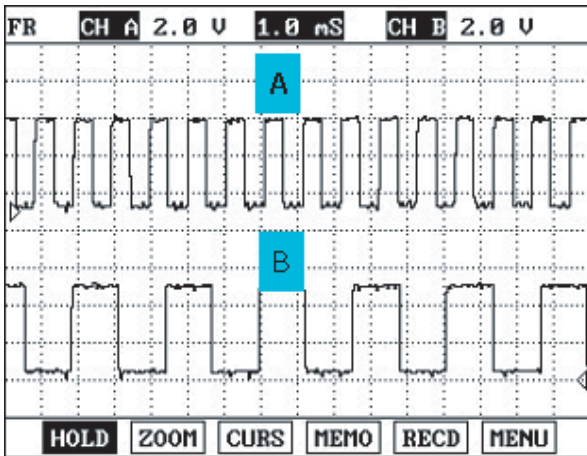


FIG.1)

A : INPUT SPEED SENSOR  
 B : OUTPUT SPEED SENSOR

SBLAT6221L

**MONITOR SCANTOOL DATA** EFFC49FC

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "ENGINE SPEED, INPUT SPEED SENSOR, OUTPUT SPEED SENSOR, GEAR POSITION" parameter on the scantool.
4. Perform the "STALL TEST" with gear position "2"

Specification : 2300 ± 200 engine rpm

1.11 CURRENT DATA		01/59
×	ENGINE SPEED	2222 rpm
×	INPUT SPEED(PG-A)	0.0 rpm
×	OUTPUT SPEED(PG-B)	0.0 rpm
×	CURRENT GEAR POSITION	2 GEAR
×	SELECTED LEVER RANGE	D
	INHIBITOR SWITCH 1	
	INHIBITOR SWITCH 2	
	INHIBITOR SWITCH 3	

SBLAT6222L

OPERATING ELEMENT OF EACH SHIFTING RANGE

Shifting Position	Input clutch	High&Low Reverse Clutch	Direct clutch	Reverse Brake	Front Brake	Low Coast Brake	Forward Brake	1st OwnWayClutch	Forward OwnWayClutch	3rd OwnWayClutch
P		▲			▲					
R		●		●	●			●		●
N		▲			▲	★				
D	1st gear	★			▲		●	●	●	●
	2nd gear		●		▲		●		●	●
	3rd gear	●	●		●		▲	◆		●
	4th gear	●	●	●			▲	◆		
	5th gear	●	●			●	▲	◆		◆

- : WORKING.
- ◆ : PARTICIPATE IN DELIVERY TORQUE WHEN COAST DRIVING.
- ▲ : SUPPLING OIL PRESSURE TO ELEMENT, BUT NOT EFFECT ON OUTPUT.
- ★ : TEMPORARY WORKING.

SBLAT6213L

**Stall test procedure in D2 and reason**

Procedure

1. Warm up the engine
2. After positioning the select lever in "D", depress the foot brake pedal fully. After that, depress the accelerator pedal to the maximum

\* The slippage of 2nd gear operating parts can be detected by stall test in D2

Reason for stall test

1. If there is no mechanical defaults in A/T, all slippage occurs in the torque converter.
2. Therefore, engine revolution is output, but input and output speed revolution must be "zero" due to wheel's lock.
3. If 2nd gear operating parts have faults, input speed revolution will be out.
4. If output speed revolution is output. It means that the foot brake force is not applied fully. Remeasuring is required.

5. Is "STALL TEST " within specification?

**YES**

Go to "Signal Circuit Inspection" procedure.

**NO**

Go to "Component inspection" procedure.

## AUTOMATIC TRANSAXLE SYSTEM

AT -91

 CAUTION

Do not let anybody stand in front of or behind the vehicle while this test is being carried out.  
Check the A/T fluid level and temperature and the engine coolant temperature.

- Fluid level : At the hot mark on the oil level gauge.
- Fluid temperature : 176 °F~ 212 °F (80~100 °C).
- Engine coolant temperature : 176 °F~ 212 °F (80~100 °C).

Chock both rear wheels(left and right).

Pull the parking brake lever on with the brake pedal fully depressed.

The throttle should not be left fully open for more than eight seconds.

If carrying out the stall test two or more times, move the select lever to the "N" position and run the engine at 1,000 rpm to let the A/T fluid cool down before carrying out subsequent tests.

SIGNAL CIRCUIT INSPECTION E2EA6E31

1. Connect Scantool.
2. Engine "ON".
3. Monitor the "INPUT & OUTPUT SPEED SENSOR" parameter on the scantool.
4. Accelerate the Engine speed until about 2000 rpm in the 2nd gear.

---

Specification : INPUT SPEED - (OUTPUT SPEED × 2nd GEAR RATIO) 200 RPM

---

1.11 CURRENT DATA		01/59
×	ENGINE SPEED	1975 rpm
×	INPUT SPEED(PG-A)	1953. rpm
×	TURBIN SPEED SENDOR 1	0.0 rpm
×	TURBIN SPEED SENDOR 2	1939. rpm
×	OUTPUT SPEED(PG-B)	817.0rpm
×	CURRENT GEAR POSITION	2 GEAR
×	SELECTED LEVER RANGE	D
	INHIBITOR SWITCH 1	

FIX PART FULL HELP GRPH RCRD

SBLAT6224L

5. Does "INPUT & OUTPUT SPEED SENSOR" within specifications?

**YES**

Go to "Component Inspection" procedure.

**NO**

Check for electrical noise of circuit in INPUT & OUTPUT SPEED SENSOR or replace INPUT & OUTPUT SPEED SENSOR. Repair as necessary and go to "Verification of Vehicle Repair" procedure.


AT -92

**AUTOMATIC TRANSAXLE (A5SR1/2)**

**COMPONENT INSPECTION** EA3FA4DF

1. Connect Scantool.
2. Engine "ON".
3. Monitor the "OIL PRESSURE. S/W 1,2,3,5,6" parameter on the scantool.
4. Move select lever to "D" range and operate vehicle within 2nd gear condition.

Shift position		Oil Pressure Switch				
		I/C(SW3)	H & LR/C(SW6)	H & LR/C(SW6)	FR/B(SW1)	LC/B(SW2)
P		X	O	X	O	X
R		X	O	X	O	X
N		X	O	X	O	X
D	1st gear	X	X	X	O	X
	2nd gear	X	X	O	O	X
	3rd gear	X	O	O	O	X
	4th gear	O	O	O	X	X
	5th gear	O	O	X	O	X

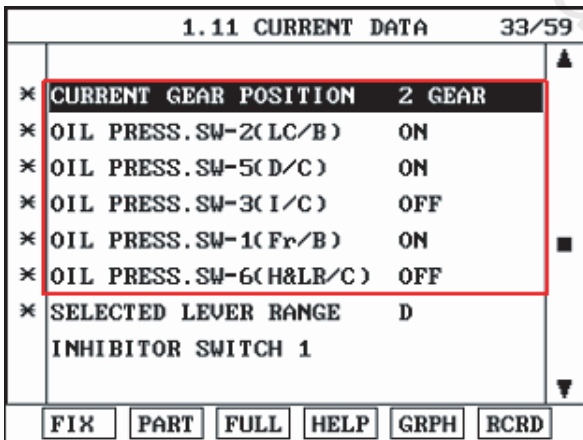

SBLAT6226L

5. Is oil pressure value within specifications?

**YES**

Repair AUTO TRANSAXLE(Clutch or Brake) as necessary and Go to "Verification of Vehicle Repair" procedure.

**NO**

Replace AUTO TRANSAXLE (BODY CONTROL VALVE faulty) as necessary and go to "Verification of Vehicle Repair " procedure.

**VERIFICATION OF VEHICLE REPAIR** EC89F2AB

Refer to DTC P0731.

## AUTOMATIC TRANSAXLE SYSTEM

AT -93

**DTC P0733 GEAR 3 INCORRECT RATIO****COMPONENT LOCATION** E1416B7E

Refer to DTC P0731.

**GENERAL DESCRIPTION** E4992E3F

The value of the input shaft speed should be equal to the value of the output shaft speed, when multiplied by the 3rd gear ratio, while the transaxle is engaged in the 3rd gear. For example, if the output speed is 1,000 rpm and the 3rd gear ratio is 1.520, then the input speed is 1520 rpm.

**DTC DESCRIPTION** EB54FE5F

This code is set if the value of input shaft speed is not equal to the value of the output shaft, when multiplied by the 3rd gear ratio, while the transaxle is engaged in 3rd gear. This malfunction is mainly caused by mechanical troubles such as control valve sticking or solenoid valve malfunctioning rather than an electrical issue.

**DTC DETECTING CONDITION** EE6E366A

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>3rd gear incorrect ratio</li> </ul>	<ul style="list-style-type: none"> <li>Faulty input speed sensor</li> <li>Faulty output speed sensor</li> <li>Faulty inside transmission element</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Engine speed &gt; 600rpm</li> <li>150rpm &gt; Output speed &lt; 6000rpm</li> <li>Lever Position = "D"</li> <li>Input speed &gt; 600rpm</li> <li>A/T oil temp output -10°C</li> <li>Throttle opening &gt; 15%</li> <li>The time after the last shift was finish &gt; 1sec</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>  Input speed - output speed × 3rd gear ratio   200rpm</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>4th gear Limp-Home mode</li> </ul>	

**SIGNAL WAVEFORM** EA7B27E4

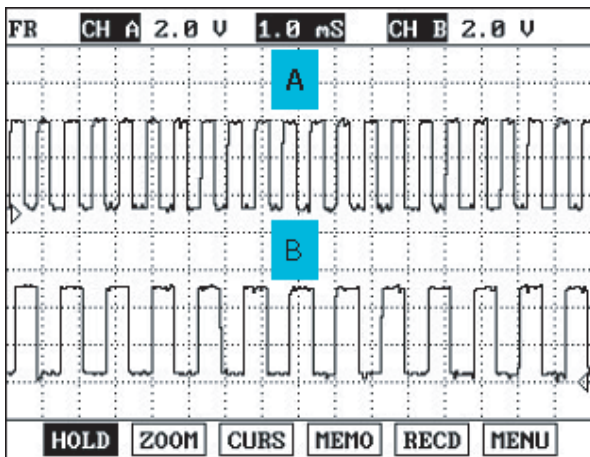


FIG.1)

A : INPUT SPEED SENSOR  
 B : OUTPUT SPEED SENSOR

SBLAT6231L

**SIGNAL CIRCUIT INSPECTION** ECBFCD4A

1. Connect Scantool.
2. Engine "ON".
3. Monitor the "INPUT & OUTPUT SPEED SENSOR" parameter on the scantool.
4. Accelerate the Engine speed until about 2000 rpm in the 3rd gear.

Specification : INPUT SPEED - (OUTPUT SPEED × 3rd GEAR RATIO) 200 RPM

1.11 CURRENT DATA		01/59
×	ENGINE SPEED	2015 rpm
×	INPUT SPEED(PG-A)	1996. rpm
×	TURBIN SPEED SENDOR 1	0.0 rpm
×	TURBIN SPEED SENDOR 2	1990. rpm
×	OUTPUT SPEED(PG-B)	1311. rpm
×	CURRENT GEAR POSITION	3 GEAR
×	SELECTED LEVER RANGE	D
	INHIBITOR SWITCH 1	

FIX PART FULL HELP GRPH RCRD

SBLAT6232L

**AUTOMATIC TRANSAXLE SYSTEM****AT -95**

5. Does "INPUT & OUTPUT SPEED SENSOR" within specifications?

**YES**

Go to "Component Inspection" procedure.

**NO**

Check for electrical noise of circuit in INPUT & OUTPUT SPEED SENSOR or replace INPUT & OUTPUT SPEED SENSOR. Repair as necessary and go to "Verification of Vehicle Repair" procedure.

**COMPONENT INSPECTION**

E19E7130

1. Connect Scantool.
2. Engine "ON".
3. Monitor the "OIL PRESSURE. S/W 1,2,3,5,6" parameter on the scantool.
4. Move select lever to "D" range and operate vehicle within 3rd gear condition.

Shift position		Oil Pressure Switch				
		I/C(SW3)	H & LR/C(SW6)	H & LR/C(SW6)	FR/B(SW1)	LC/B(SW2)
P		X	O	X	O	X
R		X	O	X	O	X
N		X	O	X	O	X
D	1st gear	X	X	X	O	X
	2nd gear	X	X	O	O	X
	3rd gear	X	O	O	O	X
	4th gear	O	O	O	X	X
	5th gear	O	O	X	O	X

1.11 CURRENT DATA		33/59
×	CURRENT GEAR POSITION	3 GEAR
×	OIL PRESS. SW-2(LC/B)	OFF
×	OIL PRESS. SW-5(D/C)	ON
×	OIL PRESS. SW-3(I/C)	OFF
×	OIL PRESS. SW-1(Fr/B)	ON
×	OIL PRESS. SW-6(H&LR/C)	ON
×	SELECTED LEVER RANGE	D
	INHIBITOR SWITCH 1	
FIX	PART	FULL
HELP	GRPH	RCRD

SBLAT6233L

5. Is oil pressure value within specifications?

**YES**

Repair AUTO TRANSAXLE(Clutch or Brake) as necessary and Go to "Verification of Vehicle Repair" procedure.

**NO**

Replace AUTO TRANSAXLE (BODY CONTROL VALVE faulty) as necessary and go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR** E3EE0C3B

Refer to DTC P0731.

www.CarGarage.ir



## AUTOMATIC TRANSAXLE SYSTEM

AT -97

**DTC P0734 GEAR 4 INCORRECT RATIO****COMPONENT LOCATION** E0D64D2E

Refer to DTC P0731.

**GENERAL DESCRIPTION** E06C48DB

The value of the input shaft speed should be equal to the value of the output shaft speed, when multiplied by the 4th gear ratio, while the transaxle is engaged in the 4th gear. For example, if the output speed is 1,000 rpm and the 4th gear ratio is 1.000, then the input speed is 1000 rpm.

**DTC DESCRIPTION** E62C6B75

This code is set if the value of input shaft speed is not equal to the value of the output shaft, when multiplied by the 4th gear ratio, while the transaxle is engaged in 4th gear. This malfunction is mainly caused by mechanical troubles such as control valve sticking or solenoid valve malfunctioning rather than an electrical issue.

**DTC DETECTING CONDITION** E2B814E9

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>4th gear incorrect ratio</li> </ul>	<ul style="list-style-type: none"> <li>Faulty input speed sensor</li> <li>Faulty output speed sensor</li> <li>Faulty inside transmission element</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Engine speed &gt; 600rpm</li> <li>150rpm &gt; Output speed &lt; 6000rpm</li> <li>Lever Position = "D"</li> <li>Input speed &gt; 600rpm</li> <li>A/T oil temp output -10°C</li> <li>Throttle opening &gt; 15%</li> <li>The time after the last shift was finish &gt; 1sec</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>  Input speed - output speed × 4th gear ratio   200rpm</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>4th gear Limp-Home mode</li> </ul>	

**SIGNAL WAVEFORM** EC042485

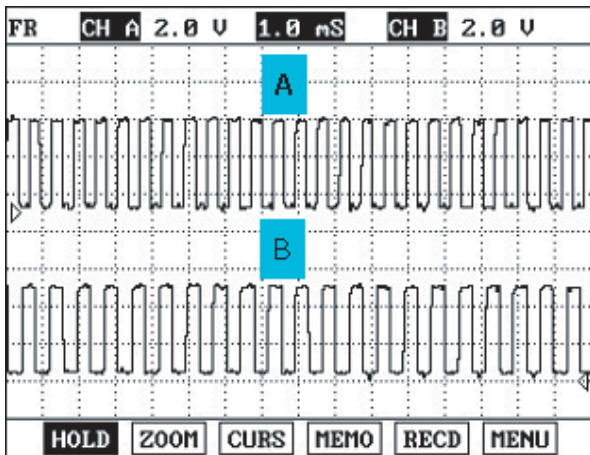


FIG.1)

A : INPUT SPEED SENSOR  
B : OUTPUT SPEED SENSOR

SBLAT6241L

**MONITOR SCANTOOL DATA** E47CB401

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "ENGINE SPEED, INPUT SPEED SENSOR, OUTPUT SPEED SENSOR, GEAR POSITION" parameter on the scantool.
4. Perform the "STALL TEST" with gear position "4"

Specification : 2300 ± 200 engine rpm

1.11 CURRENT DATA		01/59
✖	ENGINE SPEED	2218 rpm
✖	INPUT SPEED(PG-A)	0.0 rpm
✖	OUTPUT SPEED(PG-B)	0.0 rpm
✖	CURRENT GEAR POSITION	4 GEAR
✖	SELECTED LEVER RANGE	D
	INHIBITOR SWITCH 1	
	INHIBITOR SWITCH 2	
	INHIBITOR SWITCH 3	

SBLAT6242L

**AUTOMATIC TRANSAXLE SYSTEM****AT -99****OPERATING ELEMENT OF EACH SHIFTING RANGE**

Shifting Position	Input clutch	High&Low Reverse Clutch	Direct clutch	Reverse Brake	Front Brake	Low Coast Brake	Forward Brake	1st OwnWayClutch	Forward OwnWayClutch	3rd OwnWayClutch
P		▲			▲					
R		●		●	●			●		●
N		▲			▲	★				
D	1st gear	★			▲		●	●	●	●
	2nd gear		●		▲		●		●	●
	3rd gear		●	●	●		▲	◆		●
	4th gear	●	●	●			▲	◆		
	5th gear	●	●			●	▲	◆		◆

● : WORKING.

◆ : PARTICIPATE IN DELIVERY TORQUE WHEN COAST DRIVING.

▲ : SUPPLING OIL PRESSURE TO ELEMENT, BUT NOT EFFECT ON OUTPUT.

★ : TEMPORARY WORKING.

SBLAT6213L

**Stall test procedure in D4 and reason****Procedure**

1. Warm up the engine
2. After positioning the select lever in "D" or "ON" of the HOLD SW ( Operate UP SHIFT in case of "SPORTS MODE"),depress the foot brake pedal fully after that, depress the accelerator pedal to the maximum.

\* The slippage of 4th gear operating parts can be detected by stall test in D4

**Reason for stall test**

1. If there is no mechanical defaults in A/T, all slippage occurs in the torque converter.
2. Therefore, engine revolution is output, but input and output speed revolution must be "zero" due to wheel's lock.
3. If 4th gear operating parts have faults, input speed revolution will be out.
4. If output speed revolution is output. It means that the foot brake force is not applied fully. Remeasuring is required.

5. Is "STALL TEST " within specification?

**YES**

Go to "Signal Circuit Inspection" procedure.

**NO**

Go to "Component inspection" procedure.

**CAUTION**

*Do not let anybody stand in front of or behind the vehicle while this test is being carried out.  
Check the A/T fluid level and temperature and the engine coolant temperature.*

- *Fluid level : At the hot mark on the oil level gauge.*
- *Fluid temperature : 176 °F~ 212 °F (80~100 °C).*
- *Engine coolant temperature : 176 °F~ 212 °F (80~100 °C).*

*Chock both rear wheels(left and right).*

*Pull the parking brake lever on with the brake pedal fully depressed.*

*The throttle should not be left fully open for more than eight seconds.*

*If carrying out the stall test two or more times, move the select lever to the "N" position and run the engine at 1,000 rpm to let the A/T fluid cool down before carrying out subsequent tests.*

**SIGNAL CIRCUIT INSPECTION** E5D1EB2B

1. Connect Scantool.
2. Engine "ON".
3. Monitor the "INPUT & OUTPUT SPEED SENSOR" parameter on the scantool.
4. Accelerate the Engine speed until about 2000 rpm in the 4th gear.

---

Specification : INPUT SPEED - (OUTPUT SPEED × 4th GEAR RATIO) 200 RPM

---

1.11 CURRENT DATA		01/59
×	ENGINE SPEED	2006 rpm
×	INPUT SPEED(PG-A)	2005. rpm
×	TURBIN SPEED SENDOR 1	1045. rpm
×	TURBIN SPEED SENDOR 2	3054. rpm
×	OUTPUT SPEED(PG-B)	2008. rpm
×	CURRENT GEAR POSITION	4 GEAR
×	SELECTED LEVER RANGE	D
	INHIBITOR SWITCH 1	

FIX PART FULL HELP GRPH RCRD

SBLAT6244L

5. Does "INPUT & OUTPUT SPEED SENSOR" within specifications?

**YES**

Go to "Component Inspection" procedure.

**NO**


Check for electrical noise of circuit in INPUT & OUTPUT SPEED SENSOR or replace INPUT & OUTPUT SPEED SENSOR. Repair as necessary and go to "Verification of Vehicle Repair" procedure.

**AUTOMATIC TRANSAXLE SYSTEM**

**COMPONENT INSPECTION** ECBA4DDA

1. Connect Scantool.
2. Engine "ON".
3. Monitor the "OIL PRESSURE. S/W 1,2,3,5,6" parameter on the scantool.
4. Move select lever to "D" range and operate vehicle within 4th gear condition.

Shift position		Oil Pressure Switch				
		I/C(SW3)	H & LR/C(SW6)	H & LR/C(SW6)	FR/B(SW1)	LC/B(SW2)
P		X	O	X	O	X
R		X	O	X	O	X
N		X	O	X	O	X
D	1st gear	X	X	X	O	X
	2nd gear	X	X	O	O	X
	3rd gear	X	O	O	O	X
	4th gear	O	O	O	X	X
	5th gear	O	O	X	O	X

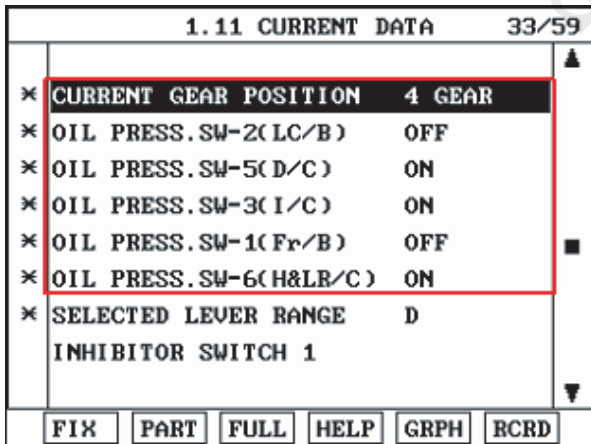

SBLAT6246L

5. Is oil pressure value within specifications?

**YES**

Repair AUTO TRANSAXLE(Clutch or Brake) as necessary and Go to "Verification of Vehicle Repair" procedure.

**NO**

Replace AUTO TRANSAXLE (BODY CONTROL VALVE faulty) as necessary and go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR** EB85B35F

Refer to DTC P0731.

AT -102

AUTOMATIC TRANSAXLE (A5SR1/2)

**DTC P0735 GEAR 5 INCORRECT RATIO****COMPONENT LOCATION** E4CF3ACE

Refer to DTC P0731.

**GENERAL DESCRIPTION** EBA8E7AA

The value of the input shaft speed should be equal to the value of the output shaft speed, when multiplied by the 5th gear ratio, while the transaxle is engaged in the 5th gear. For example, if the output speed is 1,000 rpm and the 5th gear ratio is 0.834, then the input speed is 834 rpm.

**DTC DESCRIPTION** E9A6FA8B

This code is set if the value of input shaft speed is not equal to the value of the output shaft, when multiplied by the 5th gear ratio, while the transaxle is engaged in 5th gear. This malfunction is mainly caused by mechanical troubles such as control valve sticking or solenoid valve malfunctioning rather than an electrical issue.

**DTC DETECTING CONDITION** EF0616A0

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>5th gear incorrect ratio</li> </ul>	<ul style="list-style-type: none"> <li>Faulty input speed sensor</li> <li>Faulty output speed sensor</li> <li>Faulty inside transmission element</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Engine speed &gt; 600rpm</li> <li>150rpm &gt; Output speed &lt; 6000rpm</li> <li>Lever Position = "D"</li> <li>Input speed &gt; 600rpm</li> <li>A/T oil temp output -10°C</li> <li>Throttle opening &gt; 15%</li> <li>The time after the last shift was finish &gt; 1sec</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>  Input speed - output speed × 5th gear ratio   200rpm</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>4th gear Limp-Home mode</li> </ul>	

**SIGNAL WAVEFORM** EDE87ABE

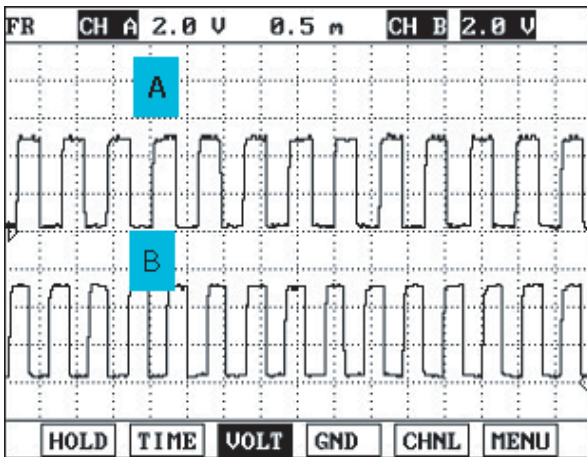


FIG.1)

A : INPUT SPEED SENSOR  
 B : OUTPUT SPEED SENSOR

SBLAT6251L

**SIGNAL CIRCUIT INSPECTION** EAABDA2A

1. Connect Scantool.
2. Engine "ON".
3. Monitor the "INPUT & OUTPUT SPEED SENSOR" parameter on the scantool.
4. Accelerate the Engine speed until about 2000 rpm in the 5th gear.

---

Specification : INPUT SPEED - (OUTPUT SPEED × 5th GEAR RATIO) 200 RPM

---

1.11 CURRENT DATA		01/59
×	ENGINE SPEED	1972 rpm
×	INPUT SPEED(PG-A)	1972.rpm
×	TURBIN SPEED SENDOR 1	0.0 rpm
×	TURBIN SPEED SENDOR 2	1973.rpm
×	OUTPUT SPEED(PG-B)	2370.rpm
×	CURRENT GEAR POSITION	5 GEAR
×	SELECTED LEVER RANGE	D
	INHIBITOR SWITCH 1	

SBLAT6252L

5. Does "INPUT & OUTPUT SPEED SENSOR" within specifications?

**YES**

Go to "Component Inspection" procedure.


**NO**

Check for electrical noise of circuit in INPUT & OUTPUT SPEED SENSOR or replace INPUT & OUTPUT SPEED SENSOR. Repair as necessary and go to "Verification of Vehicle Repair" procedure.

**COMPONENT INSPECTION** EEBEEAFA

1. Connect Scantool.
2. Engine "ON".
3. Monitor the "OIL PRESSURE. S/W 1,2,3,5,6" parameter on the scantool.
4. Move select lever to "D" range and operate vehicle within 5th gear condition.

Shift position		Oil Pressure Switch				
		I/C(SW3)	H & LR/C(SW6)	H & LR/C(SW6)	FR/B(SW1)	LC/B(SW2)
P		X	O	X	O	X
R		X	O	X	O	X
N		X	O	X	O	X
D	1st gear	X	X	X	O	X
	2nd gear	X	X	O	O	X
	3rd gear	X	O	O	O	X
	4th gear	O	O	O	X	X
	5th gear	O	O	X	O	X

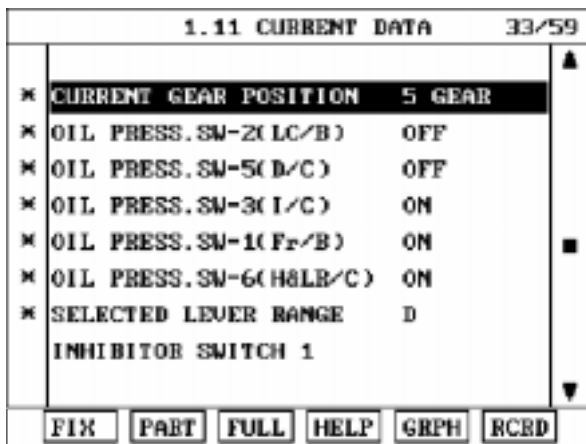



## **AUTOMATIC TRANSAXLE SYSTEM**

**AT -105**

5. Is oil pressure value within specifications?

**YES**

Repair AUTO TRANSAXLE(Clutch or Brake) as necessary and Go to "Verification of Vehicle Repair" procedure.

**NO**

Replace AUTO TRANSAXLE (BODY CONTROL VALVE faulty) as necessary and go to "Verification of Vehicle Repair" procedure.

### **VERIFICATION OF VEHICLE REPAIR** EFD7A16E

Refer to DTC P0731.


www.CarGarage.ir

AT -106

AUTOMATIC TRANSAXLE (A5SR1/2)

**DTC P0741 TORQUE CONVERTER CLUTCH CIRCUIT - STUCK OFF**

**COMPONENT LOCATION** E0DEDAD0

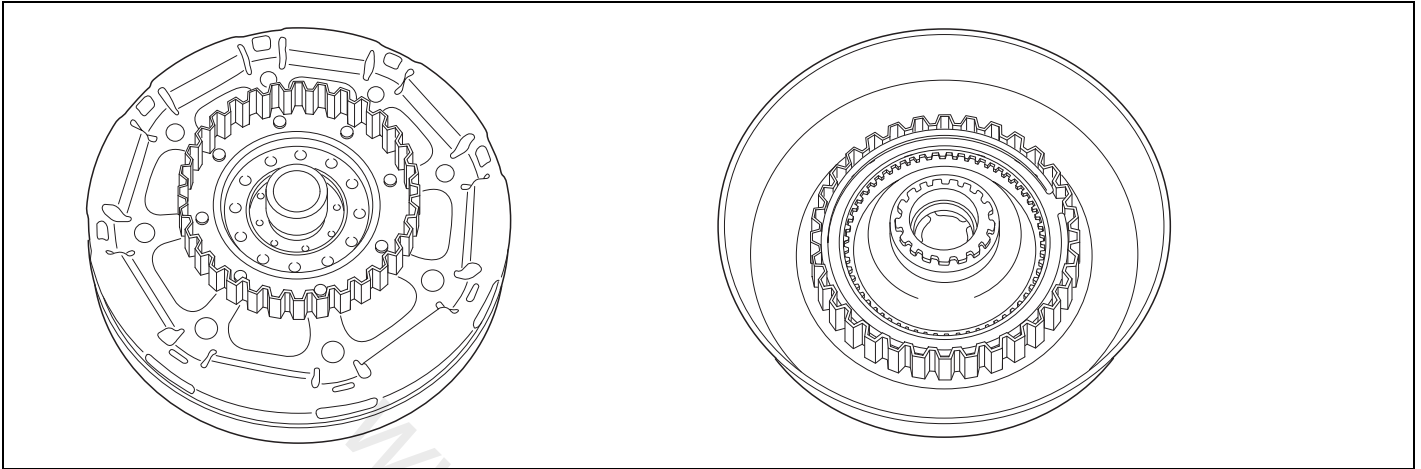

SBLAT6140L

**GENERAL DESCRIPTION** EAADC733

The PCM/TCM controls the locking and unlocking of the Torque Converter Clutch ( or Damper Clutch ), to the input shaft of the transmission, by applying hydraulic pressure. The main purpose of T/C clutch control is to save fuel by decreasing the hydraulic load inside the T/C. The TCM outputs duty pulses to control the Damper Clutch Control Solenoid Valve( DCCSV ) and hydraulic pressure is applied to DC according to the DCC duty ratio value. When the duty ratio is high, high pressure is applied and the Damper Clutch is locked. The normal operating range of the Damper Clutch Control current is from 0.05A(unlocked) to 0.75A(locked).

**DTC DESCRIPTION** ECDE68D4

The PCM/TCM increases the duty ratio to engage the Damper Clutch by monitoring slip rpms (difference value between engine speed and turbine speed ). To decrease the slip of the Damper Clutch, the TCM increases the duty ratio by applying more hydraulic pressure. When slip rpm does not drop under some value with 100% duty ratio, the PCM/TCM determines that the Torque Converter Clutch is stuck OFF and sets this code.

## AUTOMATIC TRANSAXLE SYSTEM

AT -107

## DTC DETECTING CONDITION ED8EACE0

[DSL 2.5]

Item		Detecting Condition	Possible cause
DTC Strategy		<ul style="list-style-type: none"> <li>Stuck "OFF"</li> </ul>	TORQUE CONVERTER (DAMPER) CLUTCH : TCC <ul style="list-style-type: none"> <li>Faulty TCC or oil pressure system</li> <li>Faulty TCC solenoid valve</li> <li>Faulty body control valve</li> <li>Faulty TCM</li> </ul>
Enable Conditions	case1	<ul style="list-style-type: none"> <li>Vehicle speed 6.2MPH(10km/h)</li> <li>Engine speed &gt; 305 rpm</li> <li>A/T range switch is D range</li> <li>68°F A/T fluid temperature 212°F</li> </ul>	
	case2	<ul style="list-style-type: none"> <li>Vehicle speed 6.2MPH(10km/h)</li> <li>Engine speed &gt; 305 rpm</li> <li>A/T range switch is D range</li> <li>68°F A/T fluid temperature 212°F</li> </ul>	
Threshold Value	case1	<ul style="list-style-type: none"> <li>Calculated slip (engine speed-input speed) &gt; 40rpm+Vsp1/2 at 5th gear full lock up</li> </ul>	
	case2	<ul style="list-style-type: none"> <li>Calculated slip (engine speed-input speed) Target slip speed+65rpm at 4th, 5th gear slip lock up</li> </ul>	
Diagnostic Time		<ul style="list-style-type: none"> <li>more than 30sec</li> </ul>	
Fail Safe		<ul style="list-style-type: none"> <li>Lock-up control is prohibited</li> <li>Slip lock-up control is prohibited</li> </ul>	

[GSL 3.3/3.8]

Item	Detecting Condition	Possible cause
DTC Strategy	<ul style="list-style-type: none"> <li>Stuck "OFF"</li> </ul>	TORQUE CONVERTER(DAMPER) CLUTCH : TCC <ul style="list-style-type: none"> <li>Faulty TCC or oil pressure system</li> <li>Faulty TCC solenoid valve</li> <li>Faulty body control valve</li> <li>Faulty TCM</li> </ul>
Enable Conditions	<ul style="list-style-type: none"> <li>Duty of "Damper clutch solenoid valve" = 100%</li> <li>Input speed &gt; 0rpm</li> </ul>	
Threshold value	<ul style="list-style-type: none"> <li>Calculated slip (engine speed-input speed) &gt; 100rpm</li> </ul>	
Diagnostic Time	<ul style="list-style-type: none"> <li>More than 5sec</li> </ul>	
Fail Safe	<ul style="list-style-type: none"> <li>Damper clutch "OFF"</li> </ul>	

## MONITOR SCANTOOL DATA E9A77934

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Select "D RANGE" and drive vehicle 5 gear.
4. Monitor the "TORQUE CONVERTER(DAMPER) CLUTCH" parameter on the scantool .

Specification :

[DSL 2.5]

TCC SLIP &lt; 40RPM+ Vsp1/2(In condition that LU(TCC) SOL. current &gt; 6.5A )

[GSL 3.3/3.8]

Calculated slip (engine speed-input speed) &lt; 100rpm

[DSL 2.5]

1.3 CURRENT DATA		07/76
* TURBIN SPEED SENSOR	0 rpm	
* ENGINE SPEED	736 rpm	
* DAMPER CLUTCH SL. RPM	254 rpm	
* LU SOL. OUTPUT	0.01 A	
* LU SOL. MONITOR	0.00 A	
* CURRENT GEAR POS.	1 GEAR	
* SHIFT RANGE INDICATOR	D	
SELECTED LEVER RANGE		

FIX PART FULL HELP GRPH RCRD

FIG.1)

1.3 CURRENT DATA		07/76
* TURBIN SPEED SENSOR	2720 rpm	
* ENGINE SPEED	2720 rpm	
* DAMPER CLUTCH SL. RPM	0 rpm	
* LU SOL. OUTPUT	0.45 A	
* LU SOL. MONITOR	0.57 A	
* CURRENT GEAR POS.	4 GEAR	
* SHIFT RANGE INDICATOR	-	
SELECTED LEVER RANGE		

FIX PART FULL HELP GRPH RCRD

FIG.2)

FIG.1) : Non-operating Lock-up Clutch

FIG.2) : Operating Lock-up Clutch

SBLAT6141L

[GSL 3.3/3.8]

1.11 CURRENT DATA		89/59
ENGINE SPEED	721 rpm	
INPUT SPEED(PG-A)	781.8rpm	
TCC SLIP RPM	8.8 rpm	
TCCSV(LU)	8.8 %	
TCCSV CURRENT(LU)	48.8 mA	
TCCSV PRESSURE(LU)	-43.5psi	
CURRENT GEAR POSITION	P N	
SELECTED LEVER RANGE	N	

FIG.1)

1.11 CURRENT DATA		89/59
ENGINE SPEED	895 rpm	
INPUT SPEED(PG-A)	848.8rpm	
TCC SLIP RPM	53.8 rpm	
TCCSV(LU)	8.8 %	
TCCSV CURRENT(LU)	48.8 mA	
TCCSV PRESSURE(LU)	-43.5psi	
CURRENT GEAR POSITION	REVERSE	
SELECTED LEVER RANGE	R	

FIG.2)

1.11 CURRENT DATA		89/59
ENGINE SPEED	1839 rpm	
INPUT SPEED(PG-A)	1821. rpm	
TCC SLIP RPM	33.8 rpm	
TCCSV(LU)	8.8 %	
TCCSV CURRENT(LU)	48.8 mA	
TCCSV PRESSURE(LU)	-43.5psi	
CURRENT GEAR POSITION	1 GEAR	
SELECTED LEVER RANGE	D	

FIG.3)

1.11 CURRENT DATA		89/59
ENGINE SPEED	1668 rpm	
INPUT SPEED(PG-A)	1642. rpm	
TCC SLIP RPM	16.8 rpm	
TCCSV(LU)	8.8 %	
TCCSV CURRENT(LU)	48.8 mA	
TCCSV PRESSURE(LU)	-43.5psi	
CURRENT GEAR POSITION	2 GEAR	
SELECTED LEVER RANGE	D	

FIG.4)

1.11 CURRENT DATA		89/59
ENGINE SPEED	2335 rpm	
INPUT SPEED(PG-A)	2325. rpm	
TCC SLIP RPM	28.8 rpm	
TCCSV(LU)	8.8 %	
TCCSV CURRENT(LU)	48.8 mA	
TCCSV PRESSURE(LU)	-43.5psi	
CURRENT GEAR POSITION	3 GEAR	
SELECTED LEVER RANGE	D	

FIG.5)

1.11 CURRENT DATA		89/59
ENGINE SPEED	2293 rpm	
INPUT SPEED(PG-A)	2384. rpm	
TCC SLIP RPM	8.8 rpm	
TCCSV(LU)	38.4 %	
TCCSV CURRENT(LU)	388.8mA	
TCCSV PRESSURE(LU)	5.8 psi	
CURRENT GEAR POSITION	4 GEAR	
SELECTED LEVER RANGE	D	

FIG.6)

1.11 CURRENT DATA		89/59
ENGINE SPEED	2352 rpm	
INPUT SPEED(PG-A)	2353. rpm	
TCC SLIP RPM	8.8 rpm	
TCCSV(LU)	42.8 %	
TCCSV CURRENT(LU)	488.8mA	
TCCSV PRESSURE(LU)	18.1 psi	
CURRENT GEAR POSITION	5 GEAR	
SELECTED LEVER RANGE	D	

FIG.7)

- FIG.1) "P,N" range
- FIG.2) "R" range
- FIG.3) "D" range 1st gear
- FIG.4) "D" range 2nd gear
- FIG.5) "D" range 3rd gear
- FIG.6) "D" range 4th gear
- FIG.7) "D" range 5th gear

## AT -110

## AUTOMATIC TRANSAXLE (A5SR1/2)

5. Is "TCC SLIP(DAMPER CLUTCH SL.RPM)" within specifications?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.


**NO**

Go to "Component Inspection" procedure.

### COMPONENT INSPECTION EA9DAFCD

1. Disconnect "C06-2/C106-2" connector.
2. Ignition "OFF".
3. Measure resistance between terminal "9" of the C06-2/C106-2 harness connector and chassis ground.

Specification : approx. 3~9

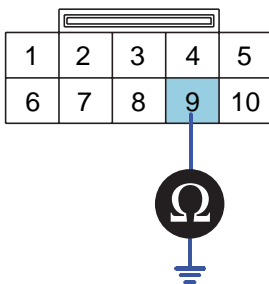

**C06-2 [DSL 2.5]**  
**C106-2 [GSL 3.3/3.8]**  
 Component side

1. ATF 2
2. LOW COAST BRAKE SOLENOID VALVE
3. HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
4. DIRECT CLUTCH SOLENOID VALVE
6. FRONT BRAKE SOLENOID VALVE
7. INPUT CLUTCH SOLENOID VALVE
8. PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
9. TCCSV

SBLAT6142L

4. Is resistance within specifications?

**YES**

Repair TORQUE CONVERTER CLUTCH(REPLACE Torque Converter ) as necessary and Go to "Verification of Vehicle Repair" procedure.

**NO**

Replace A/T assembly (possible to BODY CONTROL VALVE faulty) as necessary and Go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR** E14181F8

After a repair, it is essential to verify that the fault has been corrected.

1. Connect scantool and select "Diagnostic Trouble Codes(DTCs)" mode.
2. Using a scantool, Clear DTC.
3. Operate the vehicle within DTC Enable conditions in General information.
4. Are any DTCs present?

**YES**

Go to the applicable troubleshooting procedure.


**NO**

System performing to specification at this time.

www.CarGarage.ir

**DTC P0743 TORQUE CONVERTER CLUTCH CIRCUIT - ELECTRICAL**

**COMPONENT LOCATION** E6FDB372

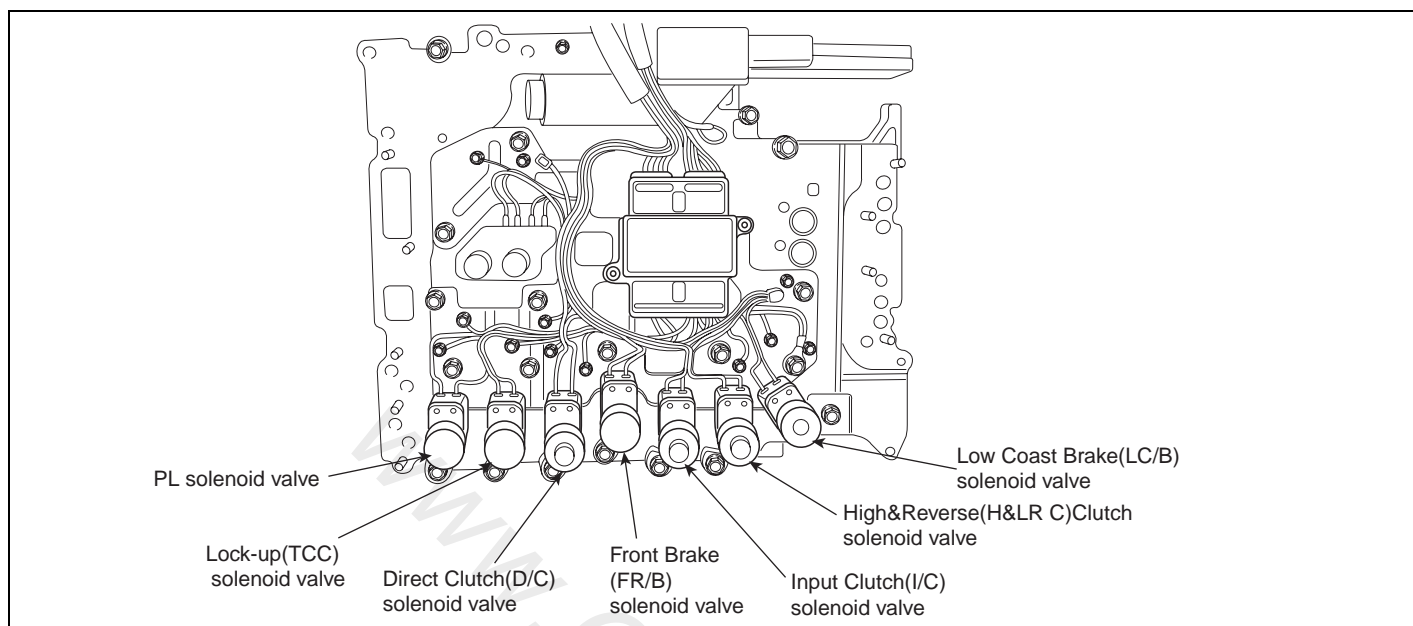

SBLAT6150L

**GENERAL DESCRIPTION** E1622341

Refer to DTC P0741.

**DTC DESCRIPTION** E02B1280

The TCM checks the Damper Clutch Control Signal by monitoring the feedback signal from the solenoid valve drive circuit. If an unexpected signal is monitored, (For example, high voltage is detected when low voltage is expected, or low voltage is detected when high voltage is expected) the TCM judges that the DCCSV circuit is malfunctioning and sets this code.

**DTC DETECTING CONDITION** E2F631E3

[DSL 2.5]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	TORQUE CON- VERTER(DAMPER) CLUTCH : TCC <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty TCC SOLENOID VALVE</li> <li>Faulty PCM/TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>CONTINUOUS</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Ground short/open :Monitoring value[current] 0.05A, When the driver output 0.49A</li> <li>B+ short : Monitoring value[current] 0.4A, When the driver output 0.75A</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 5sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Lock-up control is prohibited(L/U off)</li> </ul>	



**AUTOMATIC TRANSAXLE SYSTEM**

[GSL 3.3/3.8]

Item	Detecting Condition	Possible cause
DTC Strategy	• Check voltage range	TORQUE CON- VERTER(DAMPER) CLUTCH : TCC • Open or short in circuit • Faulty TCC SOLENOID VALVE • Faulty PCM/TCM
Enable Conditions	• 10V < Actuator power supply voltage < 16V	
Threshold value	• Hardware "IC" check	
Diagnostic Time	• More than 0.2sec	
Fail Safe	• Lock-up control is prohibited(L/U off)	

**MONITOR SCANTOOL DATA** EAAF92B2

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "TCC SOL. VALVE" parameter on the scantool.
4. Select "D RANGE" and Operate the vehicle 5 gear.
5. Check "TCC SOL. VALVE" parameter value changes while driving.

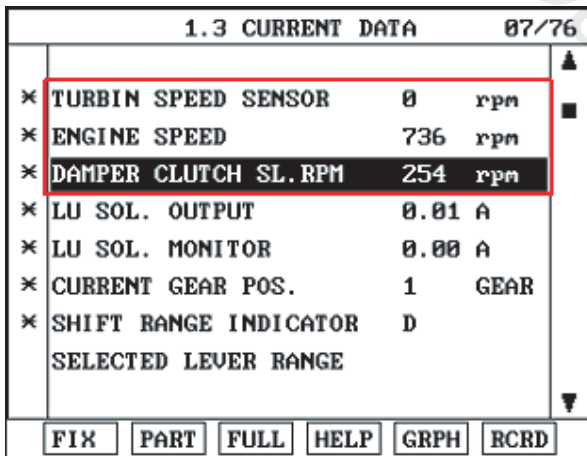


FIG.1)

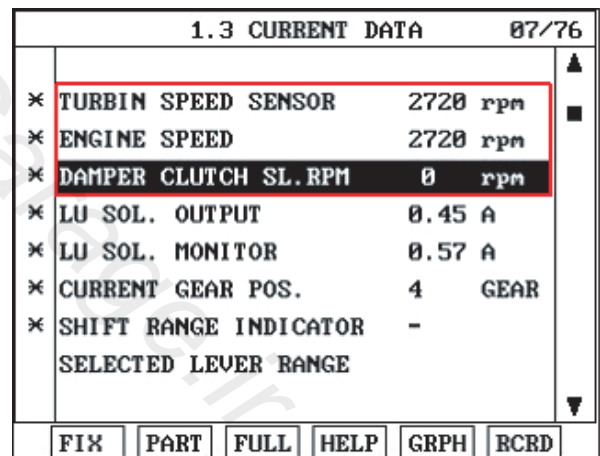


FIG.2)

FIG.1) Not engagement status of TCC

FIG.2) Engagement status of TCC

SBLAT6151L

6. Does "TCC SOLENOID DUTY " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of vehicle repair" procedure.

**NO**

Go to "Terminal & connector inspection " procedure.

AT -114

AUTOMATIC TRANSAXLE (A5SR1/2)


**TERMINAL & CONNECTOR INSPECTION** E5928B4F

Refer to DTC P0741.

**SIGNAL CIRCUIT INSPECTION** EC912FC6

1. Disconnect "C06-2/C106-2" connector.
2. IGNITION "ON", ENGINE "OFF".
3. Measure voltage between terminal "9" of the C06-2/C106-2 harness connector and chassis ground.

Specification : approx. 5V

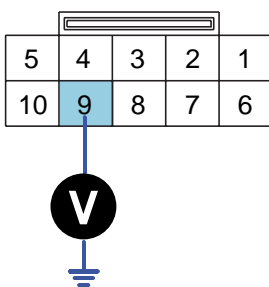

C06-2 [DSL 2.5]  
C106-2 [GSL 3.3/3.8]

- 1.ATF 2
- 2.LOW COAST BRAKE SOLENOID VALVE
- 3.HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
- 4.DIRECT CLUTCH SOLENOID VALVE
- 6.FRONT BRAKE SOLENOID VALVE
- 7.INPUT CLUTCH SOLENOID VALVE
- 8.PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
- 9.TCCSV

SBLAT6152L

4. Is voltage within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.

**COMPONENT INSPECTION** E50BFCCD

Refer to DTC P0741.

**VERIFICATION OF VEHICLE REPAIR** EE4E905B

Refer to DTC P0741.

## AUTOMATIC TRANSAXLE SYSTEM

AT -115

**DTC P0748 PRESSURE CONTROL SOLENOID VALVE A - ELECTRICAL****COMPONENT LOCATION** E26C6DC7

Refer to DTC P0743.

**GENERAL DESCRIPTION** E0B9B1BD

The line pressure solenoid valve regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM. The line pressure duty cycle valve is not consistent when the closed throttle position signal is "ON".

**DTC DESCRIPTION** E0E0DEB5

To confirm the line pressure duty cycle at low pressure, the accelerator (throttle) should be open until the closed throttle position signal is "OFF".

**DTC DETECTING CONDITION** EEFC025

[DSL 2.5]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	PRESSURE CONTROL SOLENOID VALVE(LINE PRESSURE : PCSV(PL. SOL)) <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty PCSV</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>CONTINUOUS</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Ground short/open : Monitoring value[current] 0.05A, When the driver output 0.49A</li> <li>B+ short : Monitoring value[current] 0.4A, When the driver output 0.75A</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 5sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>5 gear is prohibited.(L/U off)</li> <li>Sports mode is prohibited.</li> </ul>	

[GSL 3.3/3.8]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	PRESSURE CONTROL SOLENOID VALVE(LINE PRESSURE : PCSV(PL. SOL)) <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty PCSV</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>10V &lt; Actuator power supply voltage &lt; 16V</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Hardware "IC" check</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 0.2sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Lock-up control is prohibited(L/U off)</li> </ul>	

**SIGNAL WAVEFORM** E76B004A

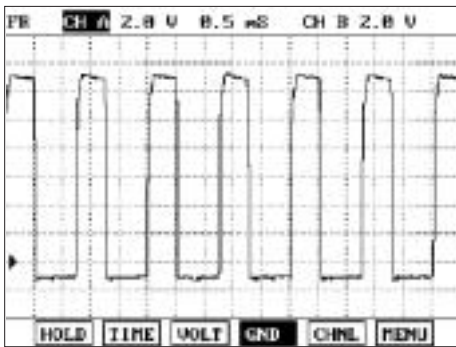


FIG.1)

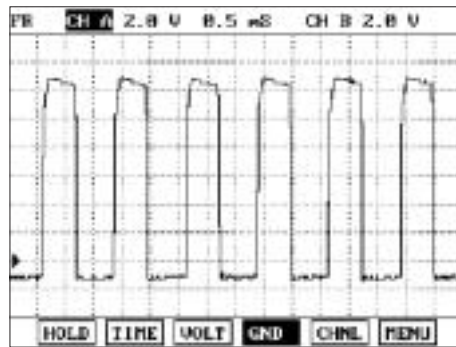


FIG.2)

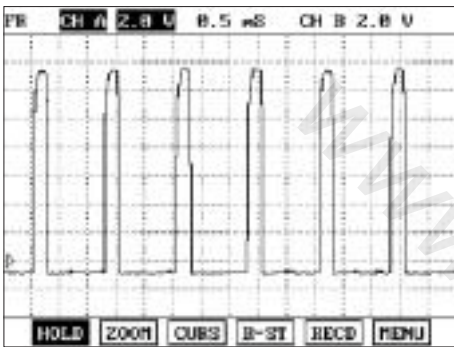


FIG.3)

FIG.1) N RANGE

FIG.2) N → D (Low pressure control)

FIG.3) STALL TEST(High pressure control)

SBLAT6155L

**MONITOR SCANTOOL DATA** E54BA5EB

1. Connect scantool to data link connector(DLC)
2. Engine "ON".
3. Monitor the "PCSV" parameter on the scantool.
4. Select "D RANGE" and Operate the vehicle.
5. Check "PCSV" parameter value changes while driving.

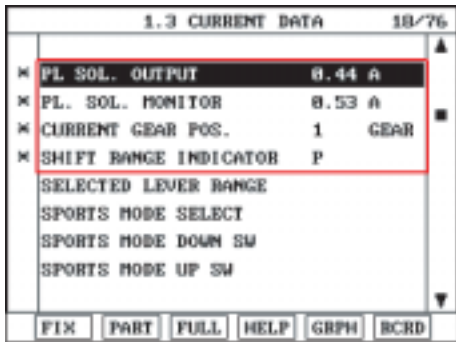


FIG.1)

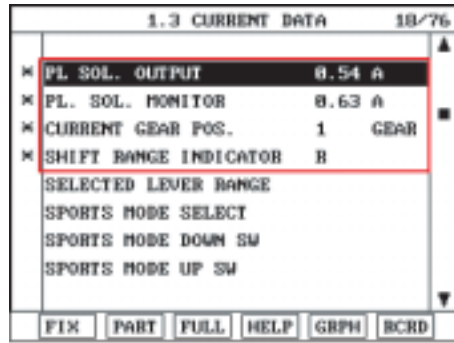


FIG.2)

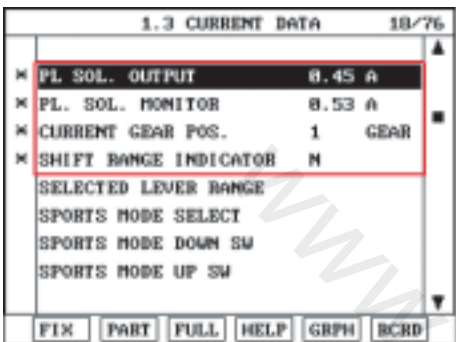


FIG.3)

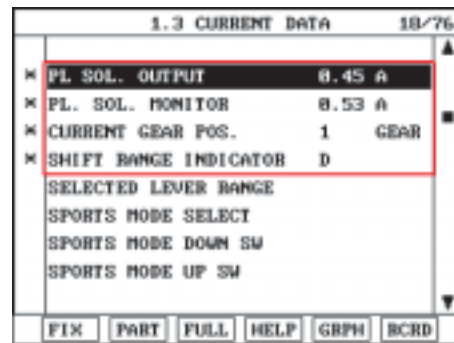


FIG.4)

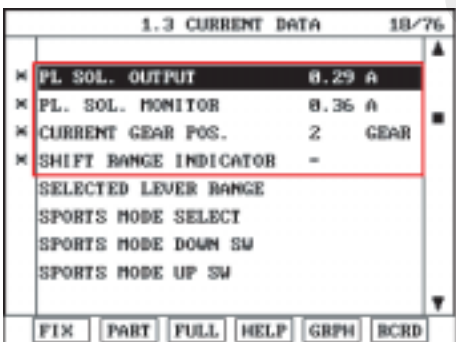


FIG.5)

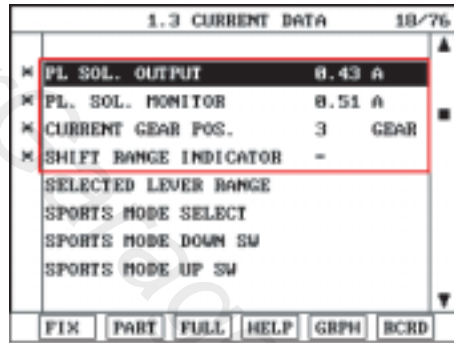


FIG.6)

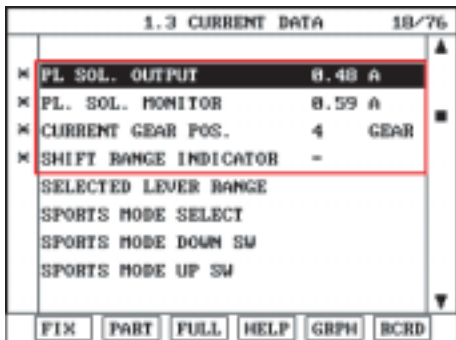


FIG.7)

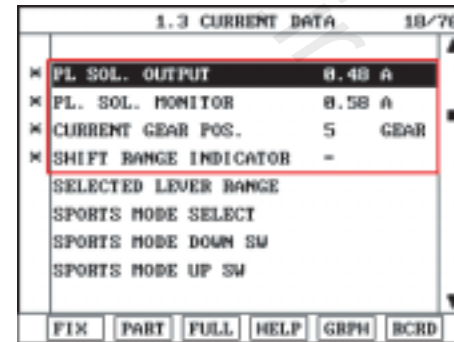


FIG.8)

FIG.1) "P" Range

FIG.2) "R" Shifting

FIG.3) "N" Range

FIG.4) "D" Range 1st gear

FIG.5) "D" Range 2nd gear

FIG.6) "D" Range 3rd gear

FIG.7) "D" Range 4th gear

FIG.8) "D" Range 5th gear

## AT -118

## AUTOMATIC TRANSAXLE (A5SR1/2)

6. Does "PCSV DUTY " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection " procedure.


### TERMINAL & CONNECTOR INSPECTION E0E959CA

Refer to DTC P0741.

### SIGNAL CIRCUIT INSPECTION EAA9FDC9

1. Disconnect "C06-2/C106-2" connector.
2. IGNITION "ON", ENGINE "OFF"
3. Measure voltage between terminal "8" of the C06-2/C106-2 harness connector and chassis ground.

Specification : approx. 5V

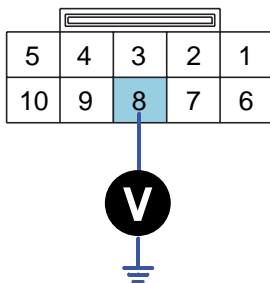

C06-2 [DSL 2.5]  
C106-2 [GSL 3.3/3.8]

1. ATF 2
2. LOW COAST BRAKE SOLENOID VALVE
3. HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
4. DIRECT CLUTCH SOLENOID VALVE
6. FRONT BRAKE SOLENOID VALVE
7. INPUT CLUTCH SOLENOID VALVE
8. PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
9. TCCSV

SBLAT6157L

4. Is voltage within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.

**AUTOMATIC TRANSAXLE SYSTEM****AT -119****COMPONENT INSPECTION**


ECA1DF92

1. Disconnect "C06-2/C106-2" connector.
2. Ignition "OFF".
3. Measure resistance between terminal "8" of the C06-2/C106-2 harness connector and chassis ground.

---

 Specification : approx. 3~9
 

---

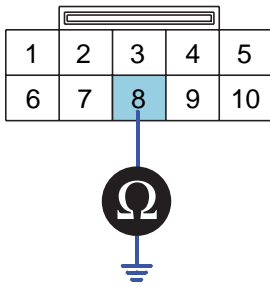

**C06-2 [DSL 2.5]**  
**C106-2 [GSL 3.3/3.8]**  
 Component side

- 1.ATF 2
- 2.LOW COAST BRAKE SOLENOID VALVE
- 3.HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
- 4.DIRECT CLUTCH SOLENOID VALVE
- 6.FRONT BRAKE SOLENOID VALVE
- 7.INPUT CLUTCH SOLENOID VALVE
- 8.PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)**
- 9.TCCSV

SBLAT6158L

4. Is resistance within specifications?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

5. Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Replace "PRESSURE CONTROL SOLENOID VALVE" as necessary and Go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR**

E92CB515

Refer to DTC P0741.

AT -120

AUTOMATIC TRANSAXLE (A5SR1/2)

<b>DTC P0751 SHIFT SOLENOID "A(I/C SOLENOID)" PERFORMANCE OR STUCK OFF</b>
--

**COMPONENT LOCATION** ECF49E1B

Refer to DTC P0743.

**GENERAL DESCRIPTION** E3DAE4CD

The Automatic Transmission changes the gear position of the transmission utilizing a combination of Clutches and Brakes, which are controlled by solenoid valves. Input clutch solenoid valve is controlled by the TCM in response to signals sent from the inhibitor switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

**DTC DESCRIPTION** E8FA9C0B

This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

**DTC DETECTING CONDITION** E8B0C782

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Rationality check (stuck-off)</li> </ul>	INPUT CLUTCH SOLENOID VALVE : I/C SOLENOID VALVE <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty I/C SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed 6.2MPH(10km/h)</li> <li>Engine speed &gt; 305 rpm</li> <li>A/T range switch is D range</li> <li>A/T flued temperature -40°F</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Fluid pressure switch A "OFF" when the monitoring value 0.05A and When there's a difference between calculated and measured gear ratio.</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>A/T flued temperature &gt; 14°F : More then 2secs</li> <li>A/T flued temperature 14°F : More then 8secs</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked in to 4th gear.</li> </ul>	



## AUTOMATIC TRANSAXLE SYSTEM

AT -121

## SIGNAL WAVEFORM

E561905F

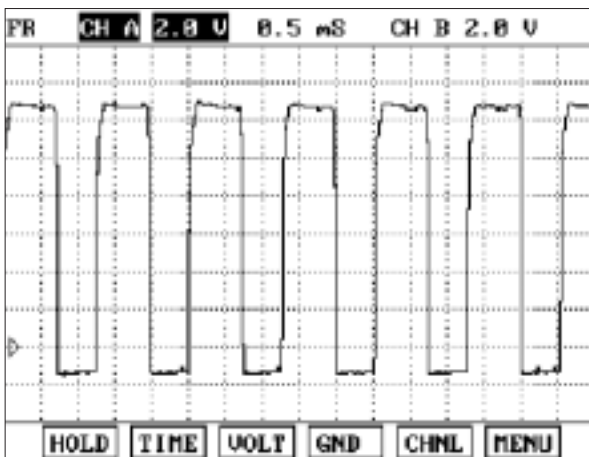


FIG.1)

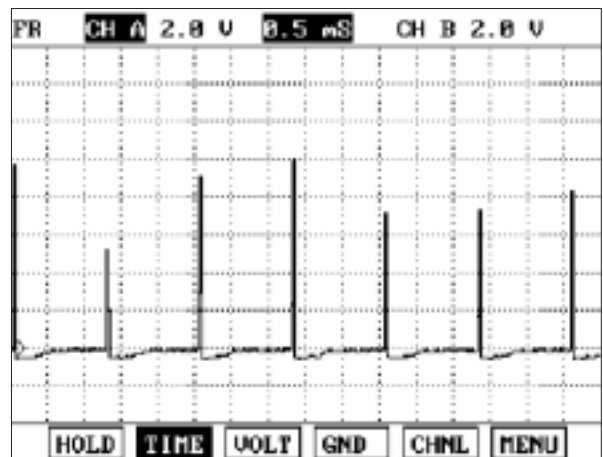


FIG.2)

FIG.1) N RANGE

FIG.2) 4 GEAR

SBLAT6160L

## MONITOR SCANTOOL DATA

EE49E2D2

1. Connect scantool to data link connector(DLC)
2. Engine "ON".
3. Monitor the "I/C SOLENOID" parameter on the scantool.
4. Select "D RANGE" and Operate the vehicle.
5. Check "I/C SOLENOID" parameter value changes while driving.

1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.69 A	
✖ I/C SOL. MONITOR	0.88 A	
✖ CURRENT GEAR POS.	1	GEAR
✖ SHIFT RANGE INDICATOR	P	
✖ OIL PRESS SW3(I/C)	OFF	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.1)

1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.78 A	
✖ I/C SOL. MONITOR	0.88 A	
✖ CURRENT GEAR POS.	1	GEAR
✖ SHIFT RANGE INDICATOR	R	
✖ OIL PRESS SW3(I/C)	OFF	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.2)

1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.78 A	
✖ I/C SOL. MONITOR	0.88 A	
✖ CURRENT GEAR POS.	1	GEAR
✖ SHIFT RANGE INDICATOR	N	
✖ OIL PRESS SW3(I/C)	OFF	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.3)

1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.78 A	
✖ I/C SOL. MONITOR	0.88 A	
✖ CURRENT GEAR POS.	1	GEAR
✖ SHIFT RANGE INDICATOR	D	
✖ OIL PRESS SW3(I/C)	OFF	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.4)

1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.69 A	
✖ I/C SOL. MONITOR	0.79 A	
✖ CURRENT GEAR POS.	2	GEAR
✖ SHIFT RANGE INDICATOR	-	
✖ OIL PRESS SW3(I/C)	OFF	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.5)

1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.68 A	
✖ I/C SOL. MONITOR	0.88 A	
✖ CURRENT GEAR POS.	3	GEAR
✖ SHIFT RANGE INDICATOR	-	
✖ OIL PRESS SW3(I/C)	OFF	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.6)

1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.81 A	
✖ I/C SOL. MONITOR	0.88 A	
✖ CURRENT GEAR POS.	4	GEAR
✖ SHIFT RANGE INDICATOR	-	
✖ OIL PRESS SW3(I/C)	ON	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.7)

1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.81 A	
✖ I/C SOL. MONITOR	0.88 A	
✖ CURRENT GEAR POS.	5	GEAR
✖ SHIFT RANGE INDICATOR	-	
✖ OIL PRESS SW3(I/C)	ON	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.8)

FIG.1) "P" Range

FIG.2) "R" Shifting

FIG.3) "N" Range

FIG.4) "D" Range 1st gear

FIG.5) "D" Range 2nd gear

FIG.6) "D" Range 3rd gear

FIG.7) "D" Range 4th gear

FIG.8) "D" Range 5th gear

**AUTOMATIC TRANSAXLE SYSTEM****AT -123**

6. Does "I/C SOLENOID " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection " procedure.

**TERMINAL & CONNECTOR INSPECTION** ED42F680

Refer to DTC P0741.


**SIGNAL CIRCUIT INSPECTION** ED9D8DEE

1. Disconnect "C06-2" connector.
2. IGNITION "ON", ENGINE "OFF"
3. Measure voltage between terminal "7" of the C06-2 harness connector and chassis ground.

---

Specification : Output voltage repeated between 4V and 12V

---

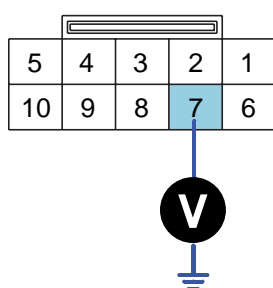**C06-2**

- 1.ATF 2
- 2.LOW COAST BRAKE SOLENOID VALVE
- 3.HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
- 4.DIRECT CLUTCH SOLENOID VALVE
- 6.FRONT BRAKE SOLENOID VALVE
- 7.INPUT CLUTCH SOLENOID VALVE**
- 8.PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
- 9.TCCSV

SBLAT6162L

4. Is voltage within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.


## AT -124

## AUTOMATIC TRANSAXLE (A5SR1/2)

## COMPONENT INSPECTION E51054EE

1. Disconnect "C06-2" connector.
2. Ignition "OFF".
3. Measure resistance between terminal "7" of the C06-2 harness connector and chassis ground.

Specification : approx. 3~9

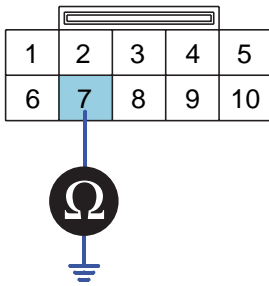

**C06-2**  
Component side

1. ATF 2
2. LOW COAST BRAKE SOLENOID VALVE
3. HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
4. DIRECT CLUTCH SOLENOID VALVE
6. FRONT BRAKE SOLENOID VALVE
- 7. INPUT CLUTCH SOLENOID VALVE**
8. PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
9. TCCSV

SBLAT6163L

4. Is resistance within specifications?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

5. Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Replace "I/C SOLENOID VALVE" as necessary and Go to "Verification of Vehicle Repair" procedure.

## VERIFICATION OF VEHICLE REPAIR EAD35AB6

Refer to DTC P0741.

**AUTOMATIC TRANSAXLE SYSTEM**

AT -125

**DTC P0752 SHIFT SOLENOID "A(I/C SOLENOID)" PERFORMANCE OR STUCK ON****COMPONENT LOCATION** EAD4FEC6

Refer to DTC P0743.

**GENERAL DESCRIPTION** EFAFC701

Refer to DTC P0751.

**DTC DESCRIPTION** E04A8BCD

Refer to DTC P0751.

**DTC DETECTING CONDITION** E4FFAD34

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Rationality check (stuck-on)</li> </ul>	INPUT CLUTCH SOLENOID VALVE : I/C SOLENOID VALVE <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty I/C SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed 6.2MPH(10km/h)</li> <li>Engine speed &gt; 305 rpm</li> <li>A/T range switch is D range</li> <li>A/T flued temperature -40°F</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Fluid pressure switch A "ON" when the monitoring value 0.75A and When there's a difference between calculated and measured gear ratio.</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>A/T flued temperature &gt; 14°F : More then 2secs</li> <li>A/T flued temperature 14°F : More then 8secs</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked in to 4th gear.</li> </ul>	

**SIGNAL WAVEFORM** E8C8C8BE

Refer to DTC P0751.

**MONITOR SCANTOOL DATA** E6E34514

Refer to DTC P0751.

**TERMINAL & CONNECTOR INSPECTION** E2A3E5FC

Refer to DTC P0741.

**AT -126**

**AUTOMATIC TRANSAXLE (A5SR1/2)**

---

**SIGNAL CIRCUIT INSPECTION** EDF1E3CE

Refer to DTC P0751.

**COMPONENT INSPECTION** ECBE4A49

Refer to DTC P0751.

**VERIFICATION OF VEHICLE REPAIR** EFF6D248

Refer to DTC P0741.

www.CarGarage.ir

## AUTOMATIC TRANSAXLE SYSTEM

AT -127

<b>DTC P0753 SHIFT SOLENOID "A(I/C SOLENOID)" CIRCUIT - OPEN OR SHORT(GND)</b>
--

**COMPONENT LOCATION** E9B5F58B

Refer to DTC P0743.

**GENERAL DESCRIPTION** E76A10E1

The Automatic Transmission changes the gear position of the transmission utilizing a combination of Clutches and Brakes, which are controlled by solenoid valves. Input clutch solenoid valve is controlled by the TCM in response to signals sent from the inhibitor switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

**DTC DESCRIPTION** EDD1FFD6

This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

**DTC DETECTING CONDITION** EBC60397

[DSL 2.5]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	INPUT CLUTCH SOLENOID VALVE : I/C SOLENOID VALVE <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty I/C SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed 6.2MPH(10km/h)</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Ground short/open :Monitoring value[current] 0.4A, When the driver output 0.7A</li> <li>B+ short:Monitoring value[current] 0.4A, When the driver output 0.7A</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>more than 5sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>5 gear is prohibited.(L/U off)</li> <li>Sports mode is prohibited.</li> </ul>	

[GSL 3.3/3.8]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	INPUT CLUTCH SOLENOID VALVE : I/C SOLENOID VALVE <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty I/C SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>10V &lt; Actuator power supply voltage &lt; 16V</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Hardware "IC" check</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 0.2sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Lock-up control is prohibited(L/U off)</li> </ul>	

**SIGNAL WAVEFORM** ECFA76E2

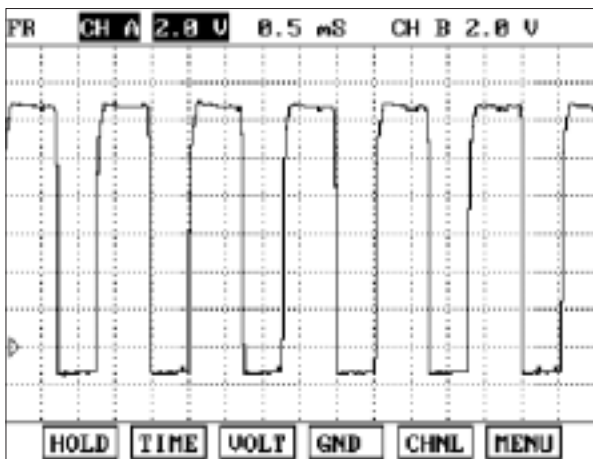


FIG.1)

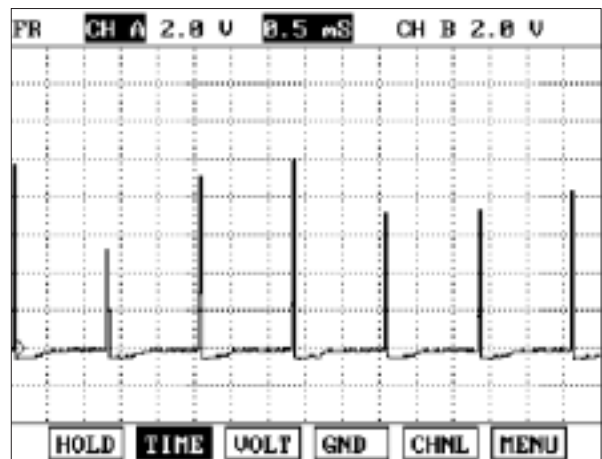


FIG.2)

FIG.1) N RANGE  
FIG.2) 4 GEAR

SBLAT6160L

**MONITOR SCANTOOL DATA** EC6E2FB2

1. Connect scantool to data link connector(DLC)
2. Engine "ON".
3. Monitor the "I/C SOLENOID" parameter on the scantool.
4. Select "D RANGE" and Operate the vehicle.
5. Check "I/C SOLENOID" parameter value changes while driving.



1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.69 A	
✖ I/C SOL. MONITOR	0.88 A	
✖ CURRENT GEAR POS.	1 GEAR	
✖ SHIFT RANGE INDICATOR	P	
✖ OIL PRESS SW3(I/C)	OFF	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.1)

1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.78 A	
✖ I/C SOL. MONITOR	0.88 A	
✖ CURRENT GEAR POS.	1 GEAR	
✖ SHIFT RANGE INDICATOR	R	
✖ OIL PRESS SW3(I/C)	OFF	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.2)

1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.78 A	
✖ I/C SOL. MONITOR	0.88 A	
✖ CURRENT GEAR POS.	1 GEAR	
✖ SHIFT RANGE INDICATOR	N	
✖ OIL PRESS SW3(I/C)	OFF	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.3)

1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.78 A	
✖ I/C SOL. MONITOR	0.88 A	
✖ CURRENT GEAR POS.	1 GEAR	
✖ SHIFT RANGE INDICATOR	D	
✖ OIL PRESS SW3(I/C)	OFF	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.4)

1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.69 A	
✖ I/C SOL. MONITOR	0.79 A	
✖ CURRENT GEAR POS.	2 GEAR	
✖ SHIFT RANGE INDICATOR	-	
✖ OIL PRESS SW3(I/C)	OFF	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.5)

1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.68 A	
✖ I/C SOL. MONITOR	0.88 A	
✖ CURRENT GEAR POS.	3 GEAR	
✖ SHIFT RANGE INDICATOR	-	
✖ OIL PRESS SW3(I/C)	OFF	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.6)

1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.81 A	
✖ I/C SOL. MONITOR	0.88 A	
✖ CURRENT GEAR POS.	4 GEAR	
✖ SHIFT RANGE INDICATOR	-	
✖ OIL PRESS SW3(I/C)	ON	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.7)

1.3 CURRENT DATA		28/76
✖ I/C SOL. OUTPUT	0.81 A	
✖ I/C SOL. MONITOR	0.88 A	
✖ CURRENT GEAR POS.	5 GEAR	
✖ SHIFT RANGE INDICATOR	-	
✖ OIL PRESS SW3(I/C)	ON	
SPORTS MODE UP SW		
SPORTS MODE GEAR POS.		
INHIBITOR SW. MONITOR		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.8)

FIG.1) "P" Range

FIG.2) "R" Shifting

FIG.3) "N" Range

FIG.4) "D" Range 1st gear

FIG.5) "D" Range 2nd gear

FIG.6) "D" Range 3rd gear

FIG.7) "D" Range 4th gear

FIG.8) "D" Range 5th gear

## AT -130

## AUTOMATIC TRANSAXLE (A5SR1/2)

6. Does "I/C SOLENOID " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection " procedure.

## TERMINAL & CONNECTOR INSPECTION EA9EADEB

Refer to DTC P0741.


## SIGNAL CIRCUIT INSPECTION EA3475FB

1. Disconnect "C06-2/C106-2" connector.
2. IGNITION "ON", ENGINE "OFF"
3. Measure voltage between terminal "7" of the C06-2/C106-2 harness connector and chassis ground.

---

Specification : Output voltage repeated between 4V and 12V

---

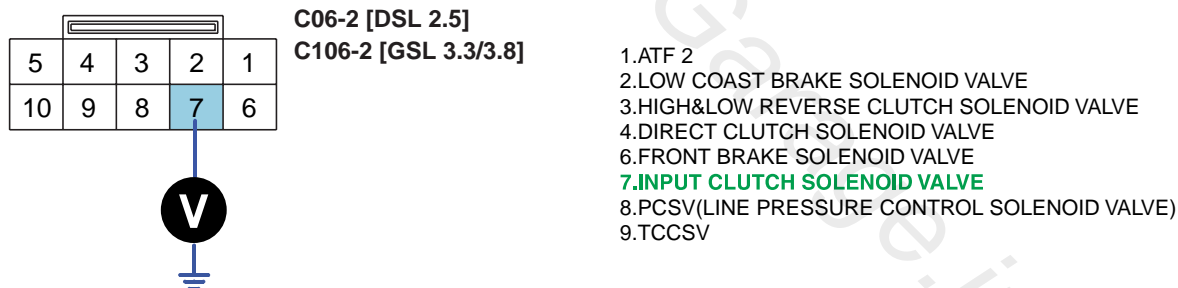

SBLAT6164L

4. Is voltage within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.


**AUTOMATIC TRANSAXLE SYSTEM****AT -131****COMPONENT INSPECTION** E67D9ED2

1. Disconnect "C06-2/C106-2" connector.
2. Ignition "OFF".
3. Measure resistance between terminal "7" of the C06-2/C106-2 harness connector and chassis ground.

---

 Specification : approx. 3~9
 

---

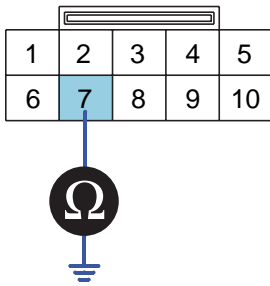

**C06-2 [DSL 2.5]**  
**C106-2 [GSL 3.3/3.8]**  
 Component side

- 1.ATF 2
- 2.LOW COAST BRAKE SOLENOID VALVE
- 3.HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
- 4.DIRECT CLUTCH SOLENOID VALVE
- 6.FRONT BRAKE SOLENOID VALVE
- 7.INPUT CLUTCH SOLENOID VALVE**
- 8.PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
- 9.TCCSV

SBLAT6169L

4. Is resistance within specifications?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

5. Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Replace "I/C SOLENOID VALVE" as necessary and Go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR** ECE7BF67

Refer to DTC P0741.

AT -132

AUTOMATIC TRANSAXLE (A5SR1/2)

<b>DTC P0756 SHIFT SOLENOID "B(FR/B SOLENOID)" PERFORMANCE OR STUCK OFF</b>
---

**COMPONENT LOCATION** E236DAF1

Refer to DTC P0743.

**GENERAL DESCRIPTION** E45ABDA1

The Automatic Transmission changes the gear position of the transmission utilizing a combination of Clutches and Brakes, which are controlled by solenoid valves. Front brake solenoid valve is controlled by the TCM in response to signals sent from the inhibitor switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gear will then be shifted to the optimum position.

**DTC DESCRIPTION** E60D3D2C

This is not only caused by electrical malfunction (circuit open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

**DTC DETECTING CONDITION** E18FAB08

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Rationality check (stuck-off)</li> </ul>	FRONT BRAKE SOLENOID VALVE : Fr/B SOLENOID VALVE <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty Fr/B SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed 6.2MPH(10km/h)</li> <li>Engine speed &gt; 305 rpm</li> <li>A/T range switch is D range</li> <li>A/T flued temperature -40°F</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Fluid pressure switch B "OFF" when the monitoring value 0.75A and When there's a difference between calculated and measured gear ratio.</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>A/T flued temperature &gt; 14°F : More then 2secs</li> <li>A/T flued temperature 14°F : More then 8secs</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked in to 4th gear.</li> </ul>	

## AUTOMATIC TRANSAXLE SYSTEM

AT -133

## SIGNAL WAVEFORM

EA3C4C88

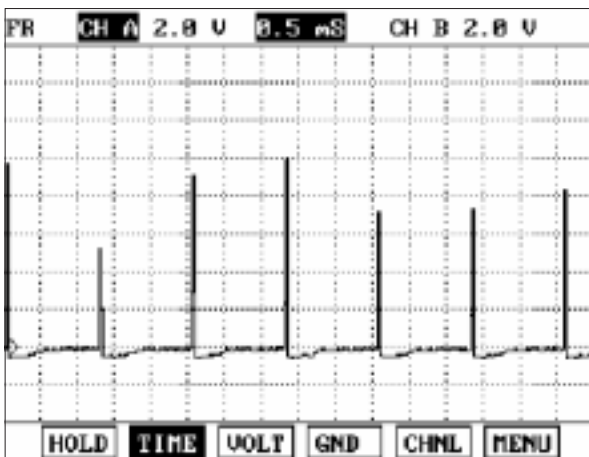


FIG.1)

FIG.1) R RANGE  
FIG.2) 4 GEAR

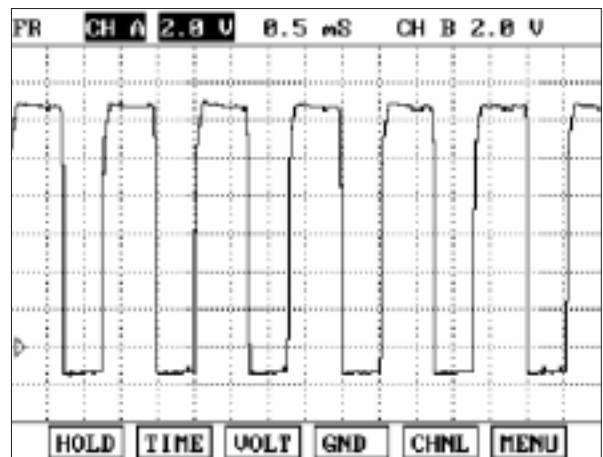


FIG.2)

SBLAT6165L

## MONITOR SCANTOOL DATA

EE97C5CC

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "Fr/B SOLENOID" parameter on the scantool.
4. Select "R,D RANGE" and Operate the vehicle.
5. Check "Fr/B SOLENOID" parameter value changes while driving.

1.3 CURRENT DATA		22/76
* FR/B SOL. OUTPUT	0.78 A	
* FR/B SOL. MONITOR	0.88 A	
* CURRENT GEAR POS.	1	GEAR
* SHIFT RANGE INDICATOR	P	
* OIL PRESS SW1(FR/B)	ON	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.1)

1.3 CURRENT DATA		22/76
* FR/B SOL. OUTPUT	0.71 A	
* FR/B SOL. MONITOR	0.79 A	
* CURRENT GEAR POS.	1	GEAR
* SHIFT RANGE INDICATOR	R	
* OIL PRESS SW1(FR/B)	ON	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.2)

1.3 CURRENT DATA		22/76
* FR/B SOL. OUTPUT	0.71 A	
* FR/B SOL. MONITOR	0.88 A	
* CURRENT GEAR POS.	1	GEAR
* SHIFT RANGE INDICATOR	N	
* OIL PRESS SW1(FR/B)	ON	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.3)

1.3 CURRENT DATA		22/76
* FR/B SOL. OUTPUT	0.71 A	
* FR/B SOL. MONITOR	0.88 A	
* CURRENT GEAR POS.	1	GEAR
* SHIFT RANGE INDICATOR	D	
* OIL PRESS SW1(FR/B)	ON	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.4)

1.3 CURRENT DATA		22/76
* FR/B SOL. OUTPUT	0.78 A	
* FR/B SOL. MONITOR	0.88 A	
* CURRENT GEAR POS.	2	GEAR
* SHIFT RANGE INDICATOR	-	
* OIL PRESS SW1(FR/B)	ON	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.5)

1.3 CURRENT DATA		22/76
* FR/B SOL. OUTPUT	0.69 A	
* FR/B SOL. MONITOR	0.79 A	
* CURRENT GEAR POS.	3	GEAR
* SHIFT RANGE INDICATOR	-	
* OIL PRESS SW1(FR/B)	ON	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.6)

1.3 CURRENT DATA		22/76
* FR/B SOL. OUTPUT	0.81 A	
* FR/B SOL. MONITOR	0.88 A	
* CURRENT GEAR POS.	4	GEAR
* SHIFT RANGE INDICATOR	-	
* OIL PRESS SW1(FR/B)	OFF	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.7)

1.3 CURRENT DATA		22/76
* FR/B SOL. OUTPUT	0.68 A	
* FR/B SOL. MONITOR	0.88 A	
* CURRENT GEAR POS.	5	GEAR
* SHIFT RANGE INDICATOR	-	
* OIL PRESS SW1(FR/B)	ON	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GRPH BCRD		

FIG.8)

FIG.1) "P" Range

FIG.2) "R" Shifting

FIG.3) "N" Range

FIG.4) "D" Range 1st gear

FIG.5) "D" Range 2nd gear

FIG.6) "D" Range 3rd gear

FIG.7) "D" Range 4th gear

FIG.8) "D" Range 5th gear

**AUTOMATIC TRANSAXLE SYSTEM****AT -135**

6. Does "Fr/B SOLENOID " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection " procedure.

**TERMINAL & CONNECTOR INSPECTION** E8A37870

Refer to DTC P0741.


**SIGNAL CIRCUIT INSPECTION** E538BAF7

1. Disconnect "C06-2" connector.
2. IGNITION "ON", ENGINE "OFF"
3. Measure voltage between terminal "6" of the C06-2 harness connector and chassis ground.

---

Specification : approx. 5V

---

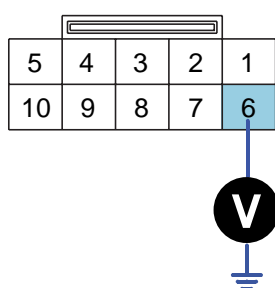**C06-2**

- 1.ATF 2
- 2.LOW COAST BRAKE SOLENOID VALVE
- 3.HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
- 4.DIRECT CLUTCH SOLENOID VALVE
- 6.FRONT BRAKE SOLENOID VALVE**
- 7.INPUT CLUTCH SOLENOID VALVE
- 8.PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
- 9.TCCSV

SBLAT6167L

4. Is voltage within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.

## AT -136

## AUTOMATIC TRANSAXLE (A5SR1/2)


COMPONENT INSPECTION E7E26ED4

1. Disconnect "C06-2" connector.
2. Ignition "OFF".
3. Measure resistance between terminal "6" of the C06-2 harness connector and chassis ground.

---

Specification : approx. 3~9

---

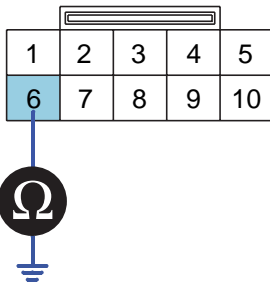

**C06-2**  
Component side

- 1.ATF 2
- 2.LOW COAST BRAKE SOLENOID VALVE
- 3.HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
- 4.DIRECT CLUTCH SOLENOID VALVE
- 6.FRONT BRAKE SOLENOID VALVE
- 7.INPUT CLUTCH SOLENOID VALVE
- 8.PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
- 9.TCCSV

SBLAT6168L

4. Is resistance within specifications?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

5. Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Replace "Fr/B SOLENOID VALVE" as necessary and Go to "Verification of Vehicle Repair" procedure.

VERIFICATION OF VEHICLE REPAIR E52479B8

Refer to DTC P0741.



**AUTOMATIC TRANSAXLE SYSTEM**

AT -137

**DTC P0757 SHIFT SOLENOID "B(FR/B SOLENOID)" PERFORMANCE OR STUCK ON****COMPONENT LOCATION** EE6F9305

Refer to DTC P0743.

**GENERAL DESCRIPTION** EF38F8BB

Refer to DTC P0756.

**DTC DESCRIPTION** E6CFABA9

Refer to DTC P0756.

**DTC DETECTING CONDITION** E3AB62E4

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Rationality check (stuck-off)</li> </ul>	FRONT BRAKE SOLENOID VALVE : Fr/B SOLENOID VALVE <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty Fr/B SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed 6.2MPH(10km/h)</li> <li>Engine speed &gt; 305 rpm</li> <li>A/T range switch is D range</li> <li>A/T flued temperature -40°F</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Fluid pressure switch B "ON" when the monitoring value 0.05A and When there's a difference between calculated and measured gear ratio.</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>A/T flued temperature &gt; 14°F : More then 2secs</li> <li>A/T flued temperature 14°F : More then 8secs</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked in to 5th gear.</li> </ul>	

**SIGNAL WAVEFORM** EDBEFB42

Refer to DTC P0756.

**MONITOR SCANTOOL DATA** EBF54BAD

Refer to DTC P0756.

**TERMINAL & CONNECTOR INSPECTION** EBE970DF

Refer to DTC P0741.

**AT -138**

**AUTOMATIC TRANSAXLE (A5SR1/2)**

---

**SIGNAL CIRCUIT INSPECTION** E5A2FEB9

Refer to DTC P0756.

**COMPONENT INSPECTION** EEA0DB01

Refer to DTC P0756.

**VERIFICATION OF VEHICLE REPAIR** EBB5CE4C

Refer to DTC P0741.

www.CarGarage.ir

## AUTOMATIC TRANSAXLE SYSTEM

AT -139

**DTC P0758 SHIFT SOLENOID "B(FR/B SOLENOID)" CIRCUIT - OPEN OR SHORT(GND)****COMPONENT LOCATION** EA1B05CC

Refer to DTC P0743.

**GENERAL DESCRIPTION** E13B04FA

The Automatic Transmission changes the gear position of the transmission utilizing a combination of Clutches and Brakes, which are controlled by solenoid valves. Front brake solenoid valve is controlled by the TCM in response to signals sent from the inhibitor switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gear will then be shifted to the optimum position.

**DTC DESCRIPTION** EC8EDFE1

This is not only caused by electrical malfunction (circuit open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

**DTC DETECTING CONDITION** EB4FC2DE

[DSL 2.5]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	FRONT BRAKE SOLENOID VALVE : Fr/B SOLENOID VALVE <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty Fr/B SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed 6.2MPH(10km/h)</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Ground short/open :Monitoring value[current] 0.4A, When the driver output 0.7A</li> <li>B+ short:Monitoring value[current] 0.4A, When the driver output 0.7A</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>more than 5sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked into 4 or 5th gear, lock-up control is inhibited, pressure control is inhibited.</li> </ul>	

[GSL 3.3/3.8]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	FRONT BRAKE SOLENOID VALVE : Fr/B SOLENOID VALVE <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty Fr/B SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>10V &lt; Actuator power supply voltage &lt; 16V</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Hardware "IC" check</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 0.2sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Lock-up control is prohibited(L/U off)</li> </ul>	

**SIGNAL WAVEFORM** EDAD5C90

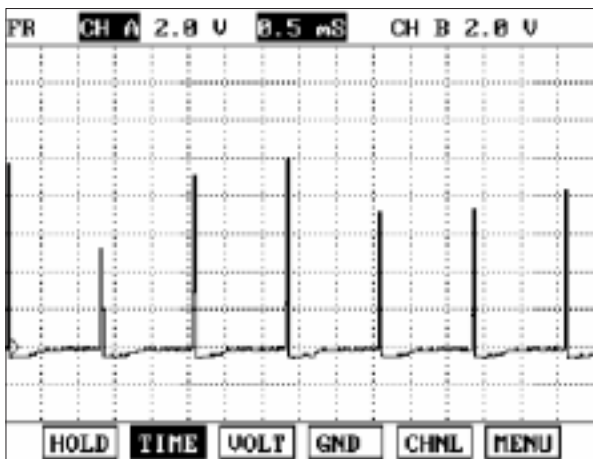


FIG.1)

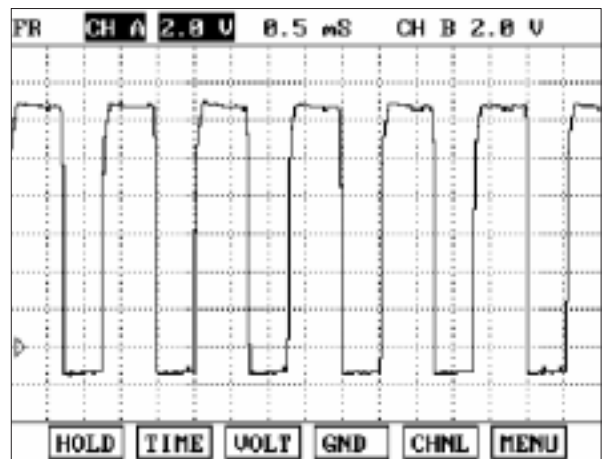


FIG.2)

FIG.1) R RANGE

FIG.2) 4 GEAR

SBLAT6165L

**MONITOR SCANTOOL DATA** EA4B1CCC

1. Connect scantool to data link connector(DLC)
2. Engine "ON".
3. Monitor the "Fr/B SOLENOID" parameter on the scantool.
4. Select "R,D RANGE" and Operate the vehicle.
5. Check "Fr/B SOLENOID" parameter value changes while driving.

1.3 CURRENT DATA		22/76
FR/B SOL. OUTPUT	0.78 A	
FR/B SOL. MONITOR	0.88 A	
CURRENT GEAR POS.	1	GEAR
SHIFT RANGE INDICATOR	P	
OIL PRESS SW1(FR/B)	ON	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GBPH BCRD		

FIG.1)

1.3 CURRENT DATA		22/76
FR/B SOL. OUTPUT	0.71 A	
FR/B SOL. MONITOR	0.79 A	
CURRENT GEAR POS.	1	GEAR
SHIFT RANGE INDICATOR	R	
OIL PRESS SW1(FR/B)	ON	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GBPH BCRD		

FIG.2)

1.3 CURRENT DATA		22/76
FR/B SOL. OUTPUT	0.71 A	
FR/B SOL. MONITOR	0.88 A	
CURRENT GEAR POS.	1	GEAR
SHIFT RANGE INDICATOR	N	
OIL PRESS SW1(FR/B)	ON	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GBPH BCRD		

FIG.3)

1.3 CURRENT DATA		22/76
FR/B SOL. OUTPUT	0.71 A	
FR/B SOL. MONITOR	0.88 A	
CURRENT GEAR POS.	1	GEAR
SHIFT RANGE INDICATOR	D	
OIL PRESS SW1(FR/B)	ON	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GBPH BCRD		

FIG.4)

1.3 CURRENT DATA		22/76
FR/B SOL. OUTPUT	0.78 A	
FR/B SOL. MONITOR	0.88 A	
CURRENT GEAR POS.	2	GEAR
SHIFT RANGE INDICATOR	-	
OIL PRESS SW1(FR/B)	ON	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GBPH BCRD		

FIG.5)

1.3 CURRENT DATA		22/76
FR/B SOL. OUTPUT	0.69 A	
FR/B SOL. MONITOR	0.79 A	
CURRENT GEAR POS.	3	GEAR
SHIFT RANGE INDICATOR	-	
OIL PRESS SW1(FR/B)	ON	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GBPH BCRD		

FIG.6)

1.3 CURRENT DATA		22/76
FR/B SOL. OUTPUT	0.81 A	
FR/B SOL. MONITOR	0.88 A	
CURRENT GEAR POS.	4	GEAR
SHIFT RANGE INDICATOR	-	
OIL PRESS SW1(FR/B)	OFF	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GBPH BCRD		

FIG.7)

1.3 CURRENT DATA		22/76
FR/B SOL. OUTPUT	0.68 A	
FR/B SOL. MONITOR	0.88 A	
CURRENT GEAR POS.	5	GEAR
SHIFT RANGE INDICATOR	-	
OIL PRESS SW1(FR/B)	ON	
BRAKE SWITCH		
REVERSE LAMP		
STARTER RELAY MONITOR		
FIX PART FULL HELP GBPH BCRD		

FIG.8)

FIG.1) "P" Range

FIG.2) "R" Shifting

FIG.3) "N" Range

FIG.4) "D" Range 1st gear

FIG.5) "D" Range 2nd gear

FIG.6) "D" Range 3rd gear

FIG.7) "D" Range 4th gear

FIG.8) "D" Range 5th gear

## AT -142

## AUTOMATIC TRANSAXLE (A5SR1/2)

6. Does "Fr/B SOLENOID " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection " procedure.


### TERMINAL & CONNECTOR INSPECTION E12BD183

Refer to DTC P0741.

### SIGNAL CIRCUIT INSPECTION EAF2B7CD

1. Disconnect "C06-2/C106-2" connector.
2. IGNITION "ON", ENGINE "OFF"
3. Measure voltage between terminal "6" of the C06-2/C106-2 harness connector and chassis ground.

Specification : approx. 5V

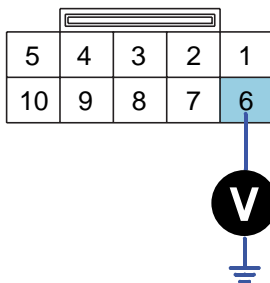

C06-2 [DSL 2.5]  
C106-2 [GSL 3.3/3.8]

1. ATF 2
2. LOW COAST BRAKE SOLENOID VALVE
3. HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
4. DIRECT CLUTCH SOLENOID VALVE
6. FRONT BRAKE SOLENOID VALVE
7. INPUT CLUTCH SOLENOID VALVE
8. PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
9. TCCSV

SBLAT6173L

4. Is voltage within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.

**AUTOMATIC TRANSAXLE SYSTEM****AT -143****COMPONENT INSPECTION**


EEAB9D5D

1. Disconnect "C06-2/C106-2" connector.
2. Ignition "OFF".
3. Measure resistance between terminal "6" of the C06-2/C106-2 harness connector and chassis ground.

---

 Specification : approx. 3~9
 

---

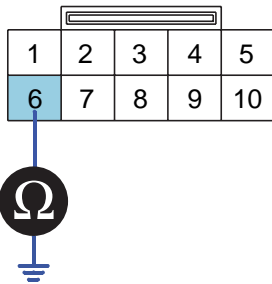**C06-2 [DSL 2.5]****C106-2 [GSL 3.3/3.8]**

Component side

- 1.ATF 2
- 2.LOW COAST BRAKE SOLENOID VALVE
- 3.HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
- 4.DIRECT CLUTCH SOLENOID VALVE
- 6.FRONT BRAKE SOLENOID VALVE**
- 7.INPUT CLUTCH SOLENOID VALVE
- 8.PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
- 9.TCCSV

SBLAT6174L

4. Is resistance within specifications?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

5. Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Replace "Fr/B SOLENOID VALVE" as necessary and Go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR**

EBCCB2D4

Refer to DTC P0741.

AT -144

AUTOMATIC TRANSAXLE (A5SR1/2)

<b>DTC P0761 SHIFT SOLENOID "C(D/C SOLENOID)" PERFORMANCE OR STUCK OFF</b>
--

**COMPONENT LOCATION** EEB646DB

Refer to DTC P0743.

**GENERAL DESCRIPTION** E0E9A4C8

The Automatic Transmission changes the gear position of the transmission utilizing a combination of Clutches and Brakes, which are controlled by solenoid valves. Direct clutch solenoid valve is controlled by the TCM in response to signals sent from the inhibitor switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

**DTC DESCRIPTION** EFACAAB5

This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

**DTC DETECTING CONDITION** E916FFD8

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Rationality check (stuck-off)</li> </ul>	DIRECT CLUTCH SOLENOID VALVE : D/C SOLENOID VALVE <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty D/C SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed 6.2MPH(10km/h)</li> <li>Engine speed &gt; 305 rpm</li> <li>A/T range switch is D range</li> <li>A/T flued temperature -40°F</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Fluid pressure switch C "OFF" when the monitoring value 0.05A and When there's a difference between calculated and measured gear ratio.</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>A/T flued temperature &gt; 14°F : More then 2secs</li> <li>A/T flued temperature 14°F : More then 8secs</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked in to 4th gear.</li> </ul>	



## AUTOMATIC TRANSAXLE SYSTEM

AT -145

## SIGNAL WAVEFORM E3F7D7DB

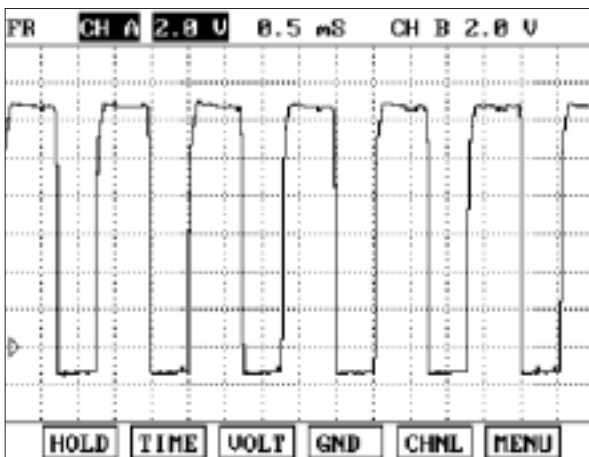


FIG.1)

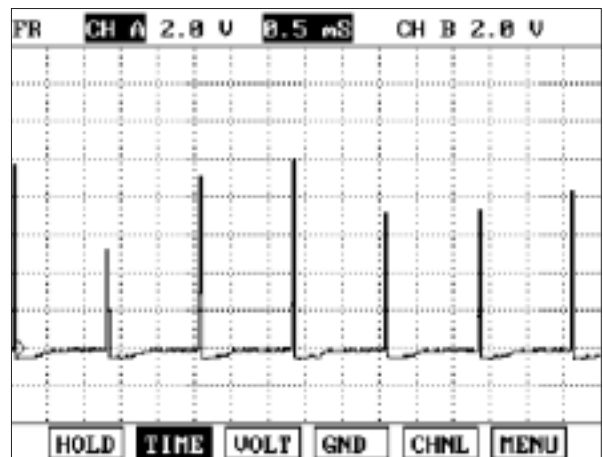


FIG.2)

FIG.1) N RANGE

FIG.2) 2 GEAR

SBLAT6185L

## MONITOR SCANTOOL DATA E1AB7D5A

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "D/C SOLENOID" parameter on the scantool.
4. Select "D RANGE" and Operate the vehicle.
5. Check "D/C SOLENOID" parameter value changes while driving.

1.3 CURRENT DATA		24/76
× D/C SOL. OUTPUT	0.72 A	
× D/C SOL. MONITOR	0.79 A	
× CURRENT GEAR POS.	1	GEAR
× SHIFT RANGE INDICATOR	P	
× OIL PRESS SW5(D/C)	OFF	
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
OIL PRESS SW1(FR/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.1)

1.3 CURRENT DATA		24/76
× D/C SOL. OUTPUT	0.72 A	
× D/C SOL. MONITOR	0.88 A	
× CURRENT GEAR POS.	1	GEAR
× SHIFT RANGE INDICATOR	R	
× OIL PRESS SW5(D/C)	OFF	
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
OIL PRESS SW1(FR/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.2)

1.3 CURRENT DATA		24/76
× D/C SOL. OUTPUT	0.72 A	
× D/C SOL. MONITOR	0.79 A	
× CURRENT GEAR POS.	1	GEAR
× SHIFT RANGE INDICATOR	N	
× OIL PRESS SW5(D/C)	OFF	
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
OIL PRESS SW1(FR/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.3)

1.3 CURRENT DATA		24/76
× D/C SOL. OUTPUT	0.72 A	
× D/C SOL. MONITOR	0.88 A	
× CURRENT GEAR POS.	1	GEAR
× SHIFT RANGE INDICATOR	D	
× OIL PRESS SW5(D/C)	OFF	
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
OIL PRESS SW1(FR/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.4)

1.3 CURRENT DATA		24/76
× D/C SOL. OUTPUT	0.82 A	
× D/C SOL. MONITOR	0.88 A	
× CURRENT GEAR POS.	2	GEAR
× SHIFT RANGE INDICATOR	-	
× OIL PRESS SW5(D/C)	ON	
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
OIL PRESS SW1(FR/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.5)

1.3 CURRENT DATA		24/76
× D/C SOL. OUTPUT	0.82 A	
× D/C SOL. MONITOR	0.88 A	
× CURRENT GEAR POS.	3	GEAR
× SHIFT RANGE INDICATOR	-	
× OIL PRESS SW5(D/C)	ON	
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
OIL PRESS SW1(FR/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.6)

1.3 CURRENT DATA		24/76
× D/C SOL. OUTPUT	0.82 A	
× D/C SOL. MONITOR	0.88 A	
× CURRENT GEAR POS.	4	GEAR
× SHIFT RANGE INDICATOR	-	
× OIL PRESS SW5(D/C)	ON	
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
OIL PRESS SW1(FR/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.7)

1.3 CURRENT DATA		24/76
× D/C SOL. OUTPUT	0.69 A	
× D/C SOL. MONITOR	0.88 A	
× CURRENT GEAR POS.	5	GEAR
× SHIFT RANGE INDICATOR	-	
× OIL PRESS SW5(D/C)	OFF	
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
OIL PRESS SW1(FR/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.8)

FIG.1) "P" Range

FIG.2) "R" Shifting

FIG.3) "N" Range

FIG.4) "D" Range 1st gear

FIG.5) "D" Range 2nd gear

FIG.6) "D" Range 3rd gear

FIG.7) "D" Range 4th gear

FIG.8) "D" Range 5th gear

**AUTOMATIC TRANSAXLE SYSTEM****AT -147**

6. Does "D/C SOLENOID" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection " procedure.


**TERMINAL & CONNECTOR INSPECTION** E612BA07

Refer to DTC P0741.

**SIGNAL CIRCUIT INSPECTION** E612BA07

1. Disconnect "C06-2" connector.
2. IGNITION "ON", ENGINE "OFF"
3. Measure voltage between terminal "4" of the C06-2 harness connector and chassis ground.

Specification : approx. 5V

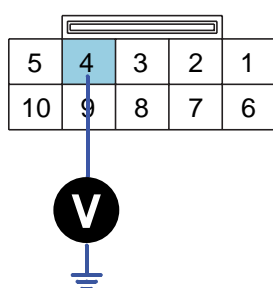

- 1.ATF 2
- 2.LOW COAST BRAKE SOLENOID VALVE
- 3.HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
- 4.DIRECT CLUTCH SOLENOID VALVE
- 6.FRONT BRAKE SOLENOID VALVE
- 7.INPUT CLUTCH SOLENOID VALVE
- 8.PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
- 9.TCCSV

SBLAT6171L

4. Is voltage within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.

AT -148

AUTOMATIC TRANSAXLE (A5SR1/2)


**COMPONENT INSPECTION** E12370D8

1. Disconnect "C06-2" connector.
2. Ignition "OFF".
3. Measure resistance between terminal "4" of the C06-2 harness connector and chassis ground.

---

 Specification : approx. 3~9
 

---

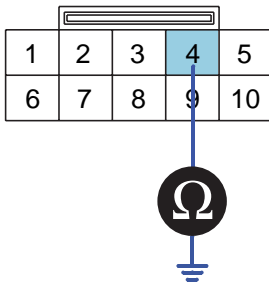
**C06-2**  
 Component side

1. ATF 2
2. LOW COAST BRAKE SOLENOID VALVE
3. HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
- 4. DIRECT CLUTCH SOLENOID VALVE**
6. FRONT BRAKE SOLENOID VALVE
7. INPUT CLUTCH SOLENOID VALVE
8. PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
9. TCCSV

SBLAT6172L

4. Is resistance within specifications?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

5. Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Replace "D/C SOLENOID VALVE" as necessary and Go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR** E6A74B9B

Refer to DTC P0741.

**AUTOMATIC TRANSAXLE SYSTEM****AT -149****DTC P0762 SHIFT SOLENOID "C(D/C SOLENOID)" PERFORMANCE OR STUCK ON****COMPONENT LOCATION** E1ACD282

Refer to DTC P0743.

**GENERAL DESCRIPTION** E13DDCC1

Refer to DTC P0761.

**DTC DESCRIPTION** E1A29609

Refer to DTC P0761.

**DTC DETECTING CONDITION** EFF2D7F2

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Rationality check (stuck-on)</li> </ul>	DIRECT CLUTCH SOLENOID VALVE : D/C SOLENOID VALVE <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty D/C SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed 6.2MPH(10km/h)</li> <li>Engine speed &gt; 305 rpm</li> <li>A/T range switch is D range</li> <li>A/T flued temperature &gt; -40°F</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Fluid pressure switch C "ON" when the monitoring value 0.75A and When there's a difference between calculated and measured gear ratio.</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>A/T flued temperature &gt; 14°F : More then 2secs</li> <li>A/T flued temperature 14°F : More then 8secs</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked in to 4th gear.</li> </ul>	

**SIGNAL WAVEFORM** EFFAFECD

Refer to DTC P0761.

**MONITOR SCANTOOL DATA** E10A10E4

Refer to DTC P0761.

**TERMINAL & CONNECTOR INSPECTION** EDC2E451

Refer to DTC P0741.

**AT -150**

**AUTOMATIC TRANSAXLE (A5SR1/2)**

---

**SIGNAL CIRCUIT INSPECTION** E61B3C99

Refer to DTC P0761.

**COMPONENT INSPECTION** E02750E3

Refer to DTC P0761.

**VERIFICATION OF VEHICLE REPAIR** E0D09D95

Refer to DTC P0741.

www.CarGarage.ir

## AUTOMATIC TRANSAXLE SYSTEM

AT -151

<b>DTC P0763 SHIFT SOLENOID "C(D/C SOLENOID)" CIRCUIT - OPEN OR SHORT(GND)</b>
--

**COMPONENT LOCATION** EC19042A

Refer to DTC P0743.

**GENERAL DESCRIPTION** E051B6EB

The Automatic Transmission changes the gear position of the transmission utilizing a combination of Clutches and Brakes, which are controlled by solenoid valves. Direct clutch solenoid valve is controlled by the TCM in response to signals sent from the inhibitor switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

**DTC DESCRIPTION** E68C803A

This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

**DTC DETECTING CONDITION** E8CBFF6E

[DSL 2.5]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	DIRECT CLUTCH SOLENOID VALVE : D/C SOLENOID VALVE <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty D/C SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed 6.2MPH(10km/h)</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Ground short/open :Monitoring value[current] 0.4A, When the driver output 0.7A</li> <li>B+ short:Monitoring value[current] 0.4A, When the driver output 0.7A</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 5sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked into 4th gear, lock-up control is inhibited, pressure control is inhibited.</li> </ul>	

[GSL 3.3/3.8]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	DIRECT CLUTCH SOLENOID VALVE : D/C SOLENOID VALVE <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty D/C SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>10V &lt; Actuator power supply voltage &lt; 16V</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Hardware "IC" check</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 0.2sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Lock-up control is prohibited(L/U off)</li> </ul>	

**SIGNAL WAVEFORM** E1393CED

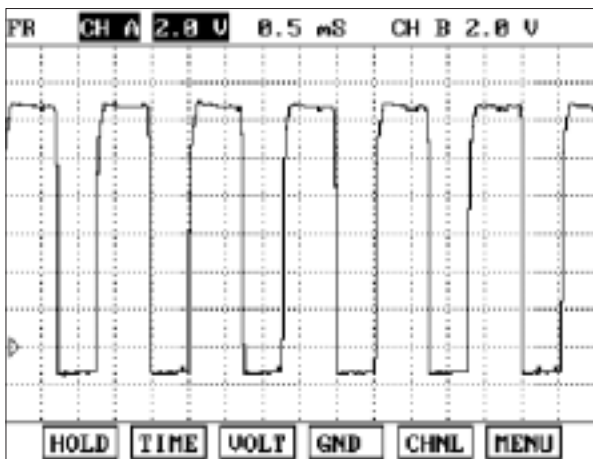


FIG.1)

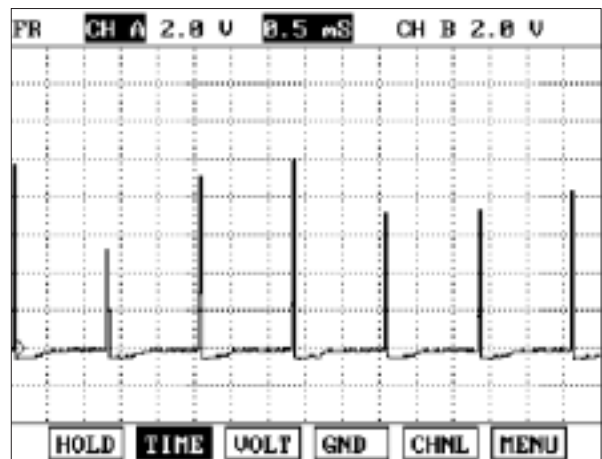


FIG.2)

FIG.1) N RANGE

FIG.2) 2 GEAR

SBLAT6185L

**MONITOR SCANTOOL DATA** EC07C31E

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "D/C SOLENOID" parameter on the scantool.
4. Select "D RANGE" and Operate the vehicle.
5. Check "D/C SOLENOID" parameter value changes while driving.



1.3 CURRENT DATA		24/76
✖	D/C SOL. OUTPUT	0.72 A
✖	D/C SOL. MONITOR	0.79 A
✖	CURRENT GEAR POS.	1 GEAR
✖	SHIFT RANGE INDICATOR	P
✖	OIL PRESS SW5(D/C)	OFF
	OIL PRESS SW3(I/C)	
	OIL PRESS SW2(LC/B)	
	OIL PRESS SW1(FR/B)	
FIX PART FULL HELP GRPH BCRD		

FIG.1)

1.3 CURRENT DATA		24/76
✖	D/C SOL. OUTPUT	0.72 A
✖	D/C SOL. MONITOR	0.88 A
✖	CURRENT GEAR POS.	1 GEAR
✖	SHIFT RANGE INDICATOR	R
✖	OIL PRESS SW5(D/C)	OFF
	OIL PRESS SW3(I/C)	
	OIL PRESS SW2(LC/B)	
	OIL PRESS SW1(FR/B)	
FIX PART FULL HELP GRPH BCRD		

FIG.2)

1.3 CURRENT DATA		24/76
✖	D/C SOL. OUTPUT	0.72 A
✖	D/C SOL. MONITOR	0.79 A
✖	CURRENT GEAR POS.	1 GEAR
✖	SHIFT RANGE INDICATOR	N
✖	OIL PRESS SW5(D/C)	OFF
	OIL PRESS SW3(I/C)	
	OIL PRESS SW2(LC/B)	
	OIL PRESS SW1(FR/B)	
FIX PART FULL HELP GRPH BCRD		

FIG.3)

1.3 CURRENT DATA		24/76
✖	D/C SOL. OUTPUT	0.72 A
✖	D/C SOL. MONITOR	0.88 A
✖	CURRENT GEAR POS.	1 GEAR
✖	SHIFT RANGE INDICATOR	D
✖	OIL PRESS SW5(D/C)	OFF
	OIL PRESS SW3(I/C)	
	OIL PRESS SW2(LC/B)	
	OIL PRESS SW1(FR/B)	
FIX PART FULL HELP GRPH BCRD		

FIG.4)

1.3 CURRENT DATA		24/76
✖	D/C SOL. OUTPUT	0.82 A
✖	D/C SOL. MONITOR	0.88 A
✖	CURRENT GEAR POS.	2 GEAR
✖	SHIFT RANGE INDICATOR	-
✖	OIL PRESS SW5(D/C)	ON
	OIL PRESS SW3(I/C)	
	OIL PRESS SW2(LC/B)	
	OIL PRESS SW1(FR/B)	
FIX PART FULL HELP GRPH BCRD		

FIG.5)

1.3 CURRENT DATA		24/76
✖	D/C SOL. OUTPUT	0.82 A
✖	D/C SOL. MONITOR	0.88 A
✖	CURRENT GEAR POS.	3 GEAR
✖	SHIFT RANGE INDICATOR	-
✖	OIL PRESS SW5(D/C)	ON
	OIL PRESS SW3(I/C)	
	OIL PRESS SW2(LC/B)	
	OIL PRESS SW1(FR/B)	
FIX PART FULL HELP GRPH BCRD		

FIG.6)

1.3 CURRENT DATA		24/76
✖	D/C SOL. OUTPUT	0.82 A
✖	D/C SOL. MONITOR	0.88 A
✖	CURRENT GEAR POS.	4 GEAR
✖	SHIFT RANGE INDICATOR	-
✖	OIL PRESS SW5(D/C)	ON
	OIL PRESS SW3(I/C)	
	OIL PRESS SW2(LC/B)	
	OIL PRESS SW1(FR/B)	
FIX PART FULL HELP GRPH BCRD		

FIG.7)

1.3 CURRENT DATA		24/76
✖	D/C SOL. OUTPUT	0.69 A
✖	D/C SOL. MONITOR	0.88 A
✖	CURRENT GEAR POS.	5 GEAR
✖	SHIFT RANGE INDICATOR	-
✖	OIL PRESS SW5(D/C)	OFF
	OIL PRESS SW3(I/C)	
	OIL PRESS SW2(LC/B)	
	OIL PRESS SW1(FR/B)	
FIX PART FULL HELP GRPH BCRD		

FIG.8)

FIG.1) "P" Range

FIG.2) "R" Shifting

FIG.3) "N" Range

FIG.4) "D" Range 1st gear

FIG.5) "D" Range 2nd gear

FIG.6) "D" Range 3rd gear

FIG.7) "D" Range 4th gear

FIG.8) "D" Range 5th gear

## AT -154

## AUTOMATIC TRANSAXLE (A5SR1/2)

6. Does "D/C SOLENOID" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection " procedure.


## TERMINAL & CONNECTOR INSPECTION EAFB1ABA

Refer to DTC P0741.

## SIGNAL CIRCUIT INSPECTION EB462AC2

1. Disconnect "C06-2/C106-2" connector.
2. IGNITION "ON", ENGINE "OFF"
3. Measure voltage between terminal "4" of the C06-2/C106-2 harness connector and chassis ground.

Specification : approx. 5V

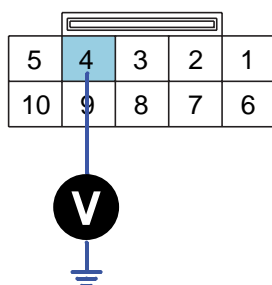

C06-2 [DSL 2.5]  
C106-2 [GSL 3.3/3.8]

1. ATF 2
2. LOW COAST BRAKE SOLENOID VALVE
3. HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
4. **DIRECT CLUTCH SOLENOID VALVE**
6. FRONT BRAKE SOLENOID VALVE
7. INPUT CLUTCH SOLENOID VALVE
8. PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
9. TCCSV

SBLAT6104L

4. Is voltage within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.

**AUTOMATIC TRANSAXLE SYSTEM****AT -155****COMPONENT INSPECTION**


E45A563F

1. Disconnect "C06-2/C106-2" connector.
2. Ignition "OFF".
3. Measure resistance between terminal "4" of the C06-2/C106-2 harness connector and chassis ground.

---

 Specification : approx. 3~9
 

---

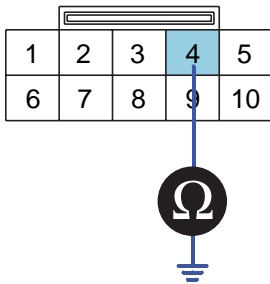

**C06-2 [DSL 2.5]**  
**C106-2 [GSL 3.3/3.8]**  
 Component side

- 1.ATF 2
- 2.LOW COAST BRAKE SOLENOID VALVE
- 3.HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
- 4.DIRECT CLUTCH SOLENOID VALVE**
- 6.FRONT BRAKE SOLENOID VALVE
- 7.INPUT CLUTCH SOLENOID VALVE
- 8.PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
- 9.TCCSV

SBLAT6105L

4. Is resistance within specifications?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

5. Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Replace "D/C SOLENOID VALVE" as necessary and Go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR**

E6E5BE9E

Refer to DTC P0741.

AT -156

AUTOMATIC TRANSAXLE (A5SR1/2)

## DTC P0766 SHIFT SOLENOID "D(H & LR/C SOLENOID)" PERFORMANCE OR STUCK OFF

### COMPONENT LOCATION EBBD9FAA

Refer to DTC P0743.

### GENERAL DESCRIPTION E4377846

The Automatic Transmission changes the gear position of the transmission utilizing a combination of Clutches and Brakes, which are controlled by solenoid valves. High & low reverse clutch solenoid valve is controlled by the TCM in response to signals sent from the inhibitor switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

### DTC DESCRIPTION E8CA49D4

This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

### DTC DETECTING CONDITION ECF8B8EA

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Rationality check (stuck-off)</li> </ul>	HIGH & LOW REVERSE CLUTCH SOLENOID VALVE : H & LR/C SOLENOID <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty H &amp; LR/C SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed 6.2MPH(10km/h)</li> <li>Engine speed &gt; 305 rpm</li> <li>A/T range switch is D range</li> <li>A/T flued temperature -40°F</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Fluid pressure switch D "OFF" when the monitoring value 0.05A and When there's a difference between calculated and measured gear ratio.</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>A/T flued temperature &gt; 14°F : More then 2secs</li> <li>A/T flued temperature 14°F : More then 8secs</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked in to 4th gear.</li> </ul>	

## AUTOMATIC TRANSAXLE SYSTEM

AT -157

## SIGNAL WAVEFORM EC96F3F0

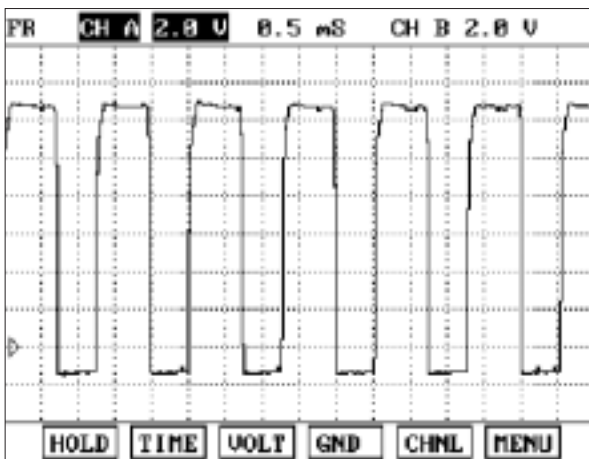


FIG.1)

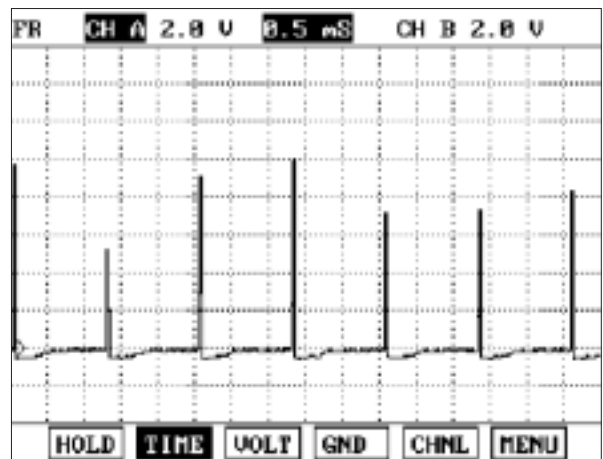


FIG.2)

FIG.1) 2 RANGE

FIG.2) 3 GEAR

SBLAT6186L

## MONITOR SCANTOOL DATA EA86D7DF

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "H & LR/C SOLENOID" parameter on the scantool.
4. Select "D RANGE" and Operate the vehicle.
5. Check "H & LR/C SOLENOID" parameter value changes while driving.

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.01 A	
× H/L B/C SOL. MONITOR	0.00 A	
× CURRENT GEAR POS.	1	GEAR
× SHIFT RANGE INDICATOR	P	
× OIL PRESS SW6(H/L B/C)	ON	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.1)

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.01 A	
× H/L B/C SOL. MONITOR	0.00 A	
× CURRENT GEAR POS.	1	GEAR
× SHIFT RANGE INDICATOR	R	
× OIL PRESS SW6(H/L B/C)	ON	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.2)

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.01 A	
× H/L B/C SOL. MONITOR	0.00 A	
× CURRENT GEAR POS.	1	GEAR
× SHIFT RANGE INDICATOR	N	
× OIL PRESS SW6(H/L B/C)	ON	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.3)

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.66 A	
× H/L B/C SOL. MONITOR	0.00 A	
× CURRENT GEAR POS.	1	GEAR
× SHIFT RANGE INDICATOR	D	
× OIL PRESS SW6(H/L B/C)	OFF	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.4)

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.66 A	
× H/L B/C SOL. MONITOR	0.00 A	
× CURRENT GEAR POS.	2	GEAR
× SHIFT RANGE INDICATOR	-	
× OIL PRESS SW6(H/L B/C)	OFF	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.5)

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.01 A	
× H/L B/C SOL. MONITOR	0.00 A	
× CURRENT GEAR POS.	3	GEAR
× SHIFT RANGE INDICATOR	-	
× OIL PRESS SW6(H/L B/C)	ON	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.6)

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.01 A	
× H/L B/C SOL. MONITOR	0.00 A	
× CURRENT GEAR POS.	4	GEAR
× SHIFT RANGE INDICATOR	-	
× OIL PRESS SW6(H/L B/C)	ON	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.7)

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.01 A	
× H/L B/C SOL. MONITOR	0.00 A	
× CURRENT GEAR POS.	5	GEAR
× SHIFT RANGE INDICATOR	-	
× OIL PRESS SW6(H/L B/C)	ON	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.8)

FIG.1) "P" Range

FIG.2) "R" Shifting

FIG.3) "N" Range

FIG.4) "D" Range 1st gear

FIG.5) "D" Range 2nd gear

FIG.6) "D" Range 3rd gear

FIG.7) "D" Range 4th gear

FIG.8) "D" Range 5th gear

**AUTOMATIC TRANSAXLE SYSTEM****AT -159**

6. Does "H & LR/C SOLENOID" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection " procedure.

**TERMINAL & CONNECTOR INSPECTION** EFD661E

Refer to DTC P0741.


**SIGNAL CIRCUIT INSPECTION** E34F0D09

1. Disconnect "C06-2" connector.
2. IGNITION "ON", ENGINE "OFF"
3. Measure voltage between terminal "3" of the C06-2 harness connector and chassis ground.

---

Specification : Output voltage repeated between 4V and 12V

---

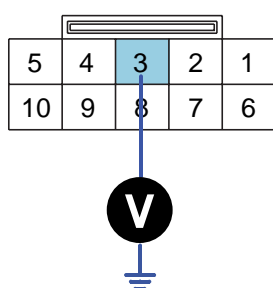**C06-2**

1. ATF 2
2. LOW COAST BRAKE SOLENOID VALVE
3. **HIGH&LOW REVERSE CLUTCH SOLENOID VALVE**
4. DIRECT CLUTCH SOLENOID VALVE
6. FRONT BRAKE SOLENOID VALVE
7. INPUT CLUTCH SOLENOID VALVE
8. PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
9. TCCSV

SBLAT6176L

4. Is voltage within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.


## AT -160

## AUTOMATIC TRANSAXLE (A5SR1/2)

## COMPONENT INSPECTION EBA7ADF9

1. Disconnect "C06-2" connector.
2. Ignition "OFF".
3. Measure resistance between terminal "3" of the C06-2 harness connector and chassis ground.

Specification : approx. 3~9

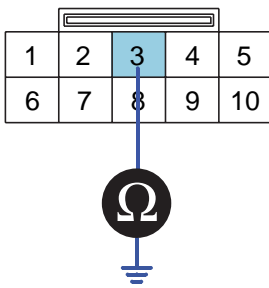

**C06-2**  
Component side

- 1.ATF 2
- 2.LOW COAST BRAKE SOLENOID VALVE
- 3.HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
- 4.DIRECT CLUTCH SOLENOID VALVE
- 6.FRONT BRAKE SOLENOID VALVE
- 7.INPUT CLUTCH SOLENOID VALVE
- 8.PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
- 9.TCCSV

SBLAT6177L

4. Is resistance within specifications?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

5. Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Replace "H & LR/C SOLENOID VALVE" as necessary and Go to "Verification of Vehicle Repair" procedure.

## VERIFICATION OF VEHICLE REPAIR E20DFB96

Refer to DTC P0741.



**AUTOMATIC TRANSAXLE SYSTEM**

AT -161

**DTC P0767 SHIFT SOLENOID "D(H & LR/C SOLENOID)" PERFORMANCE OR STUCK ON****COMPONENT LOCATION** E68A2A4B

Refer to DTC P0743.

**GENERAL DESCRIPTION** E67AAEE4

Refer to DTC P0766.

**DTC DESCRIPTION** E7AD00EF

Refer to DTC P0766.

**DTC DETECTING CONDITION** EEf92CC3

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Rationality check (stuck-on)</li> </ul>	HIGH & LOW REVERSE CLUTCH SOLENOID VALVE : H & LR/C SOLENOID <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty H &amp; LR/C SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed &gt; 6.2MPH(10km/h)</li> <li>Engine speed &gt; 305 rpm</li> <li>A/T range switch is D range</li> <li>A/T flued temperature &gt; -40°F</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Fluid pressure switch D "ON" when the monitoring value &gt; 0.75A and When there's a difference between calculated and measured gear ratio.</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>A/T flued temperature &gt; 14°F : More then 2secs</li> <li>A/T flued temperature &gt; 14°F : More then 8secs</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked in to 4th gear.</li> </ul>	

**SIGNAL WAVEFORM** EE4DD7CD

Refer to DTC P0766.

**MONITOR SCANTOOL DATA** E2DFD2F0

Refer to DTC P0766.

**TERMINAL & CONNECTOR INSPECTION** EC2775FD

Refer to DTC P0741.

**AT -162**

**AUTOMATIC TRANSAXLE (A5SR1/2)**

---

**SIGNAL CIRCUIT INSPECTION** EA814DBF

Refer to DTC P0766.

**COMPONENT INSPECTION** E089DD4A

Refer to DTC P0766.

**VERIFICATION OF VEHICLE REPAIR** EC0B50D0

Refer to DTC P0741.

www.CarGarage.ir

## AUTOMATIC TRANSAXLE SYSTEM

AT -163

**DTC P0768 SHIFT SOLENOID "D(H & LR/C SOLENOID)" CIRCUIT - OPEN OR SHORT(GND)****COMPONENT LOCATION** E8C37266

Refer to DTC P0743.

**GENERAL DESCRIPTION** E82A6F74

The Automatic Transmission changes the gear position of the transmission utilizing a combination of Clutches and Brakes, which are controlled by solenoid valves. High & low reverse clutch solenoid valve is controlled by the TCM in response to signals sent from the inhibitor switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

**DTC DESCRIPTION** EE5B829A

This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

**DTC DETECTING CONDITION** E7DD2DEC**[DSL 2.5]**

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	• Check voltage range	HIGH & LOW REVERSE CLUTCH SOLENOID VALVE: H & LR/C SOLENOID VALVE • Open or short in circuit • Faulty H & LR/C SOLENOID VALVE • Faulty TCM
<b>Enable Conditions</b>	• Vehicle speed 6.2MPH(10km/h)	
<b>Threshold value</b>	• Ground short/open :Monitoring value[current] 0.4A, When the driver output 0.7A • B+ short:Monitoring value[current] 0.4A, When the driver output 0.7A	
<b>Diagnostic Time</b>	• More than 5sec	
<b>Fail Safe</b>	• Locked into 4th gear, lock-up control is inhibited, pressure control is inhibited.	

**[GSL 3.3/3.8]**

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	• Check voltage range	HIGH & LOW REVERSE CLUTCH SOLENOID VALVE: H & LR/C SOLENOID VALVE • Open or short in circuit • Faulty H & LR/C SOLENOID VALVE • Faulty TCM
<b>Enable Conditions</b>	• 10V < Actuator power supply voltage < 16V	
<b>Threshold value</b>	• Hardware "IC" check	
<b>Diagnostic Time</b>	• More than 0.2sec	
<b>Fail Safe</b>	• Lock-up control is prohibited(L/U off)	

**SIGNAL WAVEFORM** EBFFA8DB

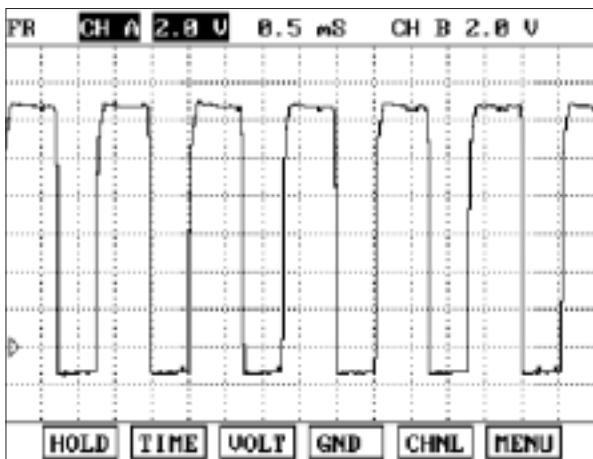


FIG.1)

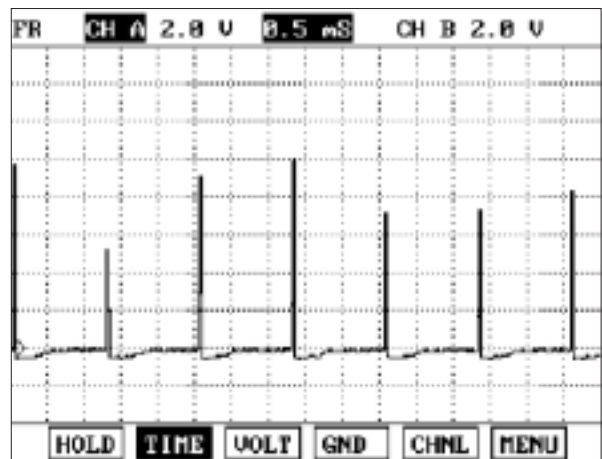


FIG.2)

FIG.1) 2 RANGE  
FIG.2) 3 GEAR

SBLAT6186L

**MONITOR SCANTOOL DATA** EAA48A37

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "H & LR/C SOLENOID" parameter on the scantool.
4. Select "D RANGE" and Operate the vehicle.
5. Check "H & LR/C SOLENOID" parameter value changes while driving.

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.81 A	
× H/L B/C SOL. MONITOR	0.88 A	
× CURRENT GEAR POS.	1 GEAR	
× SHIFT RANGE INDICATOR	P	
× OIL PRESS SW6(H/L B/C)	ON	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.1)

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.81 A	
× H/L B/C SOL. MONITOR	0.88 A	
× CURRENT GEAR POS.	1 GEAR	
× SHIFT RANGE INDICATOR	R	
× OIL PRESS SW6(H/L B/C)	ON	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.2)

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.81 A	
× H/L B/C SOL. MONITOR	0.88 A	
× CURRENT GEAR POS.	1 GEAR	
× SHIFT RANGE INDICATOR	N	
× OIL PRESS SW6(H/L B/C)	ON	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.3)

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.66 A	
× H/L B/C SOL. MONITOR	0.88 A	
× CURRENT GEAR POS.	1 GEAR	
× SHIFT RANGE INDICATOR	D	
× OIL PRESS SW6(H/L B/C)	OFF	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.4)

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.66 A	
× H/L B/C SOL. MONITOR	0.88 A	
× CURRENT GEAR POS.	2 GEAR	
× SHIFT RANGE INDICATOR	-	
× OIL PRESS SW6(H/L B/C)	OFF	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.5)

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.81 A	
× H/L B/C SOL. MONITOR	0.88 A	
× CURRENT GEAR POS.	3 GEAR	
× SHIFT RANGE INDICATOR	-	
× OIL PRESS SW6(H/L B/C)	ON	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.6)

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.81 A	
× H/L B/C SOL. MONITOR	0.88 A	
× CURRENT GEAR POS.	4 GEAR	
× SHIFT RANGE INDICATOR	-	
× OIL PRESS SW6(H/L B/C)	ON	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.7)

1.3 CURRENT DATA		26/76
× H/L B/C SOL. OUTPUT	0.81 A	
× H/L B/C SOL. MONITOR	0.88 A	
× CURRENT GEAR POS.	5 GEAR	
× SHIFT RANGE INDICATOR	-	
× OIL PRESS SW6(H/L B/C)	ON	
OIL PRESS SW5(D/C)		
OIL PRESS SW3(I/C)		
OIL PRESS SW2(LC/B)		
FIX PART FULL HELP GRPH BCRD		

FIG.8)

FIG.1) "P" Range

FIG.2) "R" Shifting

FIG.3) "N" Range

FIG.4) "D" Range 1st gear

FIG.5) "D" Range 2nd gear

FIG.6) "D" Range 3rd gear

FIG.7) "D" Range 4th gear

FIG.8) "D" Range 5th gear

## AT -166

## AUTOMATIC TRANSAXLE (A5SR1/2)

6. Does "H & LR/C SOLENOID" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection " procedure.


### TERMINAL & CONNECTOR INSPECTION EF2003DF

Refer to DTC P0741.

### SIGNAL CIRCUIT INSPECTION E713F2D8

1. Disconnect "C06-2/C106-2" connector.
2. IGNITION "ON", ENGINE "OFF"
3. Measure voltage between terminal "3" of the C06-2/C106-2 harness connector and chassis ground.

Specification : Output voltage repeated between 4V and 12V

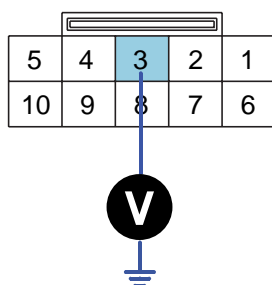

C06-2 [DSL 2.5]  
C106-2 [GSL 3.3/3.8]

1. ATF 2
2. LOW COAST BRAKE SOLENOID VALVE
3. **HIGH&LOW REVERSE CLUTCH SOLENOID VALVE**
4. DIRECT CLUTCH SOLENOID VALVE
6. FRONT BRAKE SOLENOID VALVE
7. INPUT CLUTCH SOLENOID VALVE
8. PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
9. TCCSV

SBLAT6178L

4. Is voltage within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.

**AUTOMATIC TRANSAXLE SYSTEM****AT -167****COMPONENT INSPECTION**


EAD87EEB

1. Disconnect "C06-2/C106-2" connector.
2. Ignition "OFF".
3. Measure resistance between terminal "3" of the C06-2/C106-2 harness connector and chassis ground.

---

 Specification : approx. 3~9
 

---

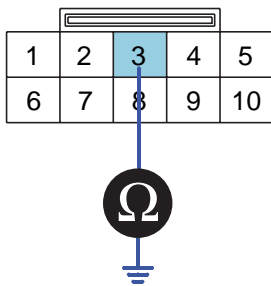

**C06-2 [DSL 2.5]**  
**C106-2 [GSL 3.3/3.8]**  
 Component side

- 1.ATF 2
- 2.LOW COAST BRAKE SOLENOID VALVE
- 3.HIGH&LOW REVERSE CLUTCH SOLENOID VALVE**
- 4.DIRECT CLUTCH SOLENOID VALVE
- 6.FRONT BRAKE SOLENOID VALVE
- 7.INPUT CLUTCH SOLENOID VALVE
- 8.PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
- 9.TCCSV

SBLAT6179L

4. Is resistance within specifications?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

5. Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Replace "H & LR/C SOLENOID VALVE" as necessary and Go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR**

EB7FC6A8

Refer to DTC P0741.

AT -168

AUTOMATIC TRANSAXLE (A5SR1/2)

<b>DTC P0772 SHIFT SOLENOID "E(LC/B SOLENOID)" PERFORMANCE OR STUCK OFF</b>
---

**COMPONENT LOCATION** E7BE6B2E

Refer to DTC P0743.

**GENERAL DESCRIPTION** EACA2B8E

Low coast brake solenoid valve is turned "ON" or "OFF" by the TCM in response to signals sent from the inhibitor switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

**DTC DESCRIPTION** E1BEB364

This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

**DTC DETECTING CONDITION** E2FAF7A4

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Rationality check (stuck-on)</li> </ul>	LOW COAST BRAKE SOLENOID VALVE: LC/B SOLENOID VALVE <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty LC/B SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed 6.2MPH(10km/h)</li> <li>Engine speed &gt; 305 rpm</li> <li>A/T range switch is D range</li> <li>A/T flued temperature -40°F</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Fluid pressure switch E "ON" when the monitoring value is "OFF".</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>A/T flued temperature &gt; 14°F : More then 2secs</li> <li>A/T flued temperature 14°F : More then 8secs</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked into 2nd gear.</li> </ul>	

**MONITOR SCANTOOL DATA** ED2148F5

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "LC/B SOLENOID" parameter on the scantool.
4. Select "D RANGE" and Operate the vehicle.
5. Check "LC/B SOLENOID" parameter value changes while driving.



1.3 CURRENT DATA		28/76
LC/B SOLENOID	OFF	
LC/B SOL. MONITOR	ON	
CURRENT GEAR POS.	1	GEAR
SHIFT RANGE INDICATOR	P	
OIL PRESS SW2(LC/B)	OFF	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.1)

1.3 CURRENT DATA		28/76
LC/B SOLENOID	OFF	
LC/B SOL. MONITOR	ON	
CURRENT GEAR POS.	1	GEAR
SHIFT RANGE INDICATOR	R	
OIL PRESS SW2(LC/B)	OFF	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.2)

1.3 CURRENT DATA		28/76
LC/B SOLENOID	OFF	
LC/B SOL. MONITOR	ON	
CURRENT GEAR POS.	1	GEAR
SHIFT RANGE INDICATOR	N	
OIL PRESS SW2(LC/B)	OFF	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.3)

1.3 CURRENT DATA		28/76
LC/B SOLENOID	OFF	
LC/B SOL. MONITOR	ON	
CURRENT GEAR POS.	1	GEAR
SHIFT RANGE INDICATOR	D	
OIL PRESS SW2(LC/B)	OFF	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.4)

1.3 CURRENT DATA		28/76
LC/B SOLENOID	ON	
LC/B SOL. MONITOR	OFF	
CURRENT GEAR POS.	2	GEAR
SHIFT RANGE INDICATOR	-	
OIL PRESS SW2(LC/B)	ON	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.5)

1.3 CURRENT DATA		28/76
LC/B SOLENOID	OFF	
LC/B SOL. MONITOR	ON	
CURRENT GEAR POS.	3	GEAR
SHIFT RANGE INDICATOR	-	
OIL PRESS SW2(LC/B)	OFF	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.6)

1.3 CURRENT DATA		28/76
LC/B SOLENOID	OFF	
LC/B SOL. MONITOR	ON	
CURRENT GEAR POS.	4	GEAR
SHIFT RANGE INDICATOR	-	
OIL PRESS SW2(LC/B)	OFF	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.7)

1.3 CURRENT DATA		28/76
LC/B SOLENOID	OFF	
LC/B SOL. MONITOR	ON	
CURRENT GEAR POS.	5	GEAR
SHIFT RANGE INDICATOR	-	
OIL PRESS SW2(LC/B)	OFF	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
<input type="button" value="FIX"/> <input type="button" value="PART"/> <input type="button" value="FULL"/> <input type="button" value="HELP"/> <input type="button" value="GRPH"/> <input type="button" value="BCRD"/>		

FIG.8)

FIG.1) "P" Range

FIG.2) "R" Shifting

FIG.3) "N" Range

FIG.4) "D" Range 1st gear

FIG.5) "D" Range 2nd gear

FIG.6) "D" Range 3rd gear

FIG.7) "D" Range 4th gear

FIG.8) "D" Range 5th gear

## AT -170

## AUTOMATIC TRANSAXLE (A5SR1/2)

6. Does "LC/B SOLENOID" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection " procedure.


### TERMINAL & CONNECTOR INSPECTION EAD731F9

Refer to DTC P0741.

### SIGNAL CIRCUIT INSPECTION E4DC4C76

1. Disconnect "C06-2" connector.
2. IGNITION "ON", ENGINE "OFF"
3. Measure voltage between terminal "2" of the C06-2 harness connector and chassis ground.

Specification : approx. 12V

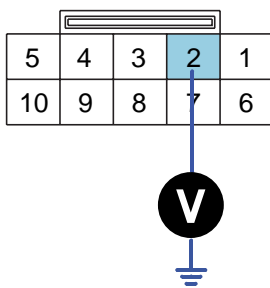

C06-2

1. ATF 2
2. **LOW COAST BRAKE SOLENOID VALVE**
3. HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
4. DIRECT CLUTCH SOLENOID VALVE
6. FRONT BRAKE SOLENOID VALVE
7. INPUT CLUTCH SOLENOID VALVE
8. PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
9. TCCSV

SBLAT6181L

4. Is voltage within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.

**AUTOMATIC TRANSAXLE SYSTEM****AT -171****COMPONENT INSPECTION**


E2CAF248

1. Disconnect "C06-2" connector.
2. Ignition "OFF".
3. Measure resistance between terminal "2" of the C06-2 harness connector and chassis ground.

---

 Specification : approx. 3~9
 

---

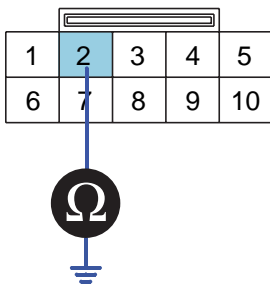

**C06-2**  
Component side

- 1.ATF 2
- 2.LOW COAST BRAKE SOLENOID VALVE**
- 3.HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
- 4.DIRECT CLUTCH SOLENOID VALVE
- 6.FRONT BRAKE SOLENOID VALVE
- 7.INPUT CLUTCH SOLENOID VALVE
- 8.PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
- 9.TCCSV

SBLAT6182L

4. Is resistance within specifications?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

5. Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Replace "LC/B SOLENOID VALVE" as necessary and Go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR**

EBACF64D

Refer to DTC P0741.

AT -172

AUTOMATIC TRANSAXLE (A5SR1/2)

## DTC P0773 SHIFT SOLENOID "E(LC/B SOLENOID)" CIRCUIT - OPEN OR SHORT(GND)

### COMPONENT LOCATION E1C18EAE

Refer to DTC P0743.

### GENERAL DESCRIPTION E0B6F20D

Low coast brake solenoid valve is turned "ON" or "OFF" by the TCM in response to signals sent from the inhibitor witch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

### DTC DESCRIPTION EACFA2FB

This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

### DTC DETECTING CONDITION E3E82AAB

[DSL 2.5]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	LOW COAST BRAKE SOLENOID VALVE: LC/B SOLENOID VALVE <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty LC/B SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed 6.2MPH(10km/h)</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Ground short/open :Monitoring value[ON/OFF] "OFF", When the driver output is "ON"</li> <li>B+ short:Monitoring value[ON/OFF] "OFF", When the driver output is "ON"</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>more than 0.2sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked into 2nd gear.</li> </ul>	

[GSL 3.3/3.8]

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	LOW COAST BRAKE SOLENOID VALVE: LC/B SOLENOID VALVE <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty LC/B SOLENOID VALVE</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>10V &lt; Actuator power supply voltage &lt; 16V</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Hardware "IC" check</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 0.2sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Lock-up control is prohibited(L/U off)</li> </ul>	

### MONITOR SCANTOOL DATA EADC0CE2

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "LC/B SOLENOID" parameter on the scantool.
4. Select "D RANGE" and Operate the vehicle.

## AUTOMATIC TRANSAXLE SYSTEM

AT -173

5. Check "LC/B SOLENOID" parameter value changes while driving.

1.3 CURRENT DATA		28/76
LC/B SOLENOID	OFF	
LC/B SOL. MONITOR	ON	
CURRENT GEAR POS.	1	GEAR
SHIFT RANGE INDICATOR	P	
OIL PRESS SW2(LC/B)	OFF	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
FIX PART FULL HELP GRPH BCRD		

FIG.1)

1.3 CURRENT DATA		28/76
LC/B SOLENOID	OFF	
LC/B SOL. MONITOR	ON	
CURRENT GEAR POS.	1	GEAR
SHIFT RANGE INDICATOR	R	
OIL PRESS SW2(LC/B)	OFF	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
FIX PART FULL HELP GRPH BCRD		

FIG.2)

1.3 CURRENT DATA		28/76
LC/B SOLENOID	OFF	
LC/B SOL. MONITOR	ON	
CURRENT GEAR POS.	1	GEAR
SHIFT RANGE INDICATOR	N	
OIL PRESS SW2(LC/B)	OFF	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
FIX PART FULL HELP GRPH BCRD		

FIG.3)

1.3 CURRENT DATA		28/76
LC/B SOLENOID	OFF	
LC/B SOL. MONITOR	ON	
CURRENT GEAR POS.	1	GEAR
SHIFT RANGE INDICATOR	D	
OIL PRESS SW2(LC/B)	OFF	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
FIX PART FULL HELP GRPH BCRD		

FIG.4)

1.3 CURRENT DATA		28/76
LC/B SOLENOID	ON	
LC/B SOL. MONITOR	OFF	
CURRENT GEAR POS.	2	GEAR
SHIFT RANGE INDICATOR	-	
OIL PRESS SW2(LC/B)	ON	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
FIX PART FULL HELP GRPH BCRD		

FIG.5)

1.3 CURRENT DATA		28/76
LC/B SOLENOID	OFF	
LC/B SOL. MONITOR	ON	
CURRENT GEAR POS.	3	GEAR
SHIFT RANGE INDICATOR	-	
OIL PRESS SW2(LC/B)	OFF	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
FIX PART FULL HELP GRPH BCRD		

FIG.6)

1.3 CURRENT DATA		28/76
LC/B SOLENOID	OFF	
LC/B SOL. MONITOR	ON	
CURRENT GEAR POS.	4	GEAR
SHIFT RANGE INDICATOR	-	
OIL PRESS SW2(LC/B)	OFF	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
FIX PART FULL HELP GRPH BCRD		

FIG.7)

1.3 CURRENT DATA		28/76
LC/B SOLENOID	OFF	
LC/B SOL. MONITOR	ON	
CURRENT GEAR POS.	5	GEAR
SHIFT RANGE INDICATOR	-	
OIL PRESS SW2(LC/B)	OFF	
OIL PRESS SW1(FR/B)		
BRAKE SWITCH		
REVERSE LAMP		
FIX PART FULL HELP GRPH BCRD		

FIG.8)

FIG.1) "P" Range

FIG.2) "R" Shifting

FIG.3) "N" Range

FIG.4) "D" Range 1st gear

FIG.5) "D" Range 2nd gear

FIG.6) "D" Range 3rd gear

FIG.7) "D" Range 4th gear

FIG.8) "D" Range 5th gear

## AT -174

## AUTOMATIC TRANSAXLE (A5SR1/2)

6. Does "LC/B SOLENOID" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection " procedure.


### TERMINAL & CONNECTOR INSPECTION E6B9BF4C

Refer to DTC P0741.

### SIGNAL CIRCUIT INSPECTION E8F6CBDA

1. Disconnect "C06-2/C106-2" connector.
2. IGNITION "ON", ENGINE "OFF"
3. Measure voltage between terminal "2" of the C06-2/C106-2 harness connector and chassis ground.

Specification : approx. 12V

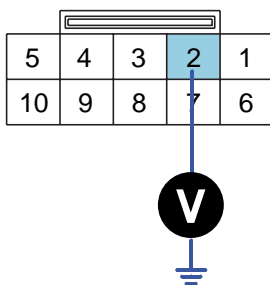

C06-2 [DSL 2.5]  
C106-2 [GSL 3.3/3.8]

1. ATF 2
2. **LOW COAST BRAKE SOLENOID VALVE**
3. HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
4. DIRECT CLUTCH SOLENOID VALVE
6. FRONT BRAKE SOLENOID VALVE
7. INPUT CLUTCH SOLENOID VALVE
8. PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
9. TCCSV

SBLAT6183L

4. Is voltage within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and go to "Verification of Vehicle Repair" procedure.


**AUTOMATIC TRANSAXLE SYSTEM****AT -175****COMPONENT INSPECTION** EAC24C9F

1. Disconnect "C06-2/C106-2" connector.
2. Ignition "OFF".
3. Measure resistance between terminal "2" of the C06-2/C106-2 harness connector and chassis ground.

---

 Specification : approx. 3~9
 

---

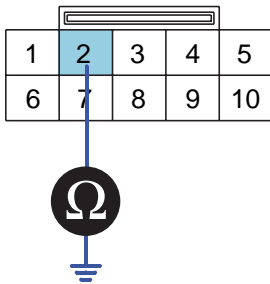

**C06-2 [DSL 2.5]**  
**C106-2 [GSL 3.3/3.8]**  
 Component side

1. ATF 2
- 2. LOW COAST BRAKE SOLENOID VALVE**
3. HIGH&LOW REVERSE CLUTCH SOLENOID VALVE
4. DIRECT CLUTCH SOLENOID VALVE
6. FRONT BRAKE SOLENOID VALVE
7. INPUT CLUTCH SOLENOID VALVE
8. PCSV(LINE PRESSURE CONTROL SOLENOID VALVE)
9. TCCSV

SBLAT6184L

4. Is resistance within specifications?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

5. Check for open or short in harness. Repair as necessary and Go to "Verification of Vehicle Repair" procedure. If signal circuit in harness is OK, Replace "LC/B SOLENOID VALVE" as necessary and Go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR** E228C4C4


Refer to DTC P0741.

AT -176

AUTOMATIC TRANSAXLE (A5SR1/2)

## DTC P0819 UP AND DOWN SHIFT SWITCH TO TRANSMISSION RANGE CORRELATION

### COMPONENT LOCATION E08ECECE

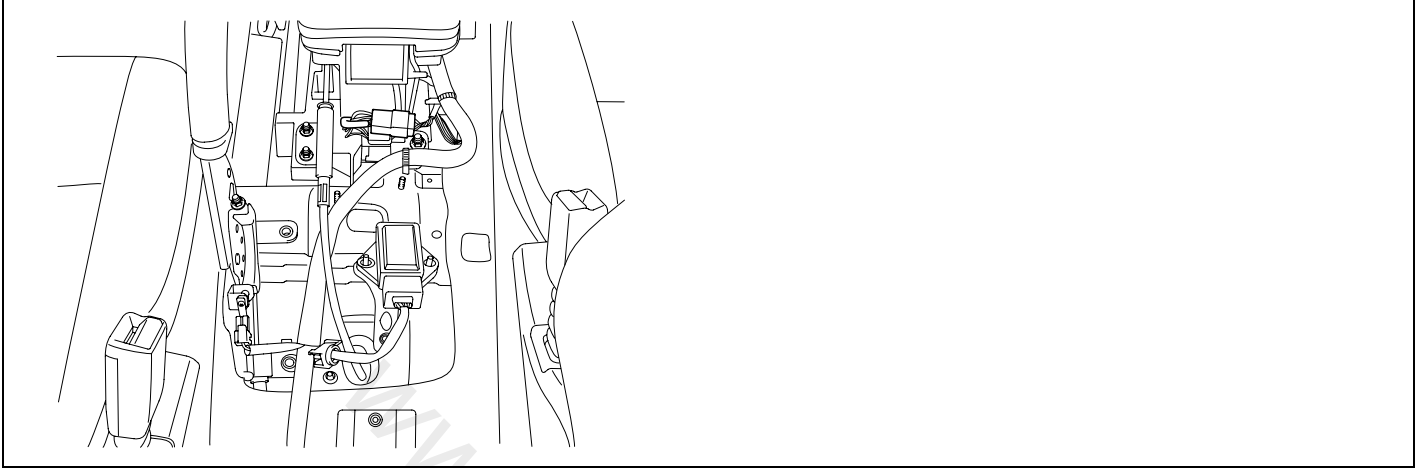

SBLAT6260L

### GENERAL DESCRIPTION EDB6B87B

The TRANSMISSION Range Switch sends the shift lever position information to the TCM using a 5V signal. Deciding each TCM range depend on 4 s/w signal. Standard patterns are fixed and these patterns are on the Specification table as listed below. For example, when s/w 1,2,4 are 'ON(0V)' and s/w 3 is 'OFF(5V)', TCM recognizes 'D Range'. When the shift lever is in the D (Drive) position the output signal of Tansaxle Range Switch is 12V and in all other positions the voltage is 0V. The TCM judges the shift lever position by reading all signals, for the TRANSMISSION Range Switch, simultaneously.

### DTC DESCRIPTION E9B3A463

The TCM sets this code when patterns are without Specification of the table shown below. The TRANSMISSION Range Switch has no output signal for an extended period of time.

### DTC DETECTING CONDITION EDA4D8CD

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Rationality</li> </ul>	<ul style="list-style-type: none"> <li>OPEN OR SHORT IN CIRCUIT</li> <li>Faulty TRANSMISSION RANGE SWITCH</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Battery voltage &gt; 10V</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Abnormal input signal is detected.</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 5sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Prevention of manual shift</li> </ul>	



**AUTOMATIC TRANSAXLE SYSTEM****AT -177****SPECIFICATION** E4B11ACD**A/T RANGE PATTERN**

A/T range switch				Range swsitch	Remarks
SW1	SW2	SW3	SW4		
OFF	OFF	OFF	OFF	Pst	P start
OFF	OFF	ON	OFF	P	P
OFF	OFF	ON	ON	P-R	Intermediate
ON	OFF	ON	ON	R	R
ON	OFF	ON	OFF	N-R	Intermediate
ON	OFF	OFF	OFF	Nst	N start
ON	OFF	OFF	ON	N-D	Intermediate
ON	ON	OFF	ON	D	D
OFF	ON	OFF	ON	3	3
OFF	ON	ON	ON	2	2
OFF	ON	ON	OFF	1	1
Irregular Pattern				Other	

[OFF= 5V, ON = 0V]

## MONITOR SCANTOOL DATA EED1BC3A

1. Connect scantool to data link connector(DLC).
2. Ignition "ON" & Engine "OFF".
3. Monitor the "SPORTS MODE SELECT S/W, SPORTS MODE UP S/W, SPORTS MODE DOWN S/W " parameter on the scantool.
4. Move selector lever to "SPORTS MODE".

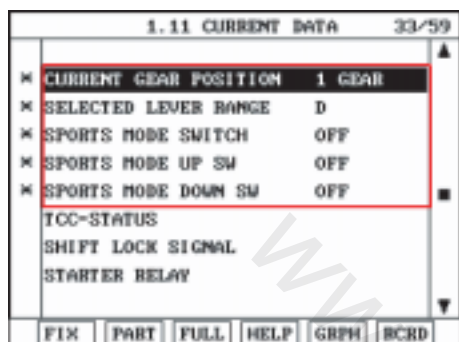


FIG.1)

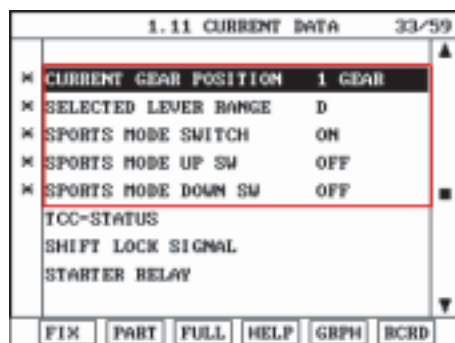


FIG.2)

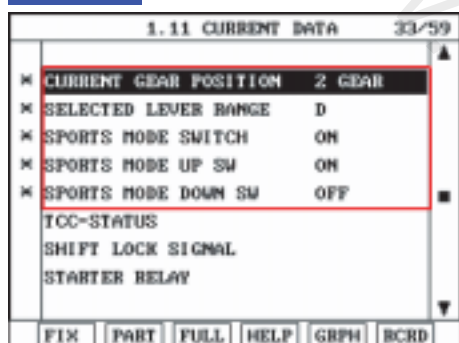


FIG.3)

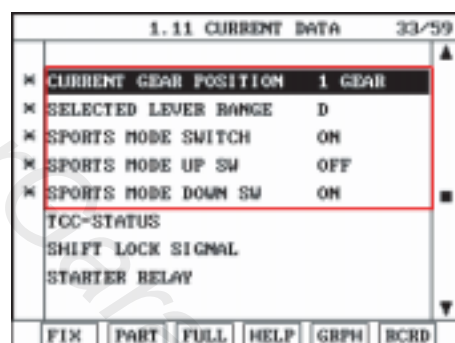


FIG.4)

FIG.1) "D" RANGE

FIG.2) "SPORTS MODE ON"

FIG.3) "UP S/W ON"

FIG.4) "DOWN S/W ON"

5. Does "SPORTS MODE SELECT S/W" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection" procedure.

SBLAT6261L

**AUTOMATIC TRANSAXLE SYSTEM****AT -179****TERMINAL & CONNECTOR INSPECTION** E53F5C7B

1. Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
2. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
3. Has a problem been found?

**YES**

Repair as necessary and go to "Verification of vehicle Repair" procedure.

**NO**

Go to "Power supply circuit inspection" procedure.


**POWER SUPPLY CIRCUIT INSPECTION** E02F04AB

1. Connect "M62" connector.
2. Ignition "ON" & Engine "OFF"
3. Measure voltage between terminal "2" of the "M62" connector and chassis ground.

---

Specification : approx. 12V

---

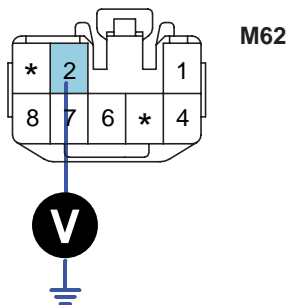

1. ILLUMINATION
2. POWER SUPPLY
4. ILLUMINATION
6. UP SHIFT
7. SELECT SWITCH
8. DOWN SHIFT

SBLAT6262L

4. Is voltage within specifications?

**YES**

Go to "Signal circuit inspection" procedure.

**NO**

Check for open or short in harness and Fuse. Repair as necessary and Go to "Verification of Vehicle Repair" procedure.

**SIGNAL CIRCUIT INSPECTION** EFD6D86A


1. Connect "M62" connector.
2. Ignition "ON" & Engine "OFF".
3. Move select lever to "SPORTS MODE" and operate select lever to up and down.

AT -180

AUTOMATIC TRANSAXLE (A5SR1/2)

4. Measure voltage between terminal "6, 7, 8" of the "M62" connector and chassis ground

Specification : approx. 12V

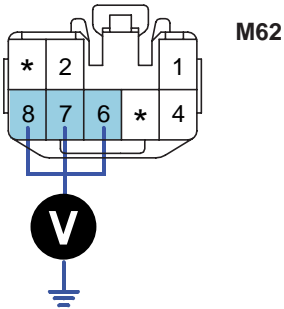

- 1. ILLUMINATION
- 2. POWER SUPPLY
- 4. ILLUMINATION
- 6. UP SHIFT
- 7. SELECT SWITCH
- 8. DOWN SHIFT

SBLAT6263L

5. Is voltage within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**


Substitute with a known-good "SPORTS MODE SWITCH" and check for proper operation. If the problem is corrected, replace "SPORTS MODE SWITCH" and Go to "Verification Vehicle Repair" procedure.

**COMPONENT INSPECTION**

ED50251F

1. Connect "TCU" connector.
2. Ignition "ON" & Engine "OFF".
3. Move select lever to "SPORTS MODE" and operate select lever to up and down.
4. Measure voltage between terminal "16, 17, 61" of the "TCU" connector(C120) and chassis ground.

Specification : approx. 12V

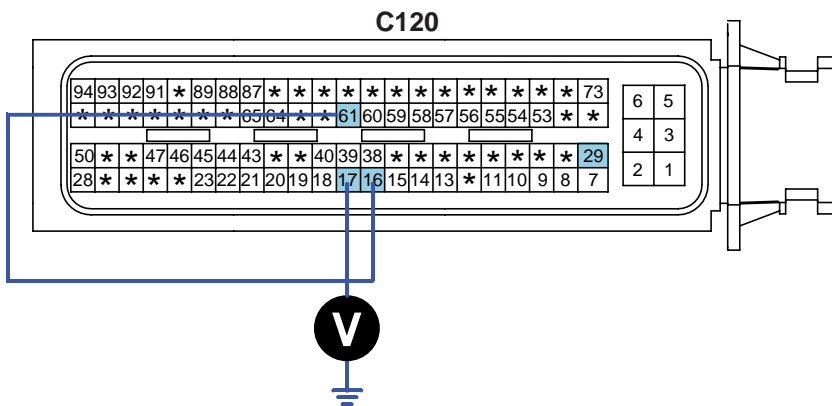

- 16. UP shift
- 17. DOWN shift
- 61. MODE SELECT switch

SBLAT6264L

## AUTOMATIC TRANSAXLE SYSTEM

AT -181

5. Is voltage within specifications?

**YES**

Substitute with a known-good "TCU" and check for proper operation. If the problem is corrected, replace "TCU" and Go to "Verification of Vehicle Repair" procedure.

**NO**

Check for open or short between "M62" and "C120" harness . Repair as necessary and Go to "Verification of Vehicle Repair" procedure.

## VERIFICATION OF VEHICLE REPAIR E6DBDFC6

After a repair, it is essential to verify that the fault has been corrected.

1. Connect scantool and select "Diagnostic Trouble Codes(DTCs)" mode.
2. Using a scantool, Clear DTC.
3. Operate the vehicle within DTC Enable conditions in General information.
4. Are any DTCs present?

**YES**


Go to the applicable troubleshooting procedure.

**NO**

System performing to specification at this time.

AT -182

AUTOMATIC TRANSAXLE (A5SR1/2)

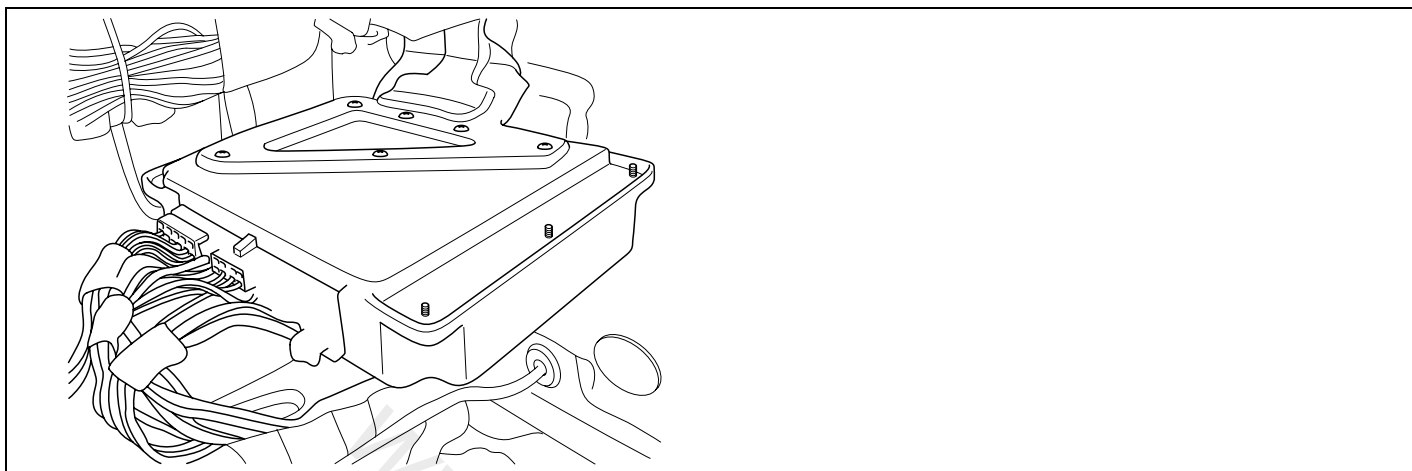**DTC P0863 CAN COMMUNICATION BUS OFF****COMPONENT LOCATION** ED4D6E2D

SBLAT6190L

**GENERAL DESCRIPTION** E88DD748

The TCM can either receive data from the Engine Control Module or ABS control module, or it can send data to the ECM and ABSCM by using CAN communication. The CAN communication is one of the vehicle communication methods, which is now widely used to transfer the vehicle data.

**DTC DESCRIPTION** E0CC7F83

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped on a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

**DTC DETECTING CONDITION** E0E9AE75


Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	<ul style="list-style-type: none"> <li>Open or Short in CAN communication harness</li> <li>Faulty ECM</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>CONTINUOUS</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>No signal transmitted at CAN module</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 2sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>CAN COMMUNICATION IS INHIBITED.</li> </ul>	

## AUTOMATIC TRANSAXLE SYSTEM

AT -183

## SIGNAL WAVEFORM

E5102DC2

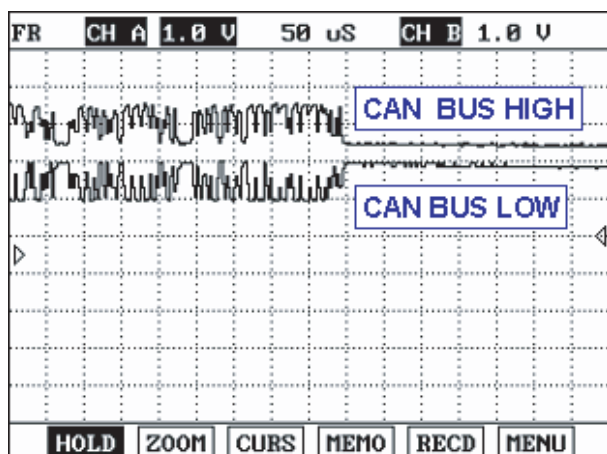

SBLAT6191L

## MONITOR SCANTOOL DATA

E1EBCBD1

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "CAN COMMUNICATION SERVICE DATA (ENGINE RPM, VEHICLE SPEED SENSOR, THROTTLE P. SENSOR)" parameters on the scantool.

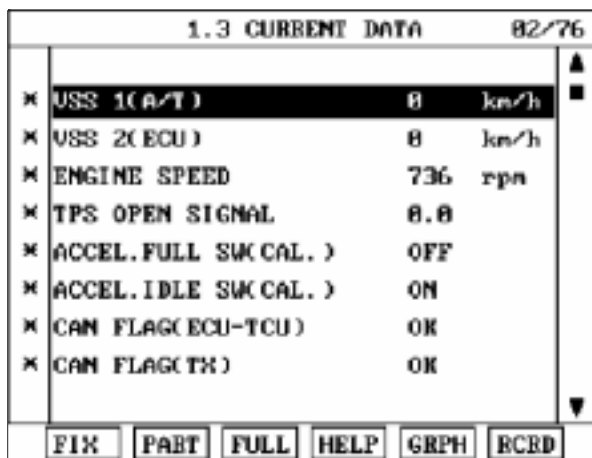


FIG.1)

FIG.1) LOW - SPEED  
 FIG.2) HIGH - SPEED

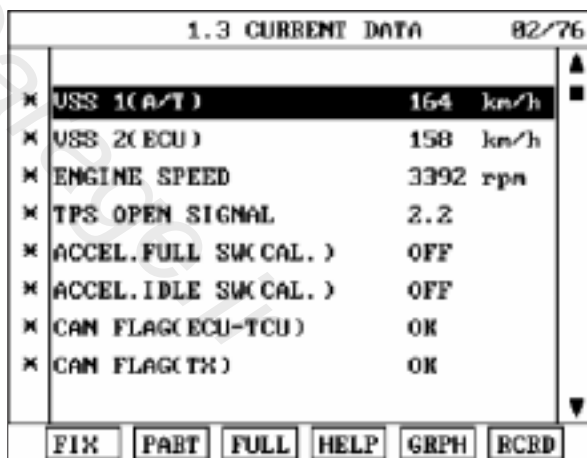


FIG.2)

4. Does "CAN BUS LINE DATA" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared.And go to Verification of Vehicle Repair procedure.

**NO**

Go to "Terminal & connector inspection " procedure.

SBLAT6192L

**TERMINAL & CONNECTOR INSPECTION** E5B271E5

1. Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
2. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
3. Has a problem been found?

**YES**

Repair as necessary and then go to "Verification of vehicle repair" procedure.

**NO**

Go to "Signal circuit Inspection" procedure.


**SIGNAL CIRCUIT INSPECTION** E67FEB95

1. Ignition "OFF".
2. Disconnect the "TCM" connector.
3. Measure resistance between terminal "6" and "7" of the "TCM" harness connector.

---

Specification : approx. 120

---

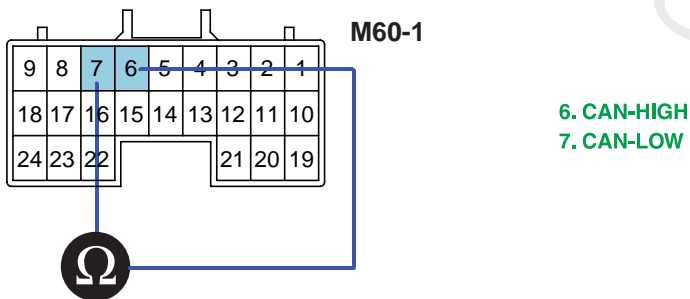

SBLAT6193L

4. Is measured resistance within specifications?

**YES**

Substitute with a known-good PCM/TCM and check for proper operation. If the problem is corrected, replace PCM/TCM as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage of ECM. and then Repair or replace Resistance for CAN communication as necessary and go to "Verification of Vehicle Repair" procedure.



**VERIFICATION OF VEHICLE REPAIR** ECFDF4D0

After a repair, it is essential to verify that the fault has been corrected.

1. Connect scantool and select "Diagnostic Trouble Codes(DTCs)" mode.
2. Using a scantool, Clear DTC.
3. Operate the vehicle within DTC Enable conditions in General information.
4. Are any DTCs present?

**YES**

Go to the applicable troubleshooting procedure.


**NO**

System performing to specification at this time.

www.CarGarage.ir

**DTC P0893 MULTIPLE GEARS ENGAGED**

**COMPONENT LOCATION** E1F1EB2C

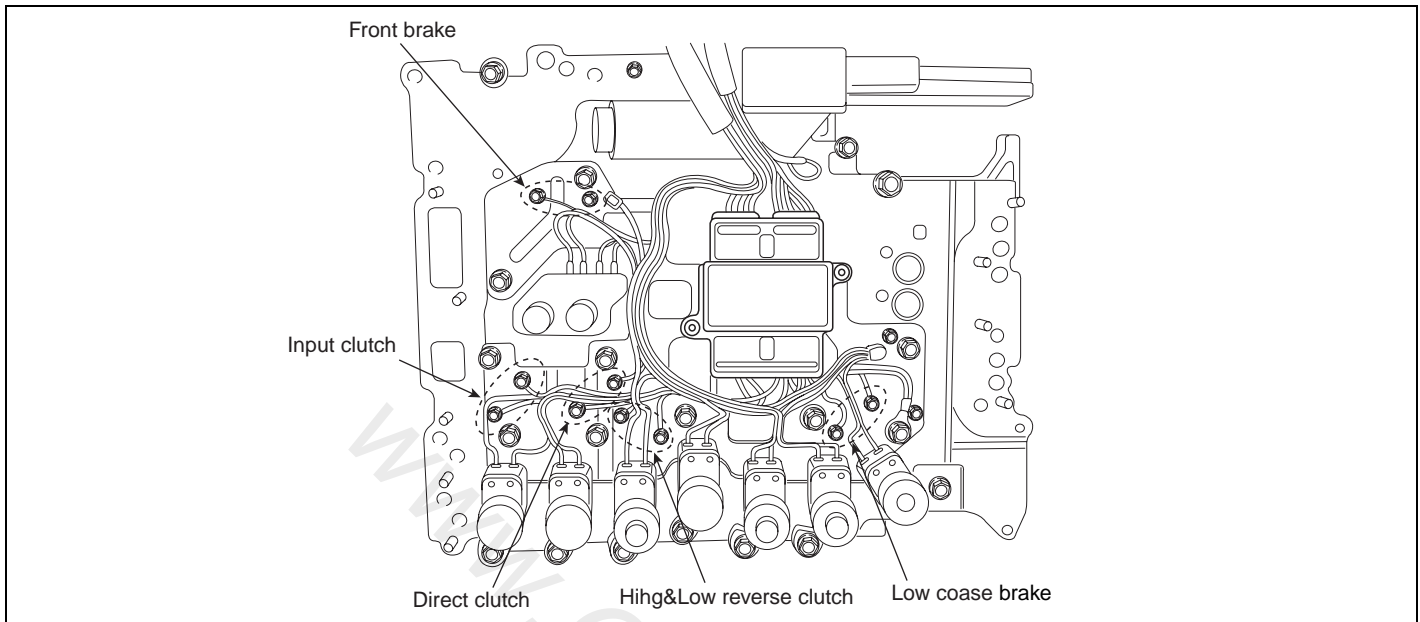

SBLAT6195L

**GENERAL DESCRIPTION** E3227EEB


While monitoring clutch engagement using Oil pressure switch of clutch pressure circuit, if abnormal Inter-lock engagement pattern is detected, 'Fail safe' mode is activated.

**DTC DESCRIPTION** EE2ACF8B



















In case of abnormal shift pattern, the DTC-code is set(Refer to Specification as below).

**DTC DETECTING CONDITION** E1BFACA6

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>• Check voltage range</li> </ul>	<ul style="list-style-type: none"> <li>• Open or short in circuit</li> <li>• Faulty FLUID PRESSURE SWITCH E(H &amp; LR/C)</li> <li>• Faulty SHIFT C/U</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>• Time after gear shifting</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>• Each fluid pressure switch agree with the patterns in fig.3 interlock</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>• More then 2sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>• Locked into 2nd or 4th or 5th gear.</li> </ul>	

**AUTOMATIC TRANSAXLE SYSTEM****AT -187****SPECIFICATION** E0DAB4A0**DETECTING PATTERN AND FAIL SAFE**
 : Don't care

④ Oil pressure ON/OFF

	RANGE	GEAR POSITION	PRESSURE SWITCH					Fail safe
			I/C	H&LR/C	D/C	Fr/B	LC/B	
INTER LOCK PATTERNS	D,4,3,2,1,M	1	●	○		○	○	Fixed at 4th gear
				○	●		○	Fixed at 4th gear
	2,M	2		●	○		○	Fixed at 4th gear
			●		○	○		Fixed at 4th gear
	D,4,3,M	3		○	○		●	Fixed at 2nd gear
			●		○	○		Fixed at 4th gear
	D,4,M	4		○	○		●	Fixed at 2nd gear
			○		○	●		Fixed at 5th gear
	D,M	5	○	○		○	●	Fixed at 2nd gear
			○		●	○		Fixed at 4th gear

SBLAT6196L

**MONITOR SCANTOOL DATA** E3AEE333

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "FLUID PRESSURE SWITCH" parameter on the scantool.
4. Select "D RANGE or SPORTS MODE" and Operate the vehicle.
5. Check "FLUID PRESSURE SWITCH" parameter value changes while driving.

1.3 CURRENT DATA		34/76	1.3 CURRENT DATA		34/76
* CURRENT GEAR POS.	1	GEAR	* CURRENT GEAR POS.	1	GEAR
* SELECTED LEVER RANGE	P, N		* SELECTED LEVER RANGE	R	
* FLUID PRESSURE SW.- 6	ON		* FLUID PRESSURE SW.- 6	ON	
* FLUID PRESSURE SW.- 5	OFF		* FLUID PRESSURE SW.- 5	OFF	
* FLUID PRESSURE SW.- 3	OFF		* FLUID PRESSURE SW.- 3	OFF	
* FLUID PRESSURE SW.- 2	OFF		* FLUID PRESSURE SW.- 2	OFF	
* FLUID PRESSURE SW.- 1	ON		* FLUID PRESSURE SW.- 1	ON	
INHIBITOR SW.- 2			BRAKE SWITCH		
FIX	PART	FULL	HELP	GRPH	BCRD

FIG.1)

FIG.2)

1.3 CURRENT DATA		34/76	1.3 CURRENT DATA		38/76
* CURRENT GEAR POS.	1	GEAR	* CURRENT GEAR POS.	1	GEAR
* SELECTED LEVER RANGE	D		* SELECTED LEVER RANGE	SPORTS	
* FLUID PRESSURE SW.- 6	OFF		* FLUID PRESSURE SW.- 6	ON	
* FLUID PRESSURE SW.- 5	OFF		* FLUID PRESSURE SW.- 5	OFF	
* FLUID PRESSURE SW.- 3	OFF		* FLUID PRESSURE SW.- 3	OFF	
* FLUID PRESSURE SW.- 2	OFF		* FLUID PRESSURE SW.- 2	ON	
* FLUID PRESSURE SW.- 1	ON		* FLUID PRESSURE SW.- 1	ON	
INHIBITOR SW.- 2			BRAKE SWITCH		
FIX	PART	FULL	HELP	GRPH	BCRD

FIG.3)

FIG.4)

1.3 CURRENT DATA		38/76	1.3 CURRENT DATA		38/76
* CURRENT GEAR POS.	2	GEAR	* CURRENT GEAR POS.	3	GEAR
* SELECTED LEVER RANGE	SPORTS		* SELECTED LEVER RANGE	SPORTS	
* FLUID PRESSURE SW.- 6	OFF		* FLUID PRESSURE SW.- 6	ON	
* FLUID PRESSURE SW.- 5	ON		* FLUID PRESSURE SW.- 5	ON	
* FLUID PRESSURE SW.- 3	OFF		* FLUID PRESSURE SW.- 3	OFF	
* FLUID PRESSURE SW.- 2	ON		* FLUID PRESSURE SW.- 2	OFF	
* FLUID PRESSURE SW.- 1	ON		* FLUID PRESSURE SW.- 1	ON	
BRAKE SWITCH			BRAKE SWITCH		
FIX	PART	FULL	HELP	GRPH	BCRD

FIG.5)

FIG.6)

1.3 CURRENT DATA		38/76	1.3 CURRENT DATA		38/76
* CURRENT GEAR POS.	4	GEAR	* CURRENT GEAR POS.	5	GEAR
* SELECTED LEVER RANGE	SPORTS		* SELECTED LEVER RANGE	D	
* FLUID PRESSURE SW.- 6	ON		* FLUID PRESSURE SW.- 6	ON	
* FLUID PRESSURE SW.- 5	ON		* FLUID PRESSURE SW.- 5	OFF	
* FLUID PRESSURE SW.- 3	ON		* FLUID PRESSURE SW.- 3	ON	
* FLUID PRESSURE SW.- 2	OFF		* FLUID PRESSURE SW.- 2	OFF	
* FLUID PRESSURE SW.- 1	OFF		* FLUID PRESSURE SW.- 1	ON	
BRAKE SWITCH			BRAKE SWITCH		
FIX	PART	FULL	HELP	GRPH	BCRD

FIG.7)

FIG.8)

FIG.1) P/N RANGE

FIG.2) R RANGE

FIG.3) 1 GEAR(D RANGE)

FIG.4) 1 GEAR(S- MODE)

FIG.5) 2 GEAR(S- MODE)

FIG.6) 3 GEAR(S- MODE)

FIG.7) 4 GEAR(S- MODE)

FIG.8) 5 GEAR(D RANGE)

**AUTOMATIC TRANSAXLE SYSTEM****AT -189**

6. Does "FLUID PRESSURE SWITCH" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Substitute with a known-good "TRANSMISSION" and check for proper operation. If the problem is corrected, replace "TRANSMISSION" as necessary and go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR** EC5E7FF0

After a repair, it is essential to verify that the fault has been corrected.

1. Connect scantool and select "Diagnostic Trouble Codes(DTCs)" mode.
2. Using a scantool, Clear DTC.
3. Operate the vehicle within DTC Enable conditions in General information.
4. Are any DTCs present?

**YES**


Go to the applicable troubleshooting procedure.

**NO**

System performing to specification at this time.

**DTC U0001 CAN COMMUNICATION MALFUNCTION**

**COMPONENT LOCATION** E0D5B52E

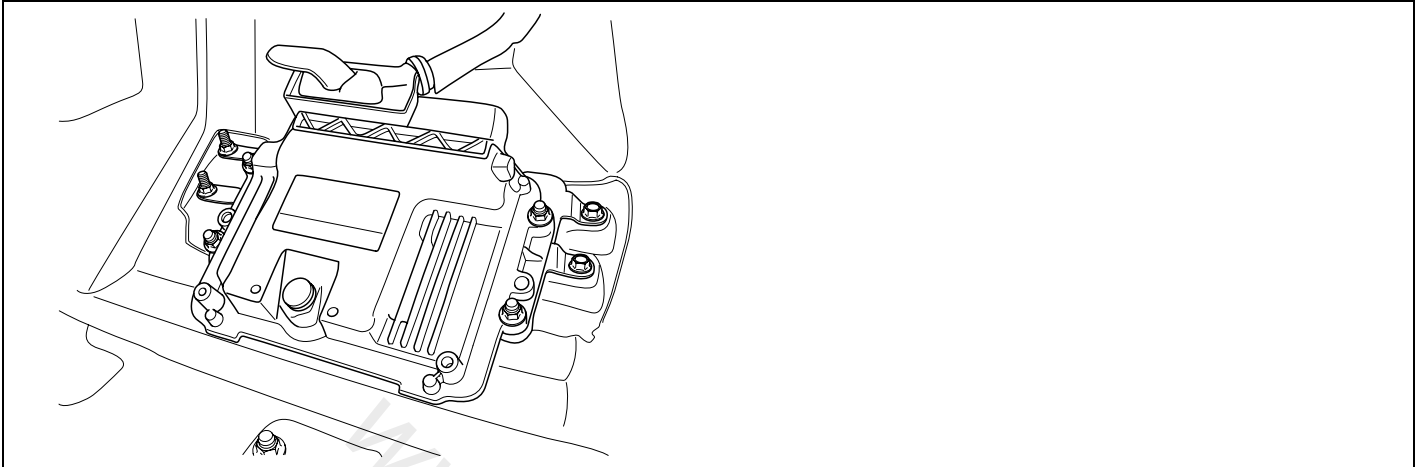

SBLAT6200L

**GENERAL DESCRIPTION** E8655262

The TCM can either receive data from the Engine Control Module or ABS control module, or it can send data to the ECM and ABSCM by using CAN communication. The CAN communication is one of the vehicle communications method, which is now widely used to transfer the vehicle data.

**DTC DESCRIPTION** E38FE1EF


CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped on a vehicle, and each control units shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

**DTC DETECTING CONDITION** ED49260F

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>• Check voltage range</li> </ul>	<ul style="list-style-type: none"> <li>• Open or Short in CAN communication harness</li> <li>• Faulty ECM</li> <li>• Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>• IG "ON"</li> <li>• Battery voltage &gt; 10V</li> <li>• Input speed &gt; 300rpm</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>• BUS OFF</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>• More than 2sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>• Default value</li> </ul>	

**AUTOMATIC TRANSAXLE SYSTEM**

**SIGNAL WAVEFORM** EFAD777

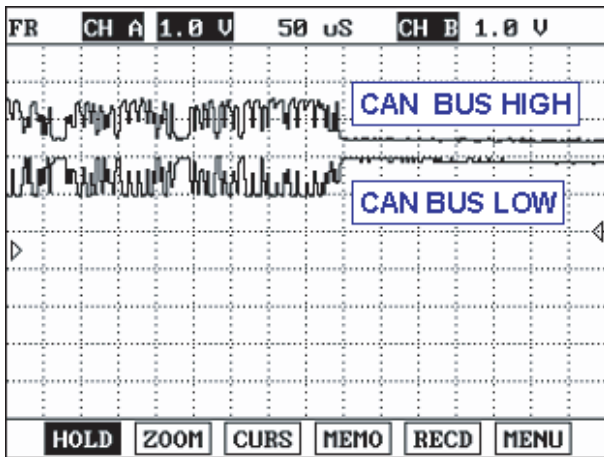

SBLAT6271L

**MONITOR SCANTOOL DATA** EF16E7FF

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "CAN COMMUNICATION SERVICE DATA (ENGINE RPM, VEHICLE SPEED SENSOR, THROTTLE P. SENSOR)" parameters on the scantool.

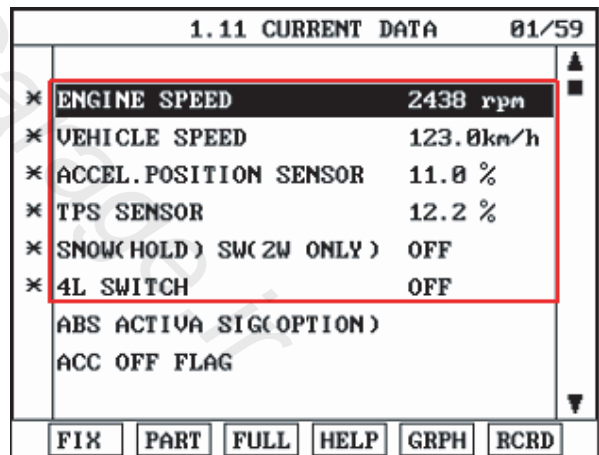
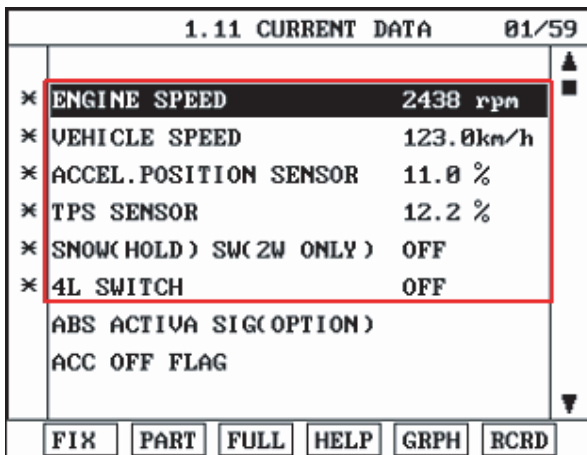


FIG.1) Low-speed  
 FIG.2) High-speed

SBLAT6272L

4. Does "CAN BUS LINE DATA" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Terminal & connector inspection" procedure.

**TERMINAL & CONNECTOR INSPECTION** EF03DCD9

1. Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
2. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
3. Has a problem been found?

**YES**

Repair as necessary and go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Signal circuit inspection" procedure.


**SIGNAL CIRCUIT INSPECTION** EDED579A

1. Ignition "OFF".
2. Disconnect the "TCM" connector.
3. Measure resistance between terminal "65" and "87" of the "TCM" harness connector.

---

Specification : Approx. 120

---

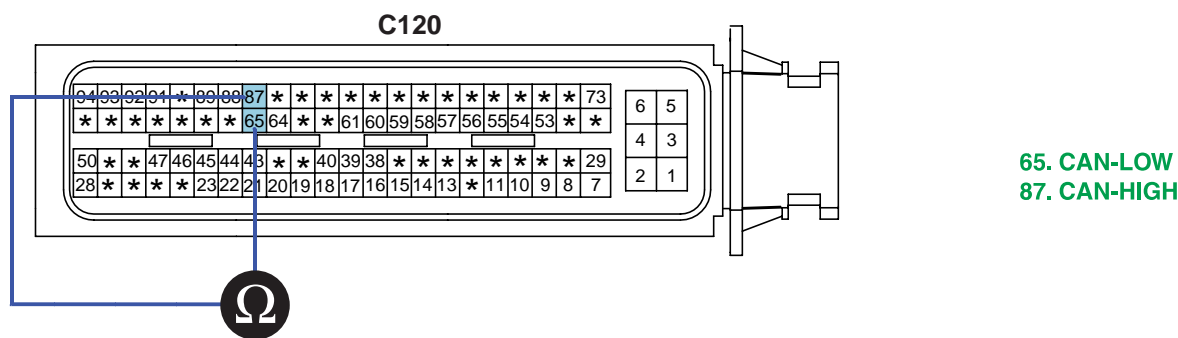



4. Is measured resistance within specifications?

**YES**

Substitute with a known-good PCM/TCM and check for proper operation. If the problem is corrected, replace PCM/TCM as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage of ECM and then Repair or replace Resistance for CAN communication as necessary and go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR** E9827A77

After a repair, it is essential to verify that the fault has been corrected.

1. Connect scantool and select "Diagnostic Trouble Codes(DTCs)" mode.
2. Using a scantool, Clear DTC.
3. Operate the vehicle within DTC Enable conditions in General information.
4. Are any DTCs present?

**YES**

Go to the applicable troubleshooting procedure.

**NO**

System performing to specification at this time.

AT -194

AUTOMATIC TRANSAXLE (A5SR1/2)

**DTC U0100 CAN MI-COM OR CIRCUIT MAL****COMPONENT LOCATION** E7AF6BEA

Refer to DTC U0001.

**GENERAL DESCRIPTION** EB222E33

Refer to DTC U0001.

**DTC DESCRIPTION** E6FAA1E6

Refer to DTC U0001.

**DTC DETECTING CONDITION** EFDF296B

Item	Detecting Condition	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	<ul style="list-style-type: none"> <li>Open or Short in CAN communication harness</li> <li>Faulty ECM</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>IG "ON"</li> <li>Battery voltage &gt; 10V</li> <li>Input speed &gt; 300rpm</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Lost communication</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 2sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Default value</li> </ul>	

**SIGNAL WAVEFORM** E21FF682

Refer to DTC U0001.

**MONITOR SCANTOOL DATA** EB8DD5EC

Refer to DTC U0001.

**TERMINAL & CONNECTOR INSPECTION** E4B893A1

Refer to DTC U0001.

**SIGNAL CIRCUIT INSPECTION** E8922226


Refer to DTC U0001.

**VERIFICATION OF VEHICLE REPAIR** E2474109

Refer to DTC U0001.


AUTOMATIC TRANSAXLE

COMPONENTS E7EE672D

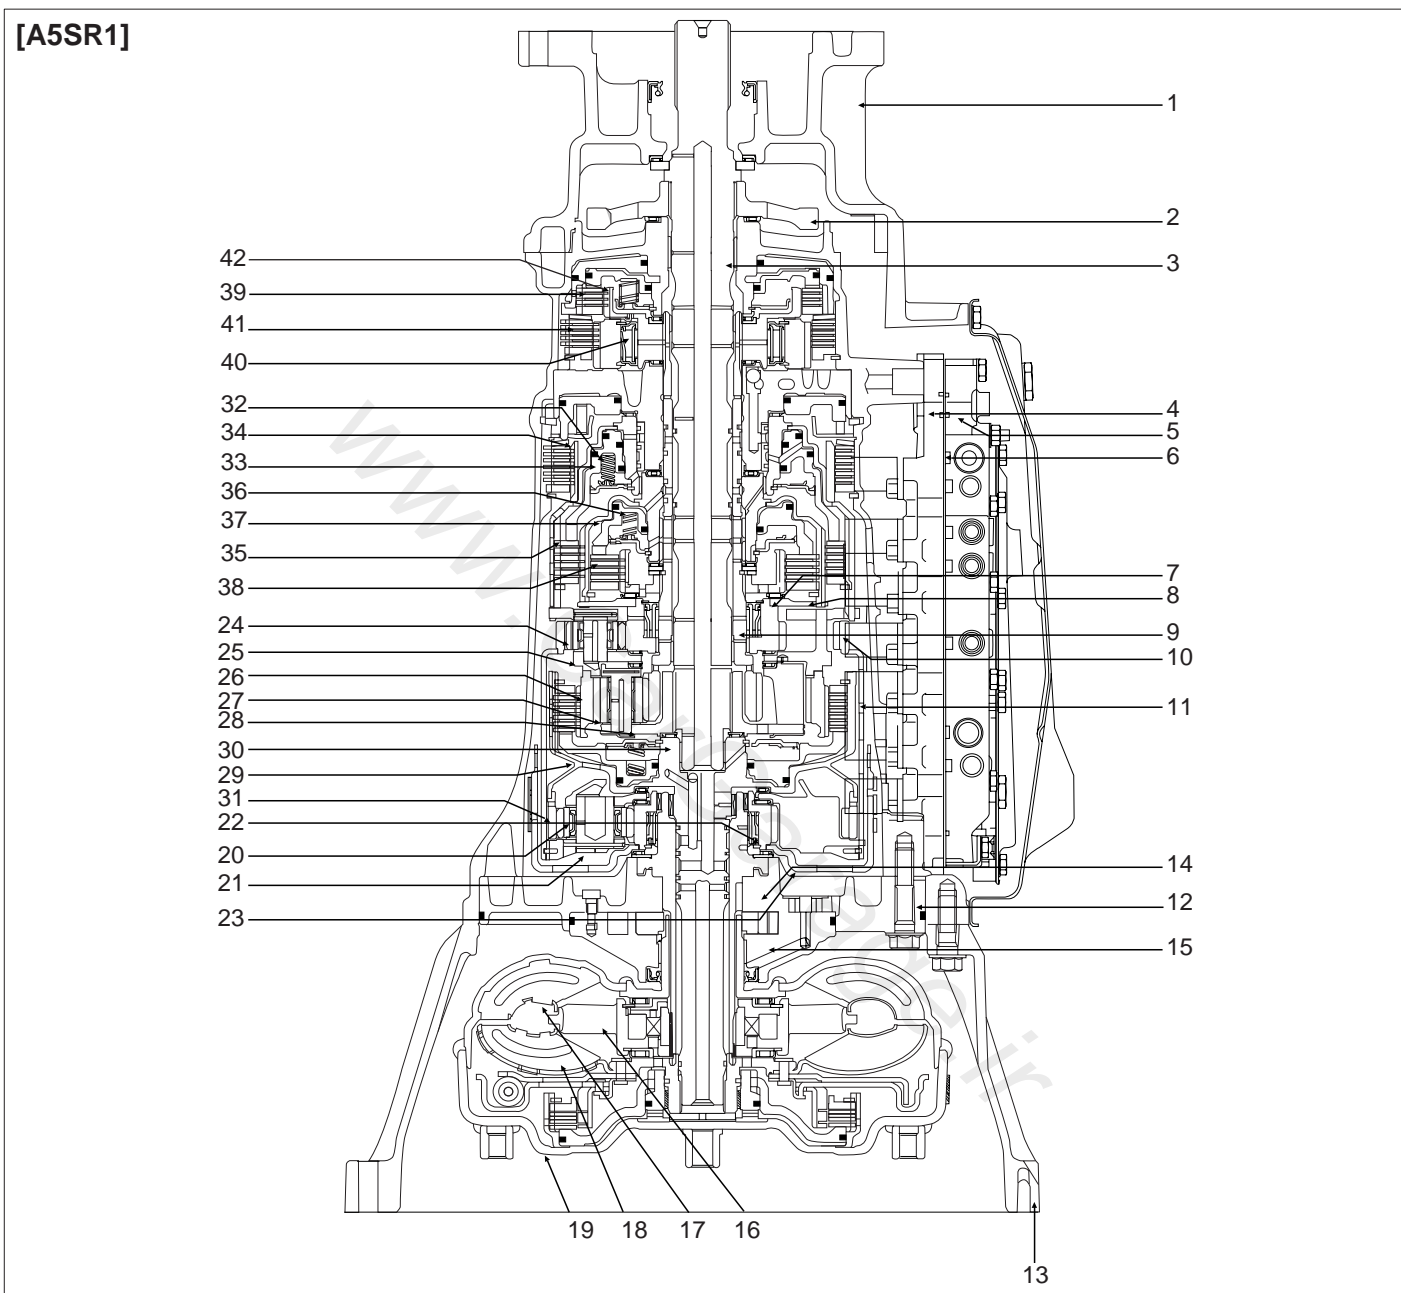

- |                                 |                                     |   |
|---------------------------------|-------------------------------------|---|
| 1. Adapter case (4WD)           | 15. Oil pump housing                | 29. Input clutch drum                       |
| 2. Parking gear                 | 16. Stator                          | 30. Input shaft                             |
| 3. Output shaft                 | 17. Impeller assembly               | 31. Front annulus gear                      |
| 4. Control valve upper body     | 18. Turbine & lockup assembly       | 32. Direct clutch return spring             |
| 5. Control valve lower body     | 19. Torque converter cover assembly | 33. Direct clutch piston                    |
| 6. Separator plate assembly     | 20. Front pinion gear               | 34. Reverse brake hub                       |
| 7. Rear sun gear                | 21. Front planetary carrier         | 35. Direct clutch assembly                  |
| 8. Rear sun plate               | 22. Front sun gear                  | 36. High & low reverse clutch return spring |
| 9. Middle sun gear assembly     | 23. Front brake drum                | 37. High & low reverse clutch piston        |
| 10. Rear annulus gear assembly  | 24. Rear pinion gear                | 38. High & low reverse clutch assembly      |
| 11. Rear annulus cell           | 25. Rear planetary carrier plate    | 39. Low coast brake clutch assembly         |
| 12. Automatic transmission case | 26. Middle annulus gear             | 40. Forward one-way clutch                  |
| 13. Converter housing           | 27. Middle pinion gear              | 41. Forward brake clutch assembly           |
| 14. Oil pump cover              | 28. Middle planetary carrier        | 42. Low coast brake hub                     |

[A5SR2]

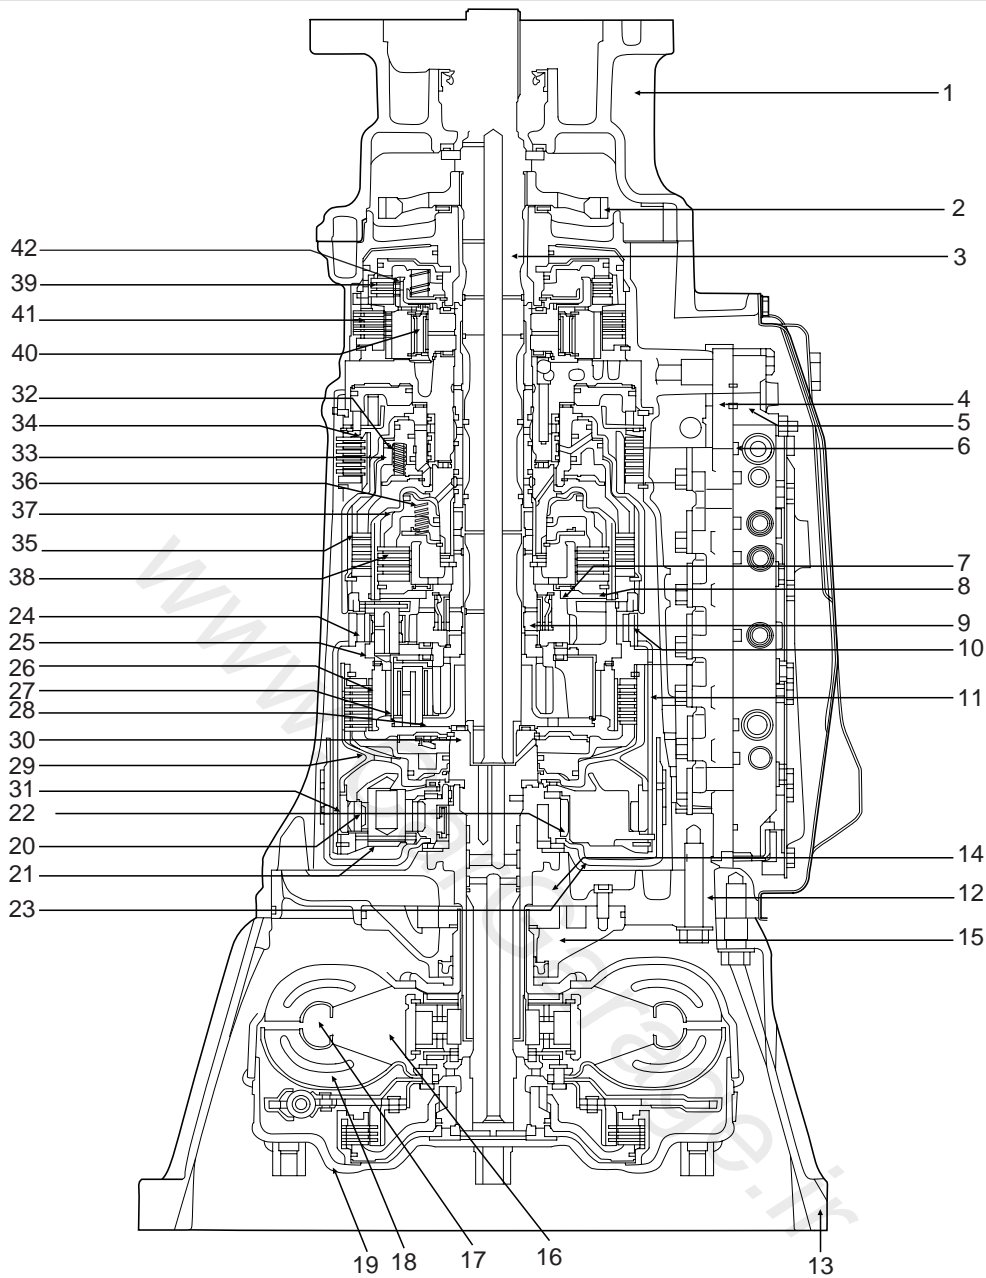


- |                                 |                                     |   |
|---------------------------------|-------------------------------------|---|
| 1. Adapter case (4WD)           | 15. Oil pump housing                | 29. Input clutch drum                       |
| 2. Parking gear                 | 16. Stator                          | 30. Input shaft                             |
| 3. Output shaft                 | 17. Impeller assembly               | 31. Front annulus gear                      |
| 4. Control valve upper body     | 18. Turbine & lockup assembly       | 32. Direct clutch return spring             |
| 5. Control valve lower body     | 19. Torque converter cover assembly | 33. Direct clutch piston                    |
| 6. Separator plate assembly     | 20. Front pinion gear               | 34. Reverse brake hub                       |
| 7. Rear sun gear                | 21. Front planetary carrier         | 35. Direct clutch assembly                  |
| 8. Rear sun plate               | 22. Front sun gear                  | 36. High & low reverse clutch return spring |
| 9. Middle sun gear assembly     | 23. Front brake drum                | 37. High & low reverse clutch piston        |
| 10. Rear annulus gear assembly  | 24. Rear pinion gear                | 38. High & low reverse clutch assembly      |
| 11. Rear annulus cell           | 25. Rear planetary carrier plate    | 39. Low coast brake clutch assembly         |
| 12. Automatic transmission case | 26. Middle annulus gear             | 40. Forward one-way clutch                  |
| 13. Converter housing           | 27. Middle pinion gear              | 41. Forward brake clutch assembly           |
| 14. Oil pump cover              | 28. Middle planetary carrier        | 42. Low coast brake hub                     |

## AUTOMATIC TRANSAXLE SYSTEM


### REMOVAL E57E1F3E

1. Remove the battery (-) terminal(A).

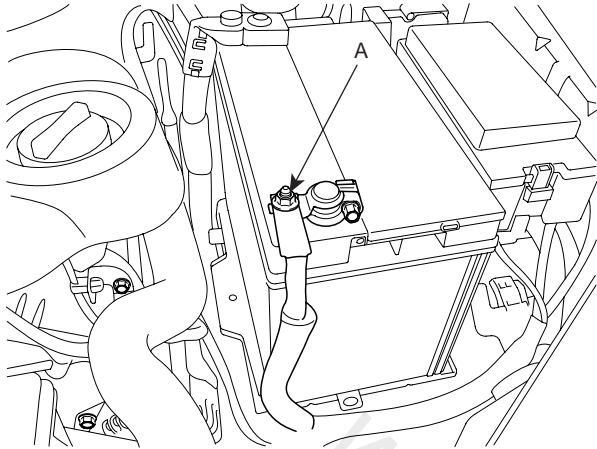


SBLAT6001L

2. Remove the engine cover(A).

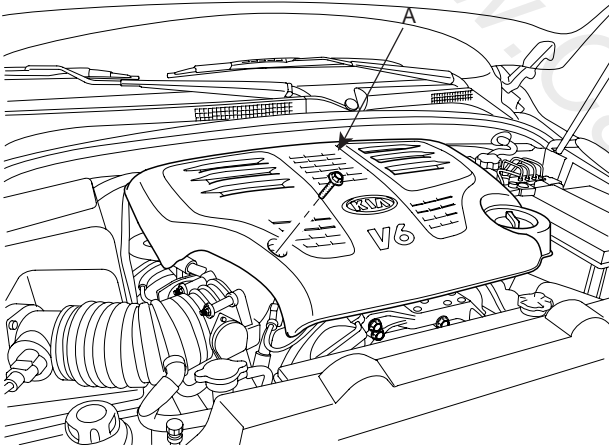


SBLAT6004L

3. Remove the O2 sensor connectors(A).

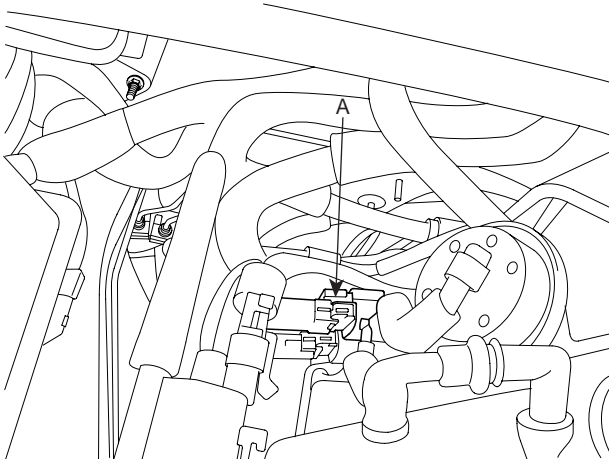


SBLAT6005L

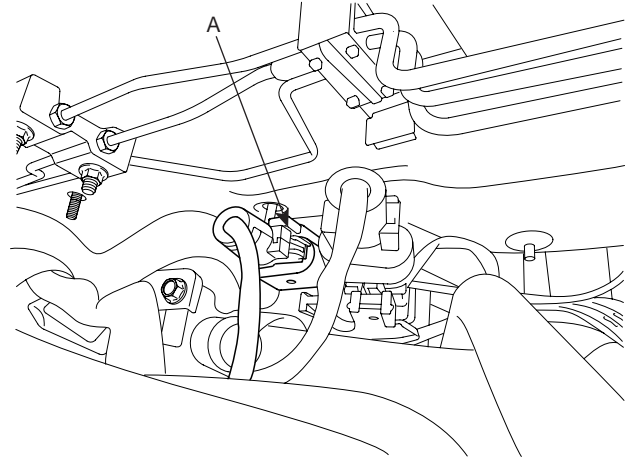


SBLAT6006L

4. Remove the under cover(A).

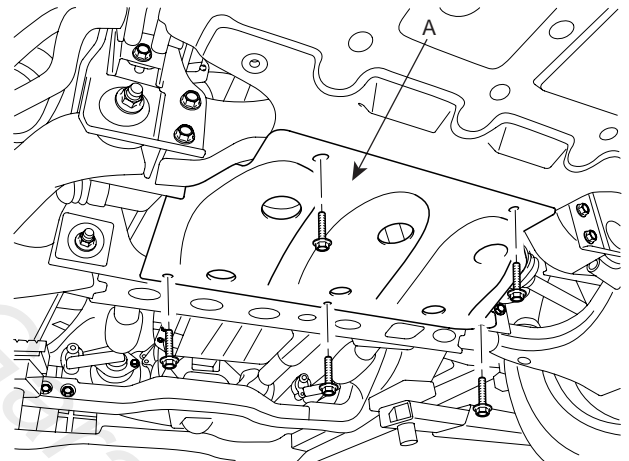


SBLAT6002L

5. Drain the automatic transmission fluid.

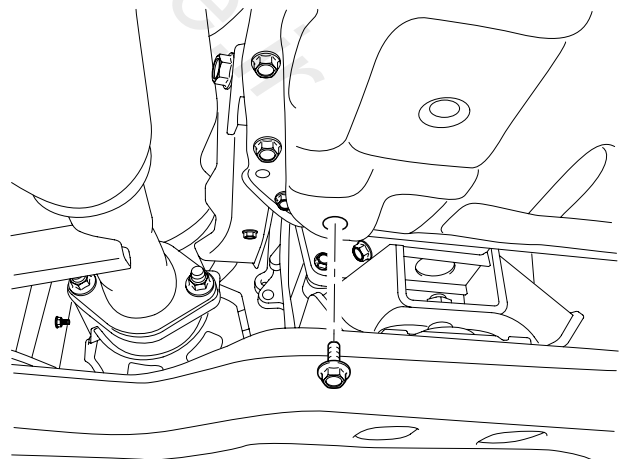


SBLAT6003L

6. Remove the front propeller shaft(A). (4WD)

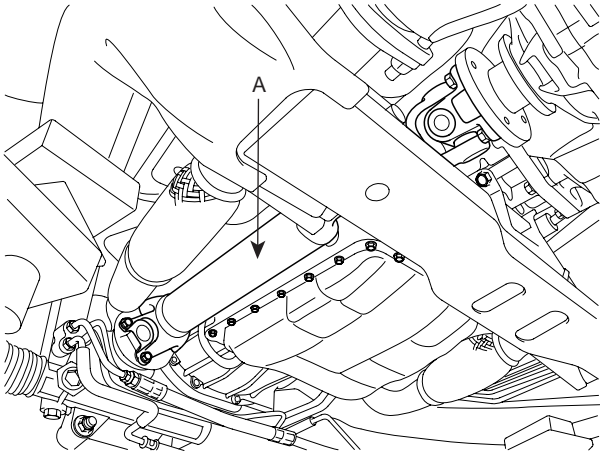


SBLAT6007L

9. Remove the transmission oil level gauge(A).

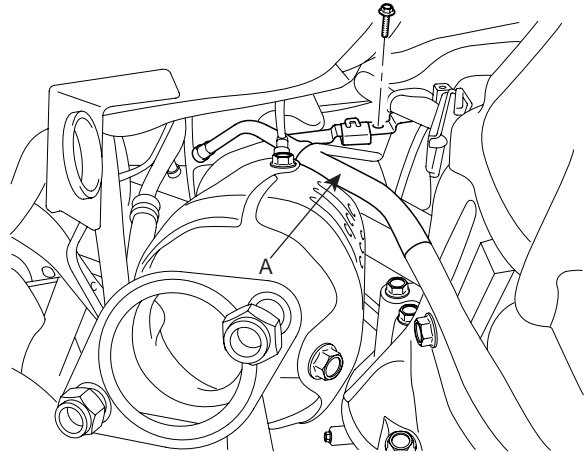


SBLAT6013L

7. Remove the front muffler(A) and the heat protector.

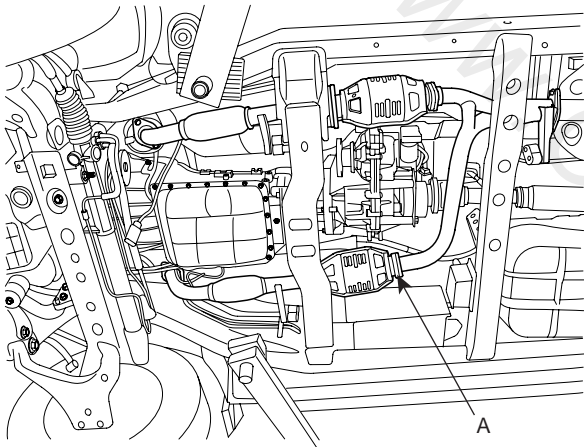


SBLAT6008L

10. Remove the shift cable cover(A).

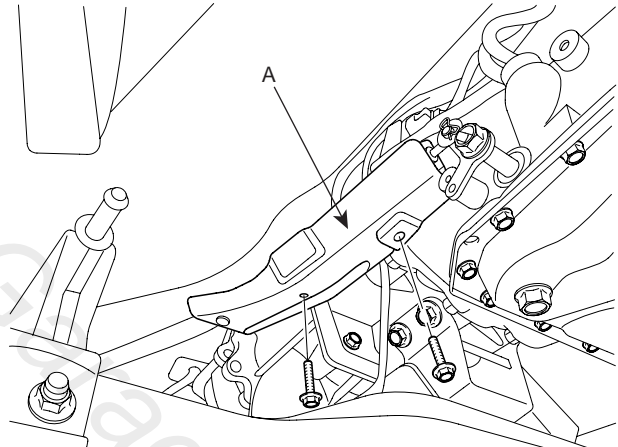


SBLAT6010L

8. Remove the rear propeller shaft(A).

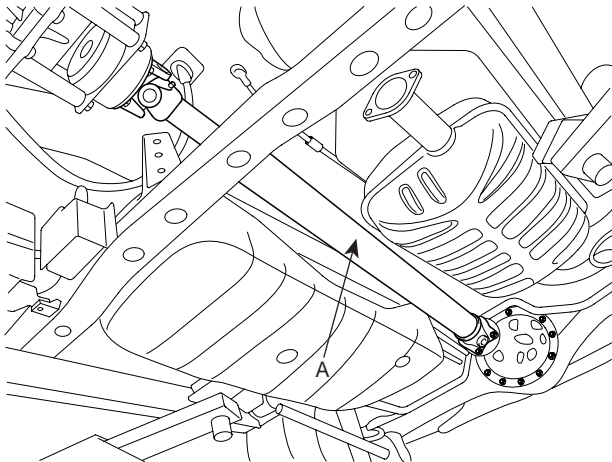

SBLAT6009L


11. Remove the shift cable(A).

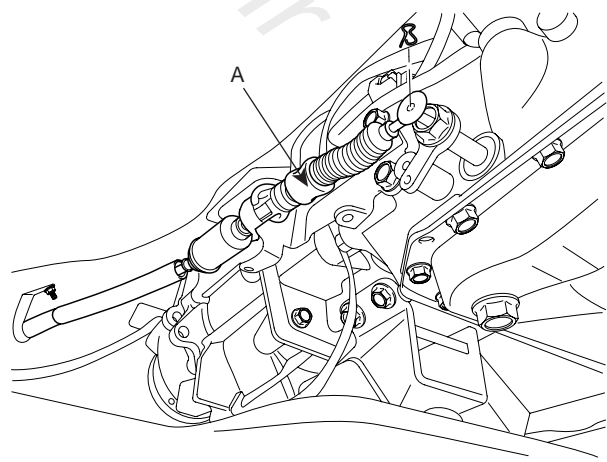

SBLAT6011L


**AUTOMATIC TRANSAXLE SYSTEM**

12. Remove the oil cooler pipes(A).

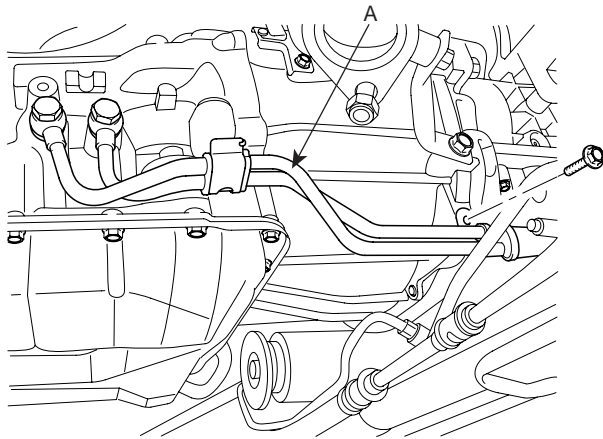


SBLAT6012L

15. Remove the transmission lower mounting bolts(A).

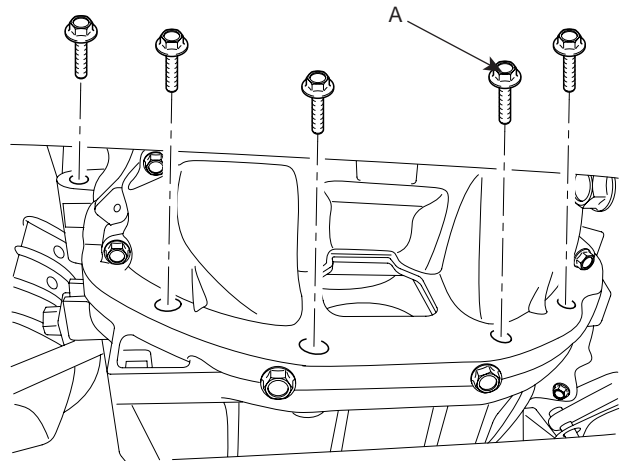


SBLAT6016L

13. Remove the drive plate cover(A).

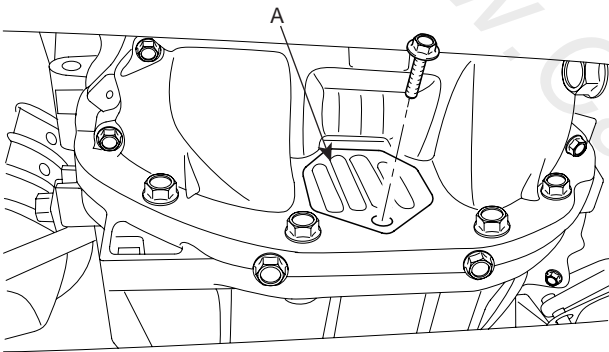

SBLAT6014L

16. Remove the starter motor mounting bolts(A) and the other bolts(B).

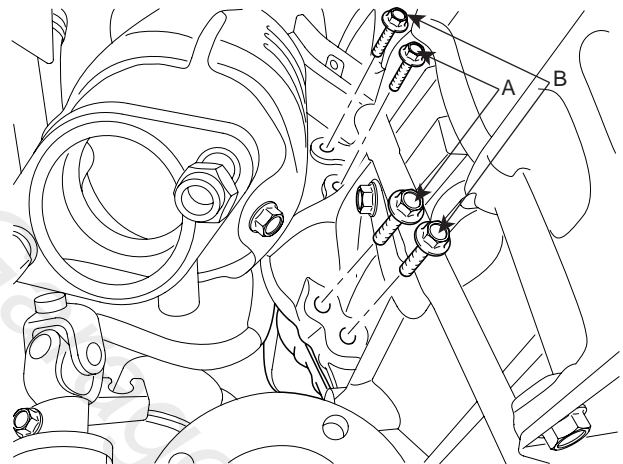


SBLAT6017L

14. Remove the drive plate bolts (A)


**NOTE**

Remove the bolts(A-6ea) rotating the crankshaft clockwise.

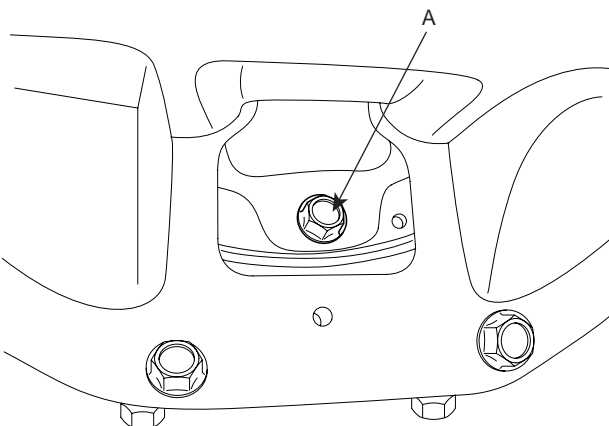

SBLAT6015L

17. Remove the mounting bolts(A) supporting the transmission with a jack.

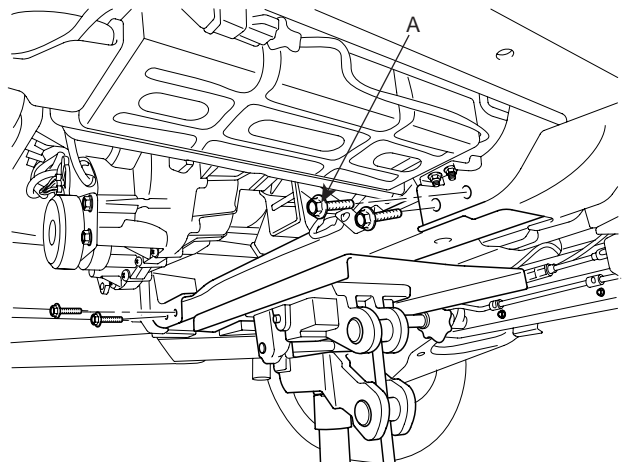


SBLAT6018L

**AT -200**


**AUTOMATIC TRANSAXLE (A5SR1/2)**

18. Lower the jack slightly to make easy to remove the related connector and bolts on the upper part of transmission.

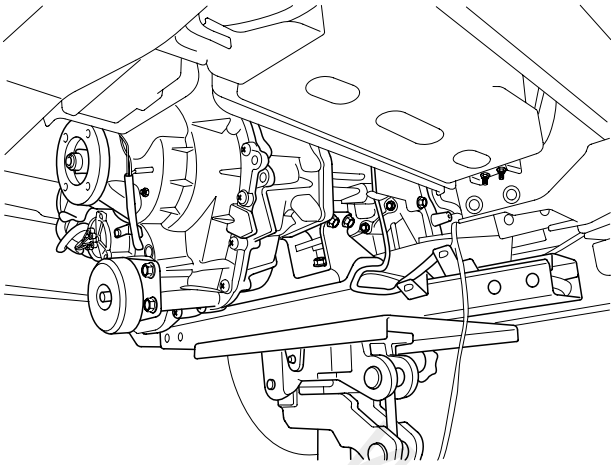


SBLAT6019L

19. Disconnect the transmission wire harness connectors.

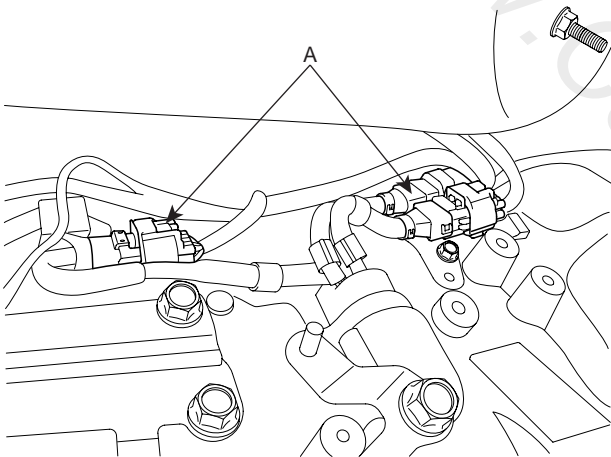


SBLAT6024L

20. Remove the vehicle speed sensor connector(A).

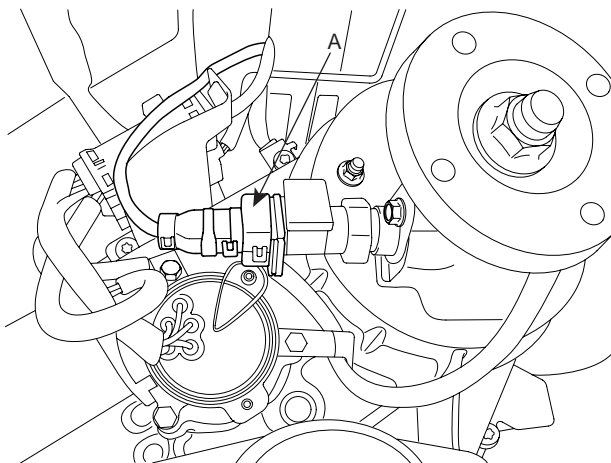


SBLAT6022L

21. Remove the transfer case connectors(A). (4WD)

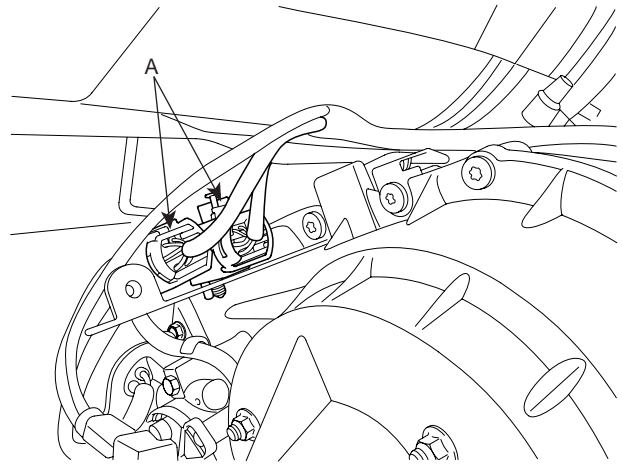


SBLAT6023L

22. Remove the transmission upper mounting bolt(A).

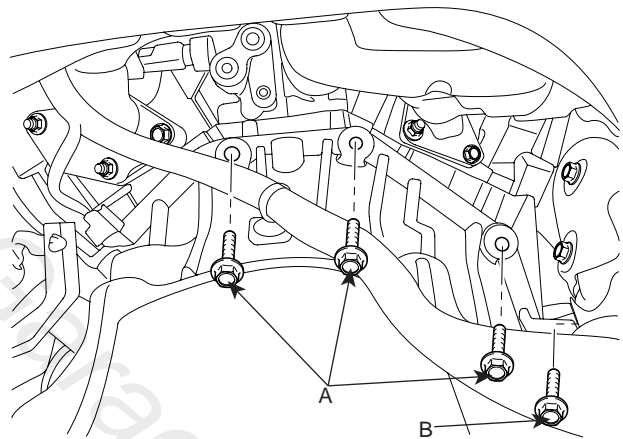

SBLAT6020L

23. Remove the transmission assembly(A).

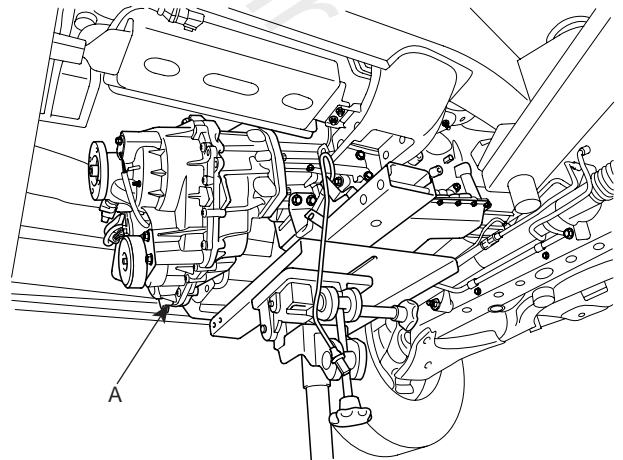

SBLAT6021L




## AUTOMATIC TRANSAXLE SYSTEM

AT -201

### INSTALLATION EFDF6CD2

1. Lowering the vehicle or lifting up a jack, install the transmission assembly(A/B).

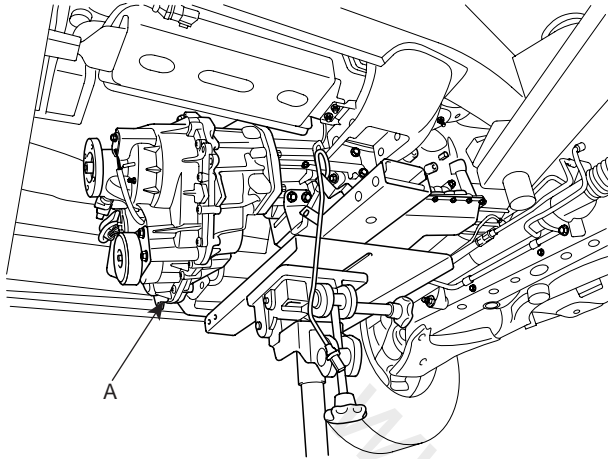


SBLAT6021L

2. Tighten the transmission mounting bolts(A).

#### TORQUE


A : 63.7~83.3Nm (6.5~8.5kgf.m, 47~61.4lb-ft)

B : 78.4~98Nm (8.0~10kgf.m, 57.8~72.3lb-ft)

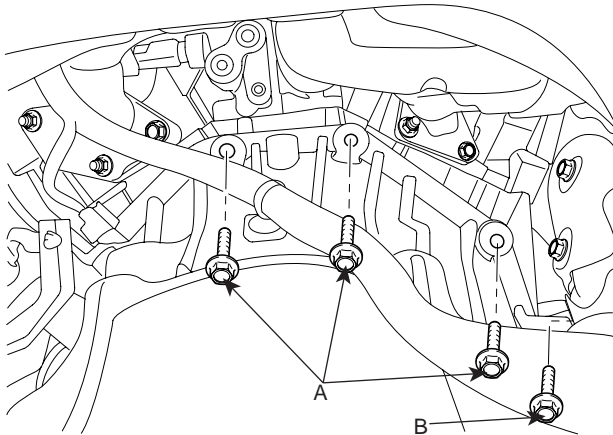


SBLAT6020L

3. Install the transfer case connectors(A). (4WD)

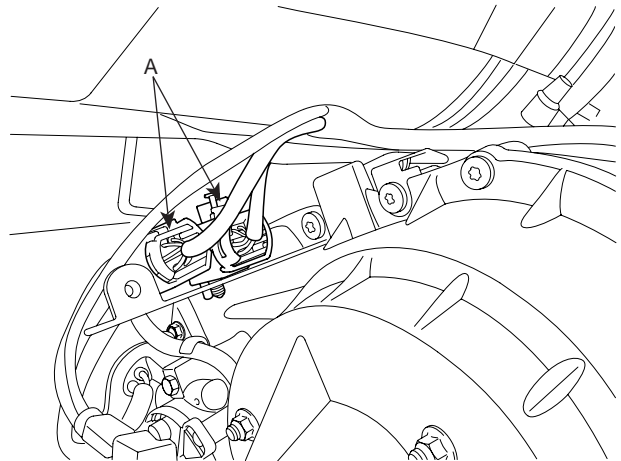


SBLAT6023L

4. Install the vehicle speed sensor connector(A).

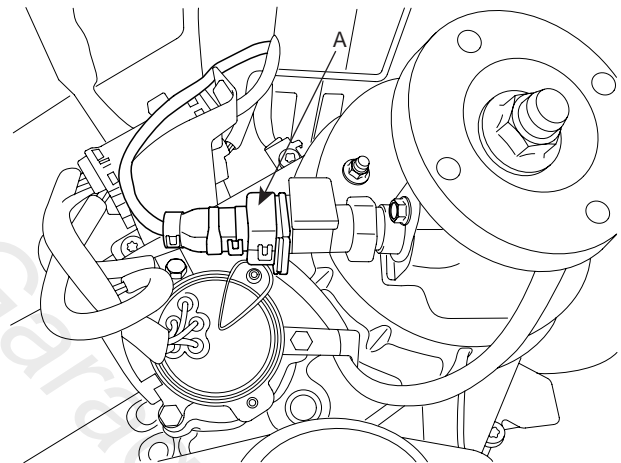

SBLAT6022L

5. Connect the transmission wire harness connectors(A).

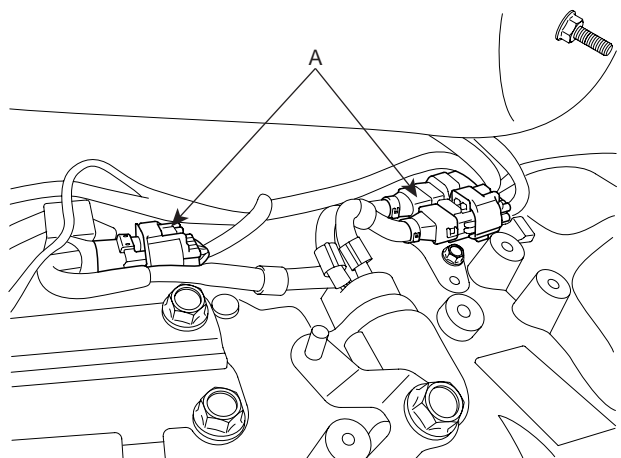


SBLAT6024L

**AT -202**


**AUTOMATIC TRANSAXLE (A5SR1/2)**

6. Install the crossmember mounting bolts(A).

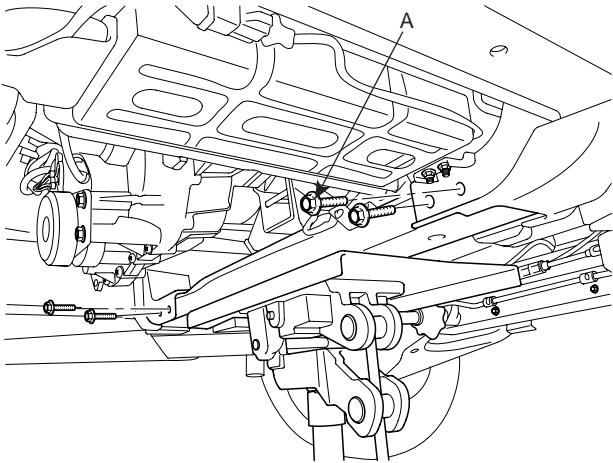

SBLAT6018L

8. Tighten the transaxle lower mounting bolts(A).

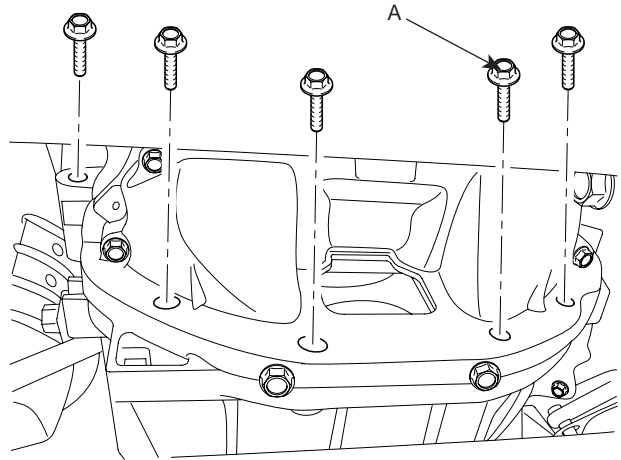

SBLAT6016L

7. Install the starter motor mounting bolts(A) and the other bolts(B).

**TORQUE**


A : 50~65Nm (5.0~6.5kgf.m, 36.2~47.0lb-ft)

B : 34.3~46Nm (3.5~4.7kgf.m, 25.3~33.9 lb-ft)

9. Install the drive plate bolts (A) by turning the timing gear.

**TORQUE :**


34.3~41.1Nm (3.5~4.2kgf.m, 25.3~30.3lb-ft)

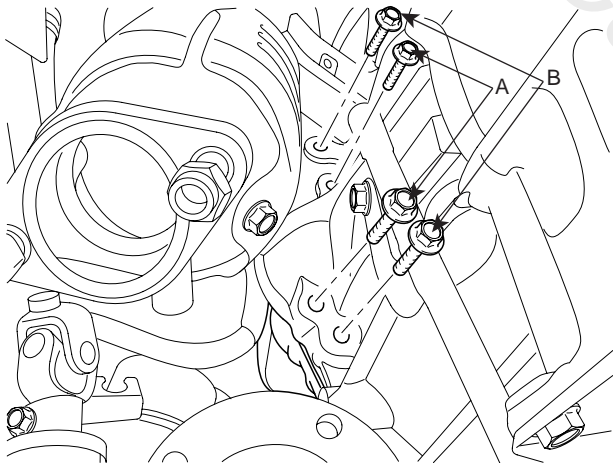

SBLAT6017L

**NOTE**


Install the bolts(A-6ea) rotating the crankshaft clockwise.

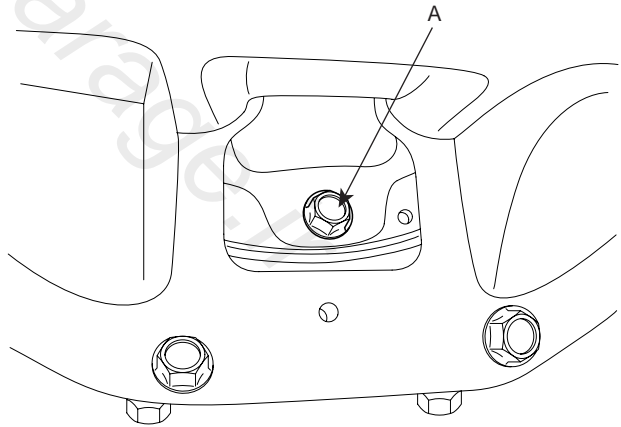

SBLAT6015L


**AUTOMATIC TRANSAXLE SYSTEM**

10. Install the drive plate cover(A).

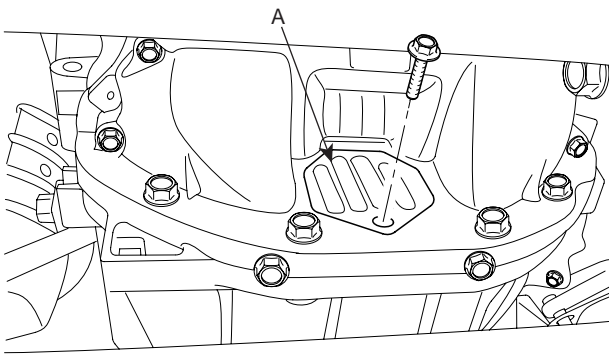


SBLAT6014L

13. Install the shift cable cover(A).

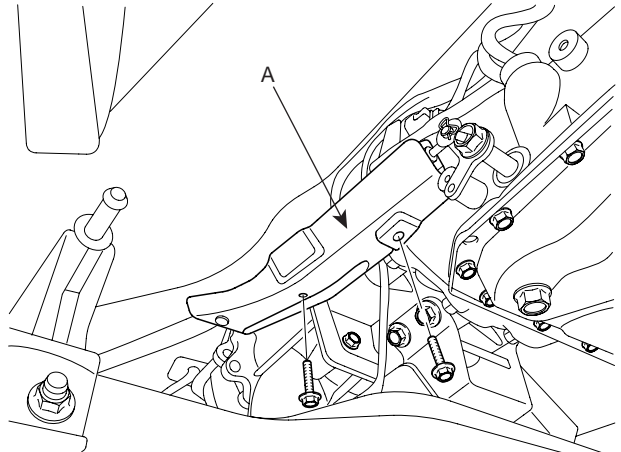


SBLAT6010L

11. Install the oil cooler pipes(A).

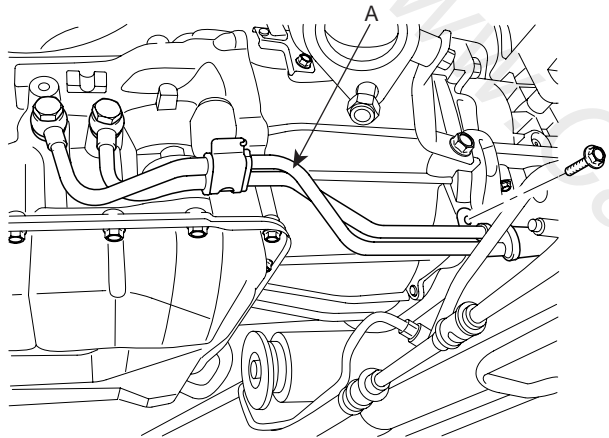


SBLAT6012L

14. Install the transmission oil level gauge(A).

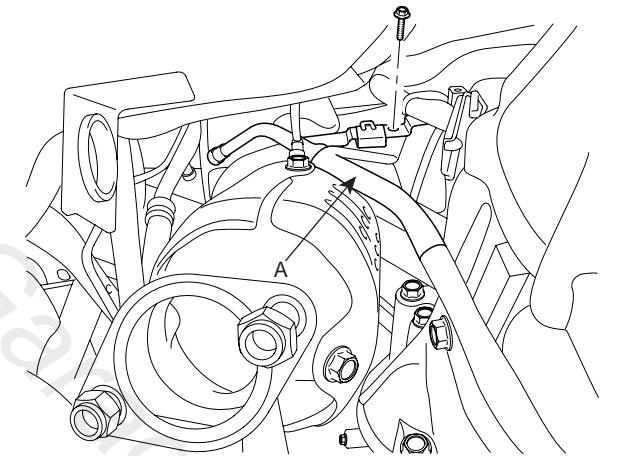


SBLAT6013L

12. Install the shift cable(A).

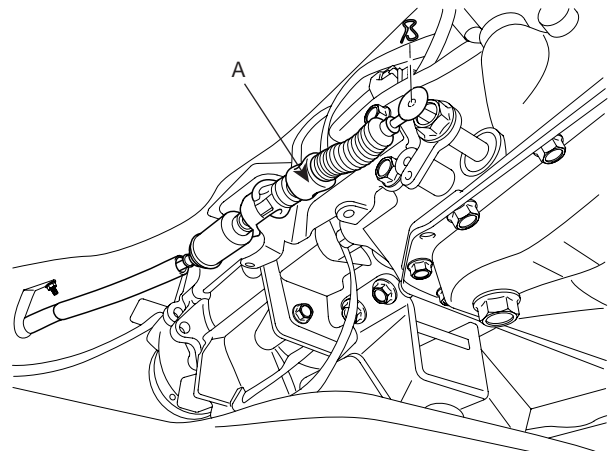

SBLAT6011L

15. Install the rear propeller shaft(A).

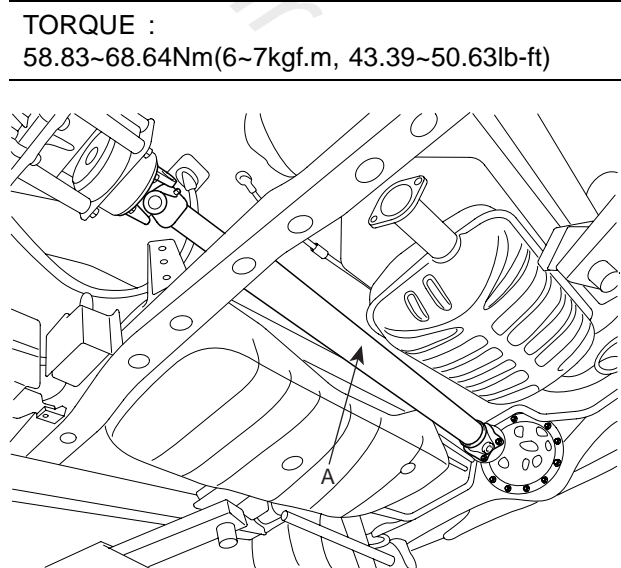

SBLAT6009L

---


**TORQUE :**  
58.83~68.64Nm(6~7kgf.m, 43.39~50.63lb-ft)

---

**AT -204**


**AUTOMATIC TRANSAXLE (A5SR1/2)**

16. Install the front muffler(A) and the heat protector.

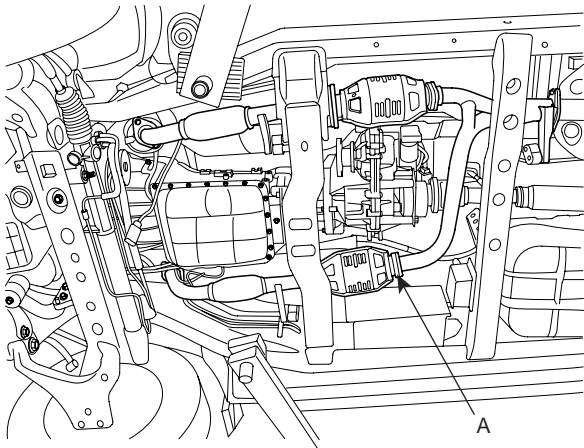

SBLAT6008L

19. Install the under cover(A).

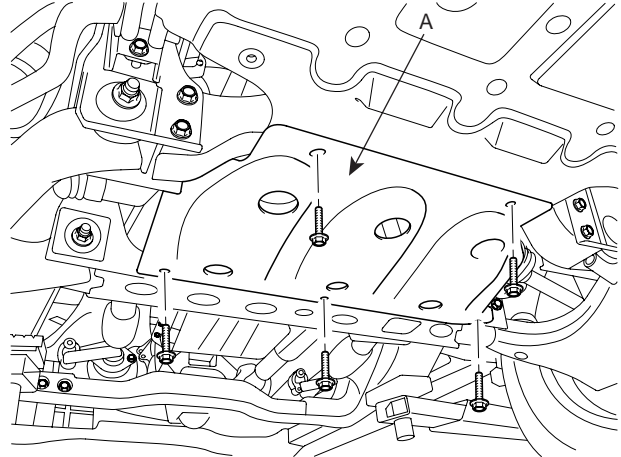


SBLAT6002L

17. Install the front propeller shaft(A). (4WD)

---

**TORQUE :**  
58.83~68.64Nm(6~7kgf.m, 43.39~50.63lb-ft)


---

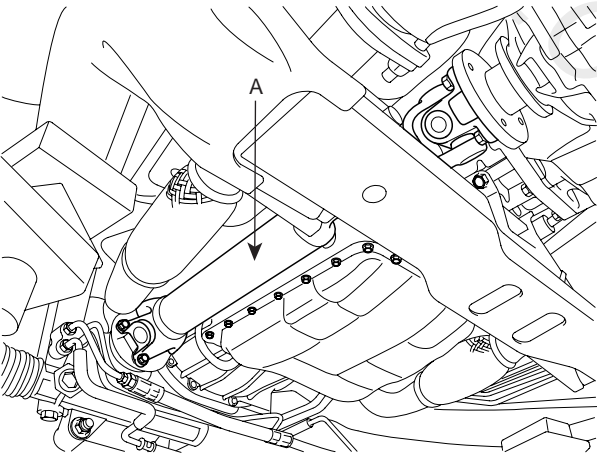


SBLAT6007L

18. Refill the transmission fluid. (see 'Service adjustment procedure')

20. Install the O2 sensor connectors(A).

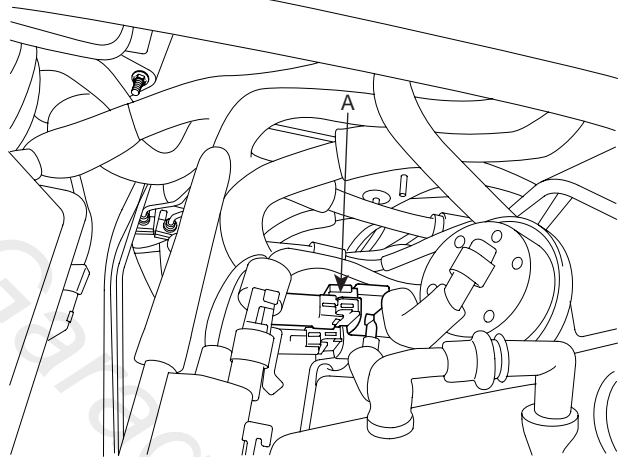


SBLAT6005L

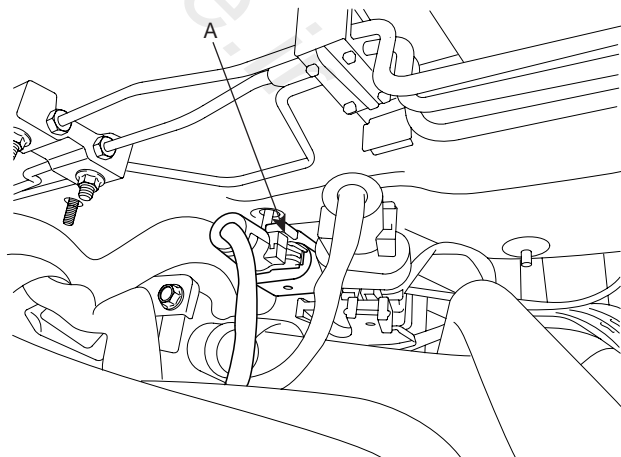

SBLAT6006L


## AUTOMATIC TRANSAXLE SYSTEM

21. Install the engine cover(A).

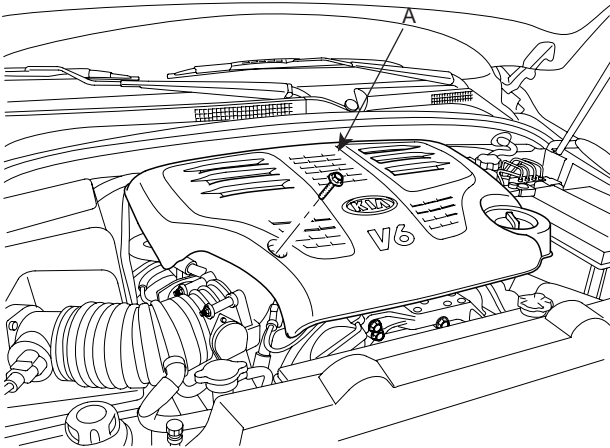

SBLAT6004L

22. Install the battery (-) terminal(A).

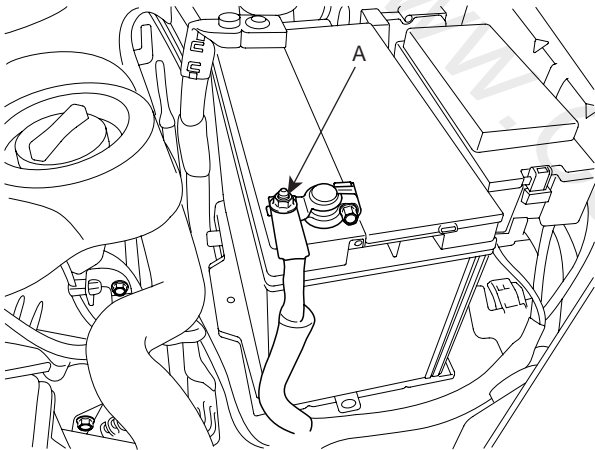

SBLAT6001L

23. Refill the transmission fluid. (See 'service adjustment procedure')